
Installation Instructions





Kit Contents PRN014575


- (A) 1 x Exhaust Bracket
- B 1 x Header Bracket
- © 1 x Inner Grill
- ① 1 x Main Body
- © 2 x Top Hat Spacer
- F 2 x GrommetsG 3 x Special Screw Mounts
- (H) 3 x M6 Black Washer
- 1 4 x M4 Flange Nuts
- ① 6 x M6 x 12mm Black Button Head Bolts

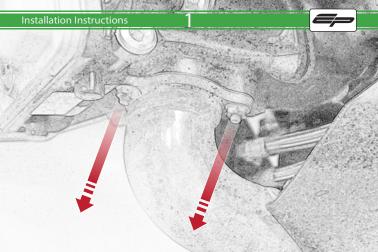





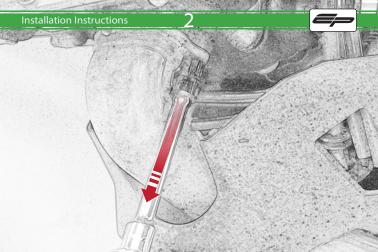


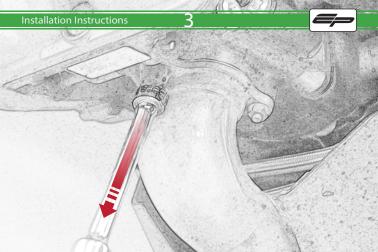


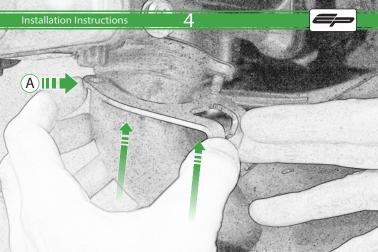

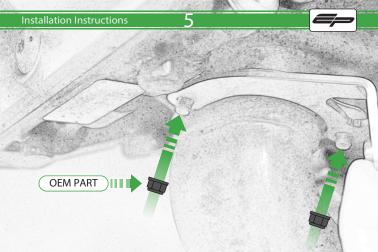


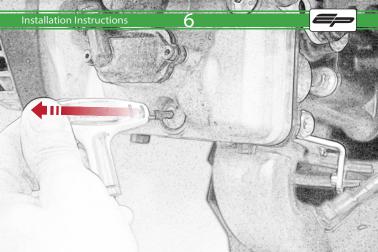


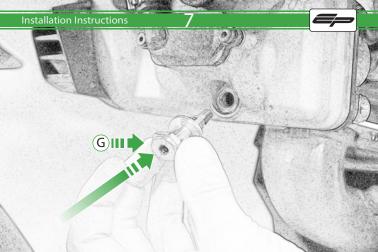


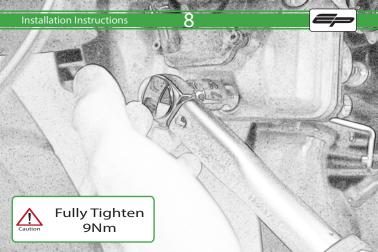





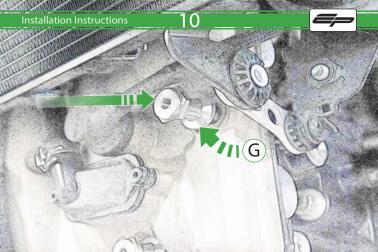


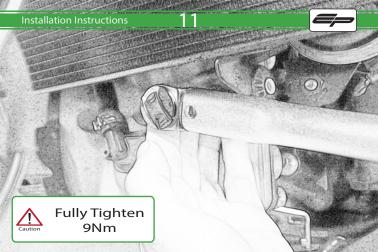


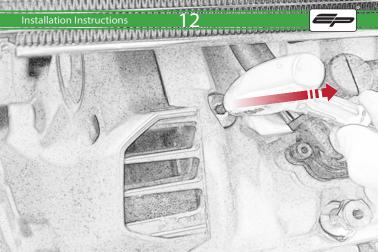


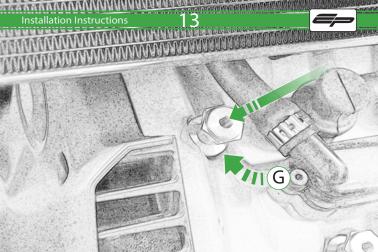


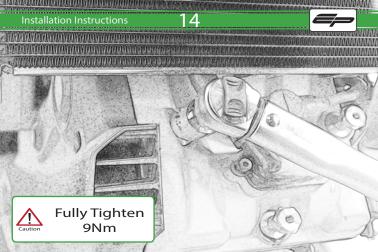


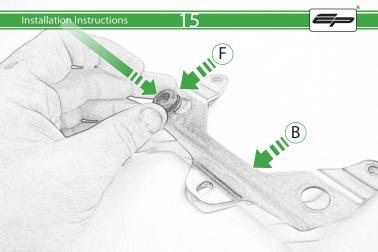


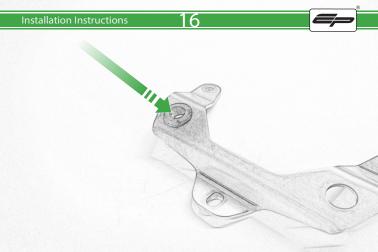


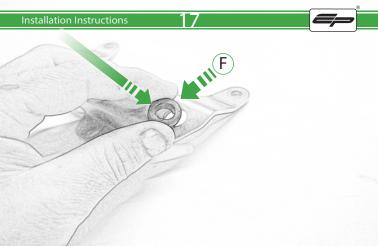

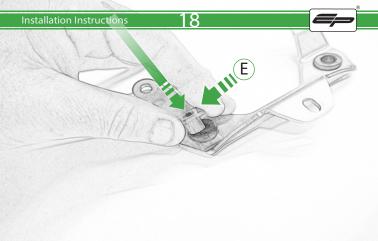

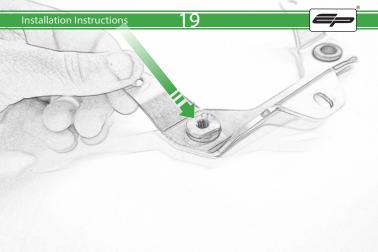


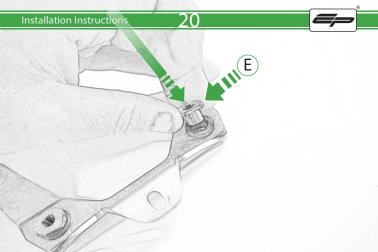


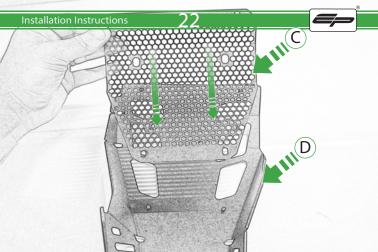







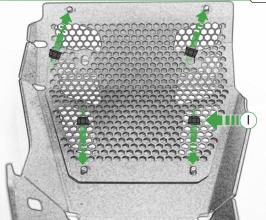


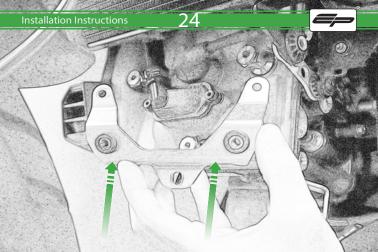


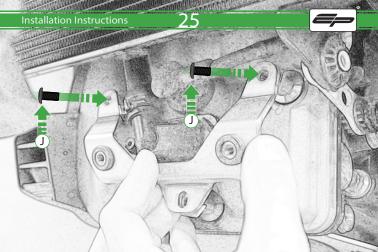


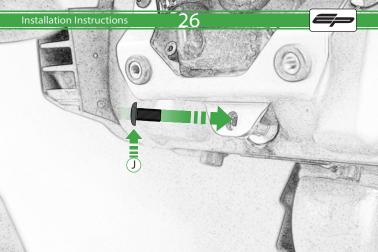



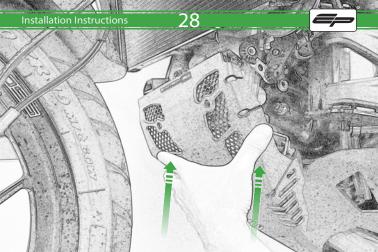

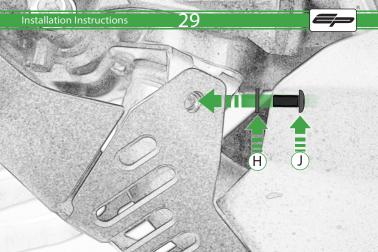

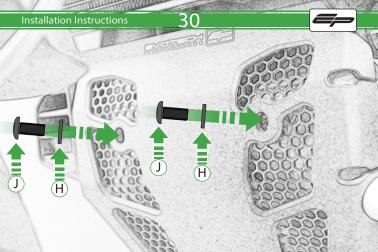





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

