


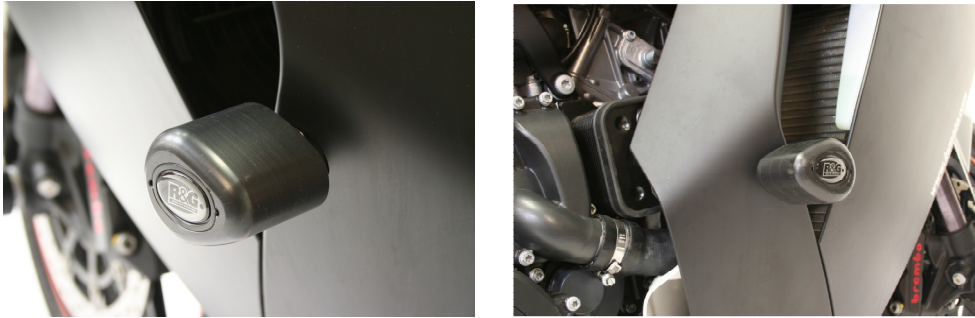

FITTING INSTRUCTIONS FOR CP0256BL CRASH PROTECTORS KTM RC8R 2008-



TOWARDS REAR
OF BIKE



TOWARDS FRONT
OF BIKE



Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

You will need the following tools to complete this job.

Tool kit from bike for fairing screws and (torx type socket).

Set off metric allen keys.

Socket set to include 17mm A/F socket/wrench and allen/torx sockets.

Torque wrench to be used at 40NM.

28mm hole-saw with pilot drill.


Drill.

Sharp knife or deburring tool.



Left-hand side (as you sit on bike)

- Remove left-hand side fairing.
- Remove the engine bolt arrowed below. DO NOT REMOVE THE SPACER.

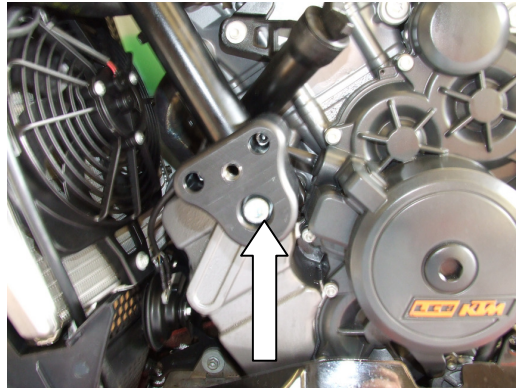

- Offer up the metal block with L-H engraved on the flat (top) surface into position shown above left, the spigot will sit in the recess where the OEM bolt used to be and the semi-circular cut-out will fit over the frame.
- Fit the longer of the two M10 CAP HEAD BOLTS with washer through metal block into threaded engine mount and lightly tighten.
- Slip one of the half round clamps behind frame and under wiring to line up with smaller holes in metal block, using two of the longer M6 cap head bolts with washers through the metal block to secure and tighten clamp.
- Tighten larger cap head bolt.
- Screw marking tool (threaded bar with pointed end) into threaded hole in block with point sticking out by approximately 25mm.
- Offer fairing up to bike being careful not to damage fairing with marking tool, fix in position using fairing screws on front half of fairing, locate rear half of fairing to fairing mounting holes, the marking tool should now be unscrewed by approximately another 10mm so it just contacts the inner face of fairing when all fairing screws are tight.
- Gently push on fairing directly over marking tool until the inner face of fairing is marked enough to allow drilling of a pilot hole.
- Remove fairing and using mark from marking tool drill pilot hole from inner face of fairing outwards.
- Offer fairing back up and check pilot hole lines up with point of marking tool.
- Remove fairing and drill hole using a 28mm hole-saw, use pilot hole and drill from outside inwards.
- Remove marking tool.
- Deburr using sharp knife or deburring tool being careful not to mark fairing.
- Refit and tighten fairing.
- Place washer and shake-proof washer from kit onto the hex head bolt from kit (ensure plain washer is against bolt head and shake-proof washer will be against bobbin face on assembly), fit through bobbin so bolt head goes into counter-bore.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX


Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com



- Place black spacer over exposed end of bolt and offer the whole bobbin assembly through hole in fairing and locate bolt in threaded hole in metal block. Tighten the bolt until you feel some compression from inside the protector. **PLEASE NOTE BOBBIN MUST BE POSITIONED AS PICTURED ON FIRST PAGE WITH BIGGER END TOWARD FRONT OF BIKE.** Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not overtighten as damage can occur to the bike. Do not exceed 40nm of torque.
- Fit bobbin cap and bubble sticker as shown in top pictures.

Right-hand side (as you sit on bike)

- Remove right-hand side fairing.
- Remove the engine bolt arrowed below. **DO NOT REMOVE THE SPACER.**

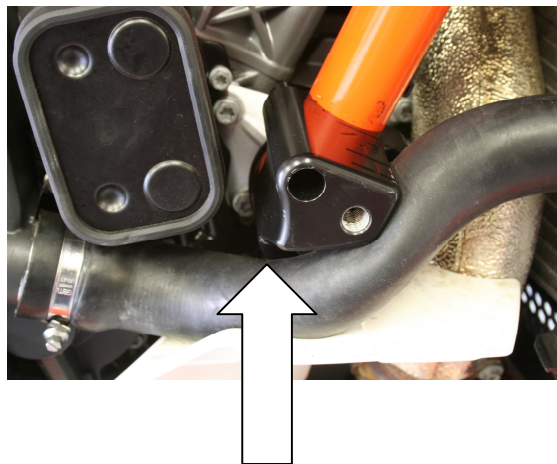

- Offer up the metal block with R-H engraved on the flat (top) surface into position shown above, the spigot will sit in the recess where the OEM bolt used to be and the semi-circular cut-out will fit over the frame as shown in previous picture the coolant hose will have to be moved slightly to allow the block to sit in frame recess this is made easier by removing top screw of the lower fairing located just behind the hose.
- Fit one of the shorter of the two M10 CAP HEAD BOLTS with washer through metal block into threaded engine mount and lightly tighten.
- Slip one of the half round clamps behind frame and under wiring to line up with smaller holes in metal block, using one long and one short M6 cap head bolts with washers through the metal block to secure and tighten clamp.
- Tighten larger cap head bolt.
- Refit the lower fairing screw, note it is necessary to push the lower fairing up in to place as you are squeezing the hose slightly this does not affect the water flow.(see picture above)
- Screw marking tool (threaded bar with pointed end) into threaded hole in block with point sticking out by approximately 25mm.
- Offer fairing up to bike being careful not to damage fairing with marking tool, fix in position using fairing screws on front half of fairing, locate rear half of fairing to fairing mounting holes,



the marking tool should now be unscrewed by approximately another 10mm so it just contacts the inner face of fairing when all fairing screws are tight.

- Gently push on fairing directly over marking tool until the inner face of fairing is marked enough to allow drilling of a pilot hole.
- Remove fairing and using mark from marking tool drill pilot hole from inner face of fairing outwards.
- Offer fairing back up and check pilot hole lines up with point of marking tool.
- Remove fairing and drill hole using a 28mm hole-saw, use pilot hole and drill from outside inwards.
- Remove marking tool.
- Deburr using sharp knife or deburring tool being careful not to mark fairing.
- Refit and tighten fairing.
- Place washer and shake-proof washer from kit onto the hex head bolt from kit (ensure plain washer is against bolt head and shake-proof washer will be against bobbin face on assembly), fit through bobbin so bolt head goes into counter-bore.
- Place black spacer over exposed end of bolt and offer the whole bobbin assembly through hole in fairing and locate bolt in threaded hole in metal block. Tighten the bolt until you feel some compression from inside the protector. **PLEASE NOTE BOBBIN MUST BE POSITIONED AS PICTURED ON FRONT PAGE WITH BIGGER END TOWARD FRONT OF BIKE.** Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not overtighten as damage can occur to the bike. Do not exceed 40nm of torque.
- Fit bobbin cap and bubble sticker as shown in top pictures.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in resellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX

Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com