NEW COECYCLES INSTALLATION INSTRUCTIONS


MV AGUSTA BRUTALE MY17

FRONT TURN SIGNALS

	Remove (4) bolts with 5mm allen key or socket to remove headlight (pictures 1/2)
2 >	Unplug 3 connectors; 1 main harness, 2 turn signal connectors (picture 3)
3>	Remove (1) bolts on either side of headlight with 5mm allen key or socket to take off turn signal brackets (picture 4)
4	Using a 4mm allen key or socket, remove stock bolt mounting turn signal and disassemble (picture 5)
5	Take NRC signal, and remove (2) screws holding lower plate as this needs to mount first
6	Take white spacer and slide into rubber grommet (picture 6)
$\langle i \rangle$	With provided M5 bolt and nut, mount lower signal bracket making sure not to overtighten. Blinker will flex inside rubber grommet if you do (picture 7)
8	Reinstall (2) screws to mount lens and top plate (picture 8)





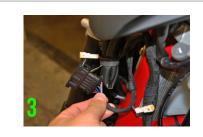





NEW CACES CYCLES INSTALLATION INSTRUCTIONS

FRONT TURN SIGNALS

9

Remount turn signal brackets to headlight

- Plug connectors back into harness on backside of headlight
- (1) Remount headlight using stock hardware





