
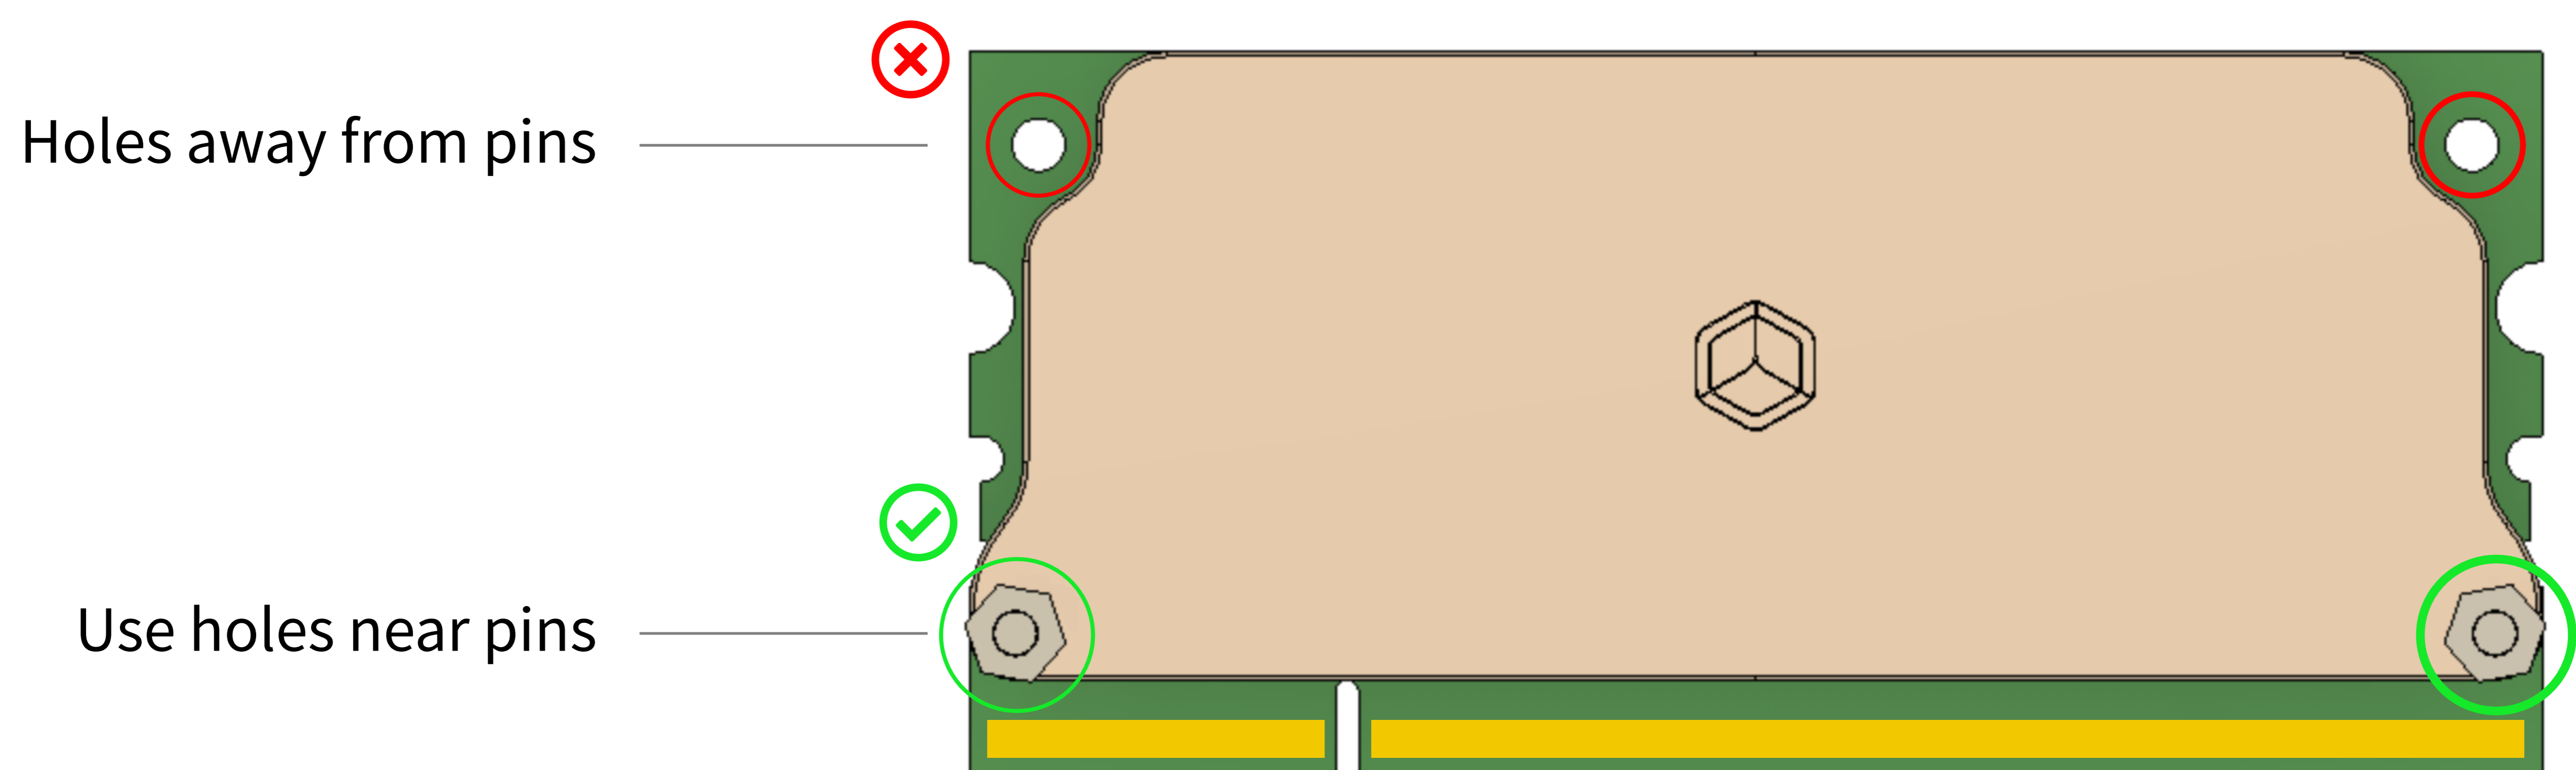


ASSEMBLY GUIDE

balena RPi-CM3 heatsink

WARNING

- Wear gloves during the assembly
- Do not touch the heatsink with bare hands to avoid marks

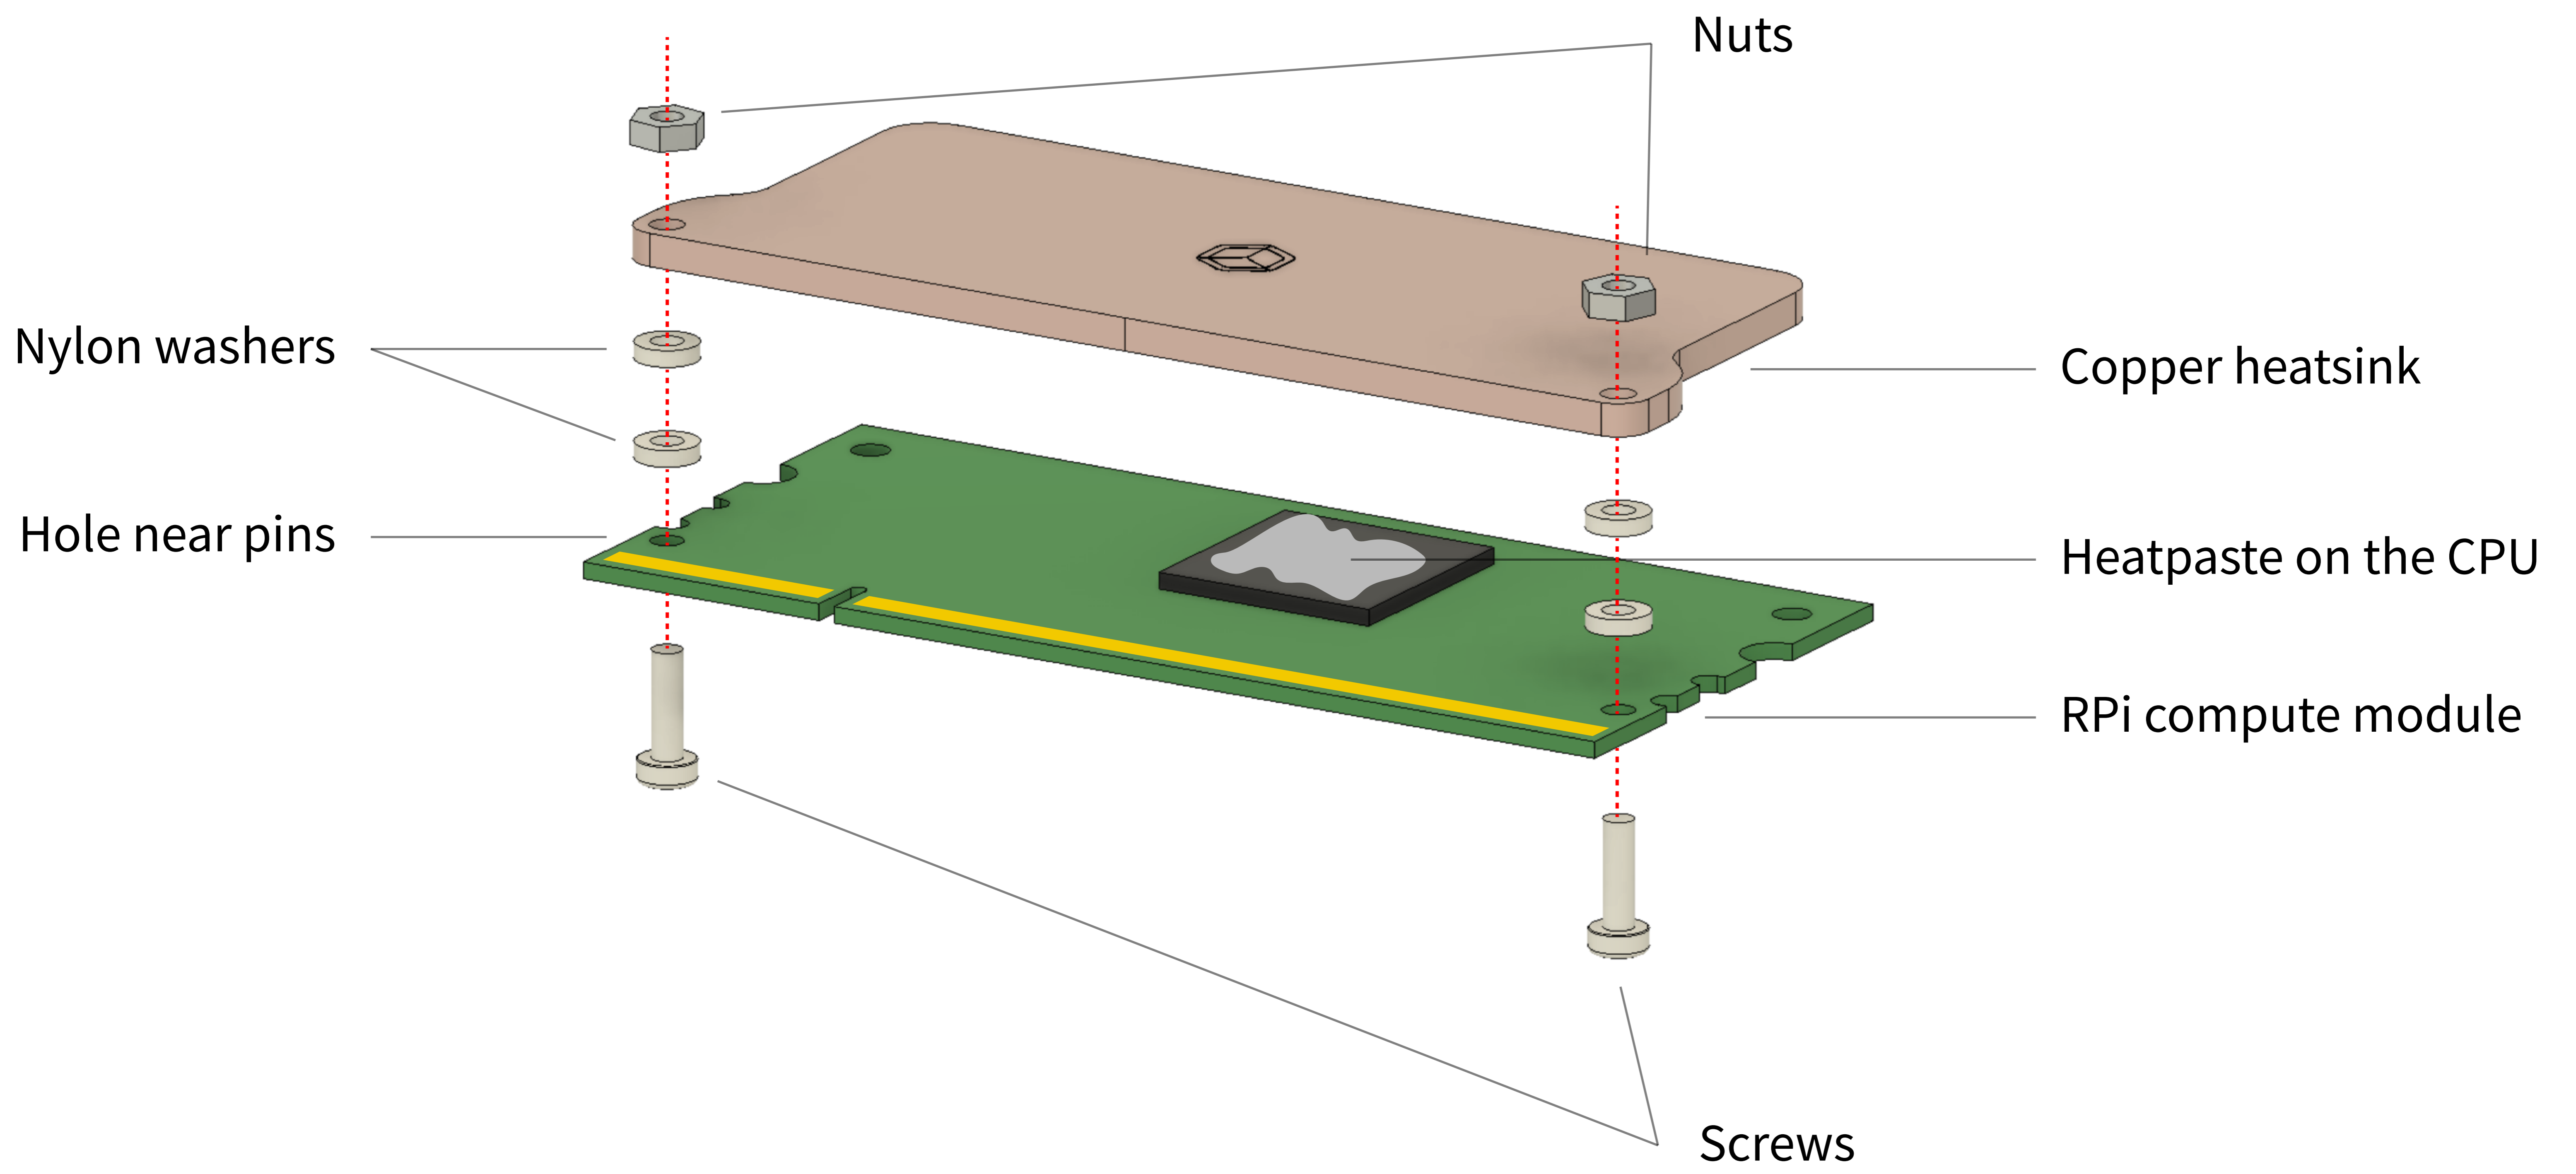

If you are using nylon screws, they might need to be trimmed with a wire cutter after assembly so they don't protrude from the metal washer

