

WILLIAMS FORK OFFSET GUIDE

FIG. 1 - OFFSET OPTIONS


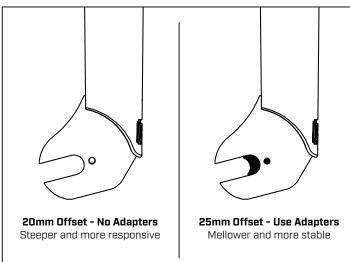


FIG. 2 - OFFSET ASSEMBLY

Step 1: Insert the adapters into the recess on the inside

of both dropouts

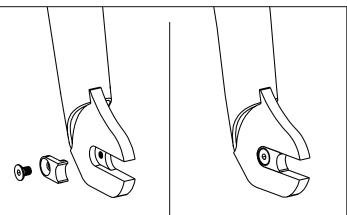

Step 2: Carefully thread in the screw with a 3mm Allen key until tight and the adapter sits flush to the dropout