



BASE ACE

KIT 3

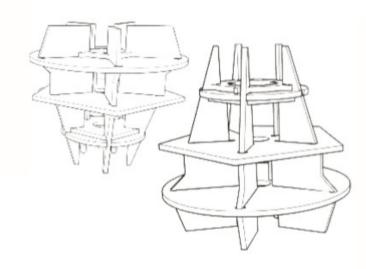


T

KIT 3 BASE PLATE ATTACHMENT




STEP 1 Remove backing from one side of the double-sided tape and attach to the underside of a Base Plate



STEP 2 Check alignment to ensure the tape is centralised on the Base Plate and then push firmly



STEP 3
Remove the backing from the underside of the double-sided tape. Turn over and hold the Base Plate just above the surface of the circular or pentagon shaped base

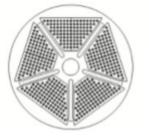

STEP 4
Centralise the Base Plate and ensure there is a small and even gap between the edge of the Base Plate and the side of the slots in the base. Press down firmly to secure

ASSEMBLY INSTRUCTIONS
BAB-K3-3001





