



BASE ACE

KIT 3

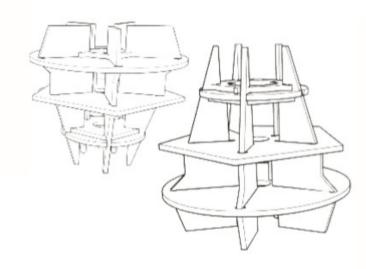


T

KIT 3 BASE PLATE ATTACHMENT




STEP 1 Remove backing from one side of the double-sided tape and attach to the underside of a Base Plate



STEP 2 Check alignment to ensure the tape is centralised on the Base Plate and then push firmly



STEP 3
Remove the backing from the underside of the double-sided tape. Turn over and hold the Base Plate just above the surface of the circular or pentagon shaped base

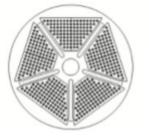


STEP 4
Centralise the Base Plate and ensure there is a small and even gap between the edge of the Base Plate and the side of the slots in the base. Press down firmly to secure


ASSEMBLY INSTRUCTIONS
BAB-K3-3001










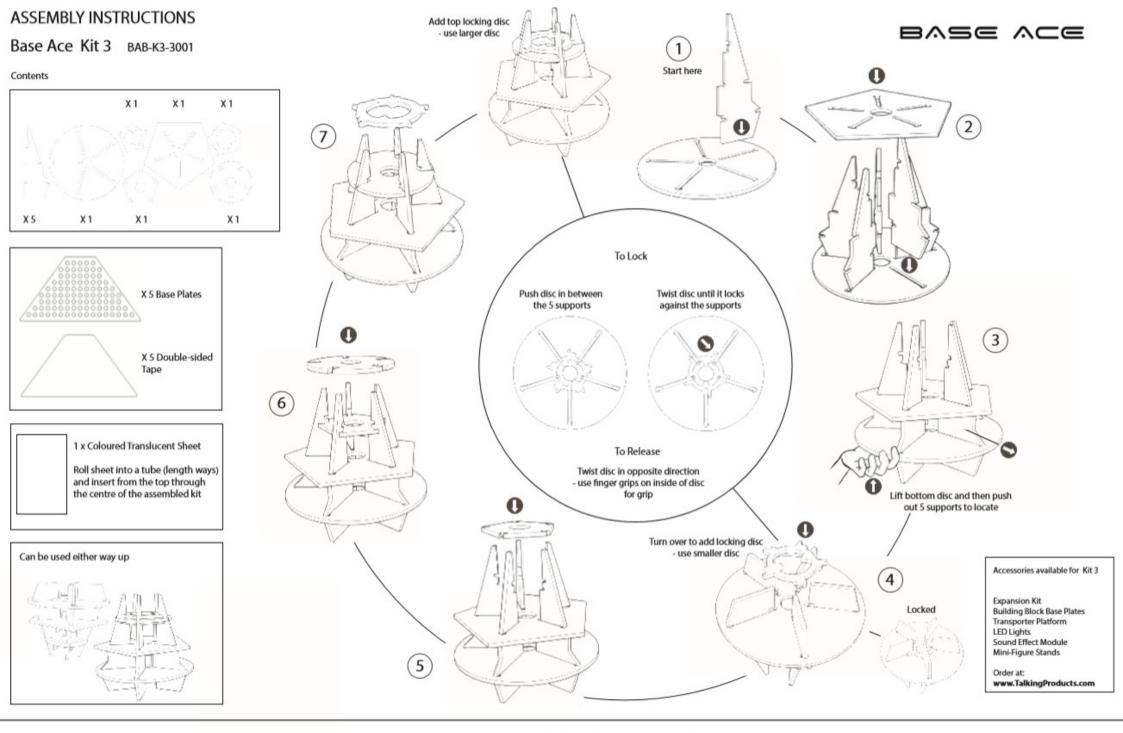
















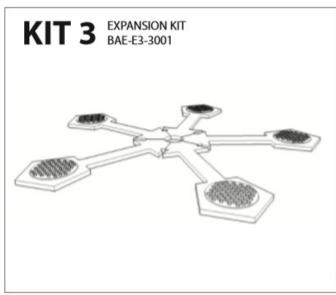

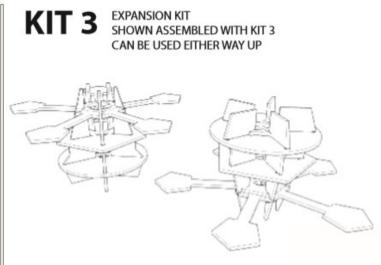


KIT 3 EXPANSION KIT BAE-E3-3001 BASE PLATE ATTACHMENT



STEP 1 Remove backing from one side of the double-sided tape and attach to the underside of a Base Plate



STEP 2 Check alignment to ensure the tape is centralised on the Base Plate and then push firmly

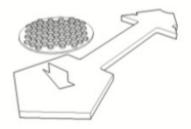


STEP 3
Remove the backing from the underside of the double-sided tape. Position Base Plate holding it just above the surface of the extension platform



STEP 4
Centralise the Base Plate and ensure the raised dots are aligned with the direction of the long extension platform. Press down firmly to secure



EXPANSION KIT FOR KIT 3

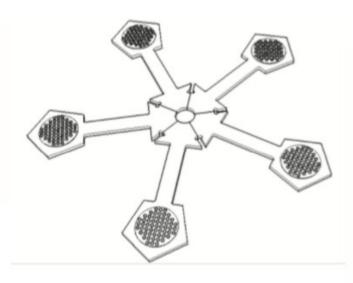

ASSEMBLY INSTRUCTIONS
BAE-E3-3001







