



# **2019 Chevrolet Camaro SS BIG MOUTH Intake Installation Guide**



# Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and about 2 hours of installation time.

Please review the table below and make sure you have received the kit contents.

Description	Qty in kit
	#
M6 x 30mm socket head cap screw	2
Steel mount plate	1
M6 lock nut	2




# Stock Components Removal

Use a T15 driver to remove the 8 screws shown below. The pop-up clips at the ends can be removed with a non-marring pry tool.




# Stock Components Removal

Use a T15 driver to remove the 4 screws shown below. Proceed to remove the 5 bolts (7mm) behind the fender liner that retain the bumper. Repeat on opposite side.

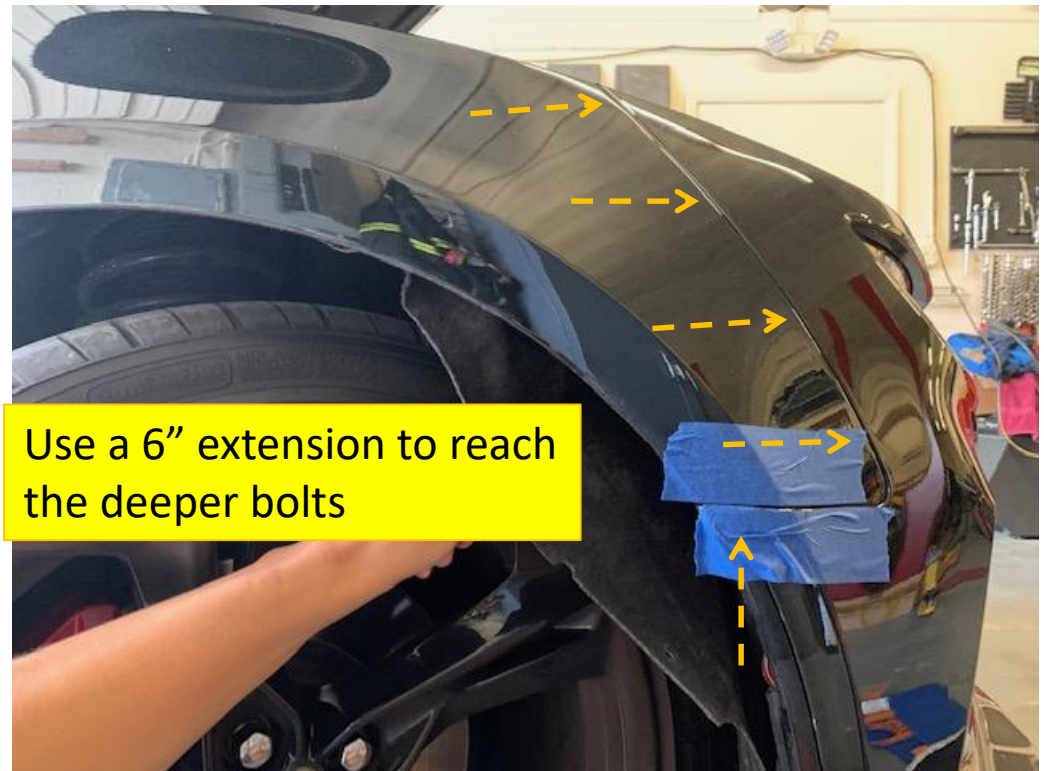


# Stock Components Removal

Locate and remove the 12 bolts (7mm) that trace the edge of the bumper (not all the bolts are shown below)

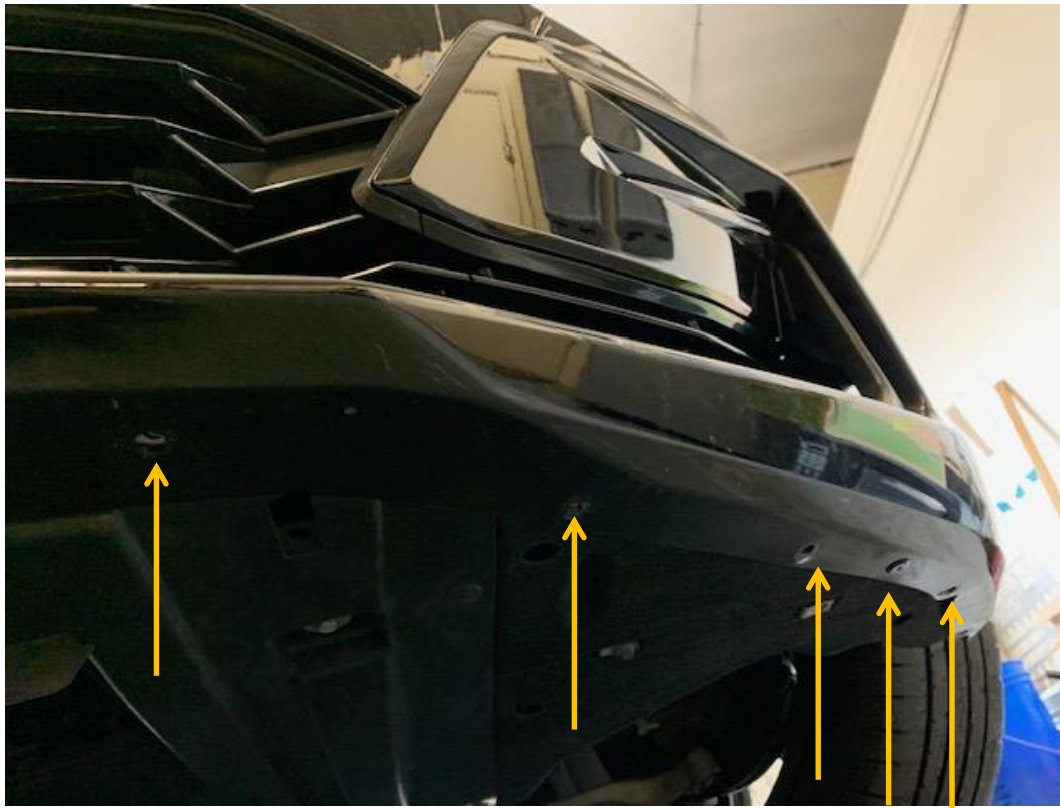


## Stock Components Removal

Proceed to unclip the bumper and handle gently. The bumper cannot be fully removed unless the indicated connector is disconnected. However, full bumper removal is not imperative if you can rest the bumper without stressing the wire loom.

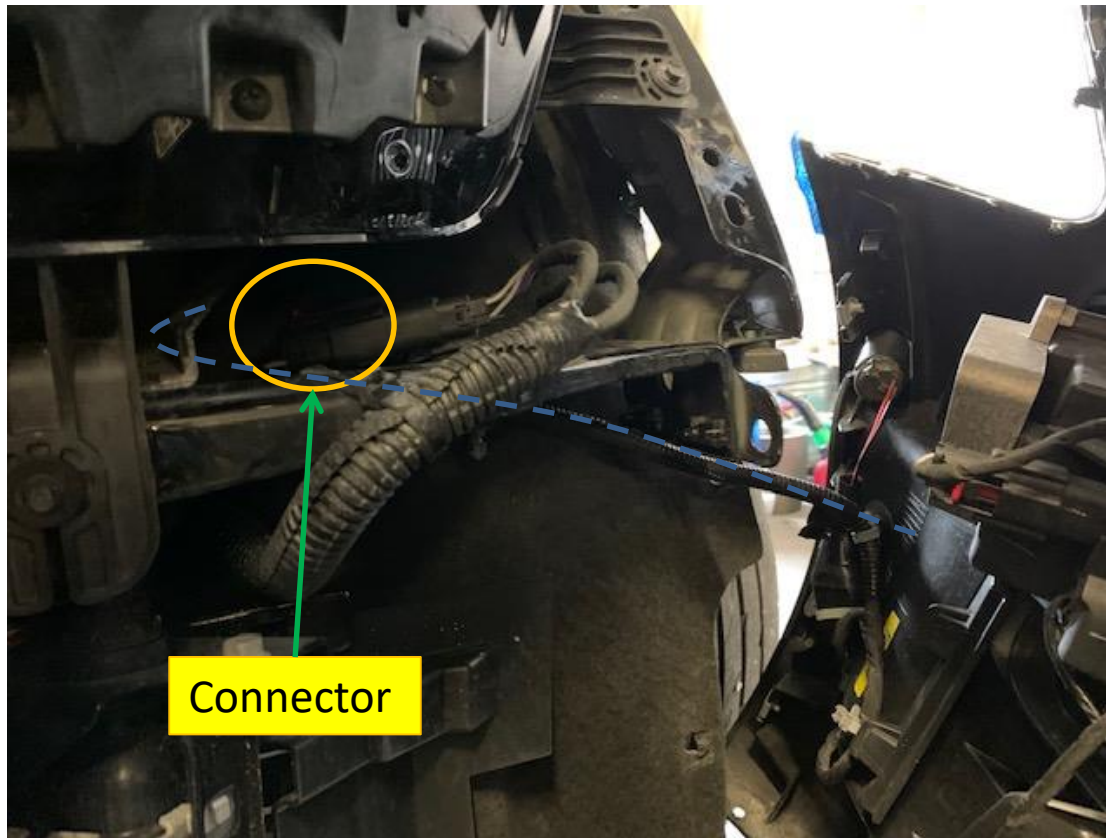

# Stock Components Removal

Remove the 3 ribbed clips that hold this plastic piece to the radiator shroud and crash bar. This piece will not be reused.

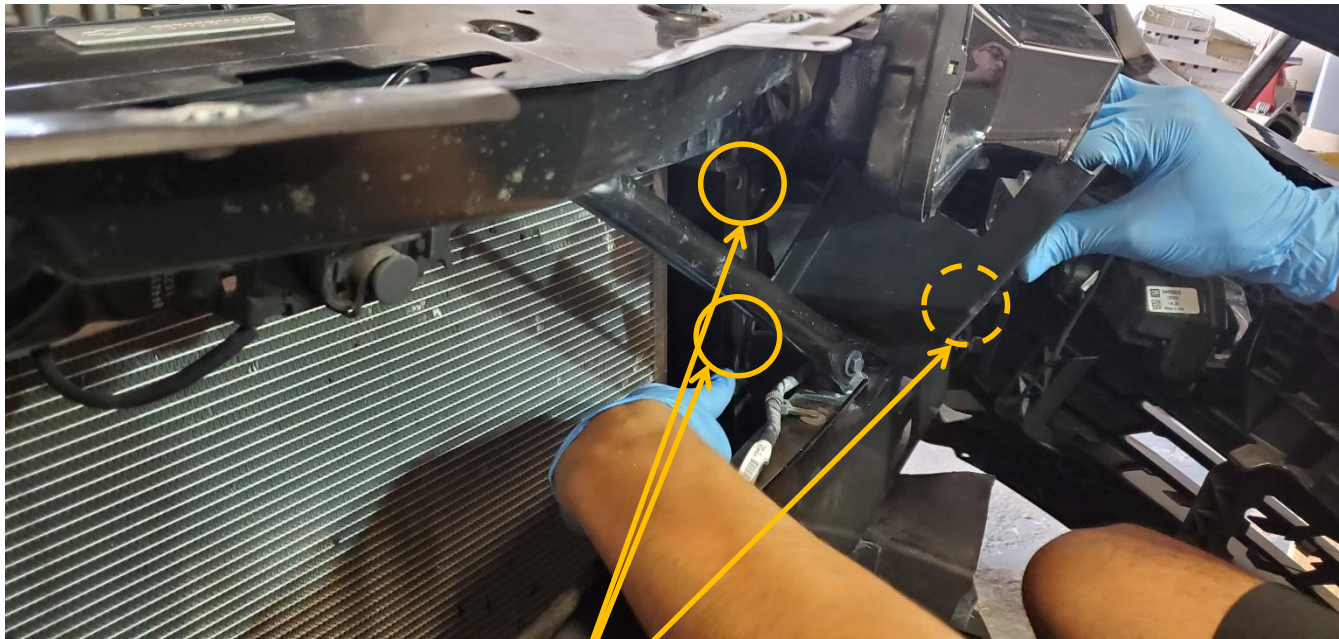

Use a non-marring pry tool to assist you.

## Big Mouth Installation


The Big Mouth is meant to be tucked as shown below. Ensure that the cradle mounting region grips the diagonal crossbeam. Push the rightmost area up under the headlight and push down.

Diagonal cross beam is here

Push in this direction to seat part, fully.

Cradle

Push in this direction to seat part, fully.

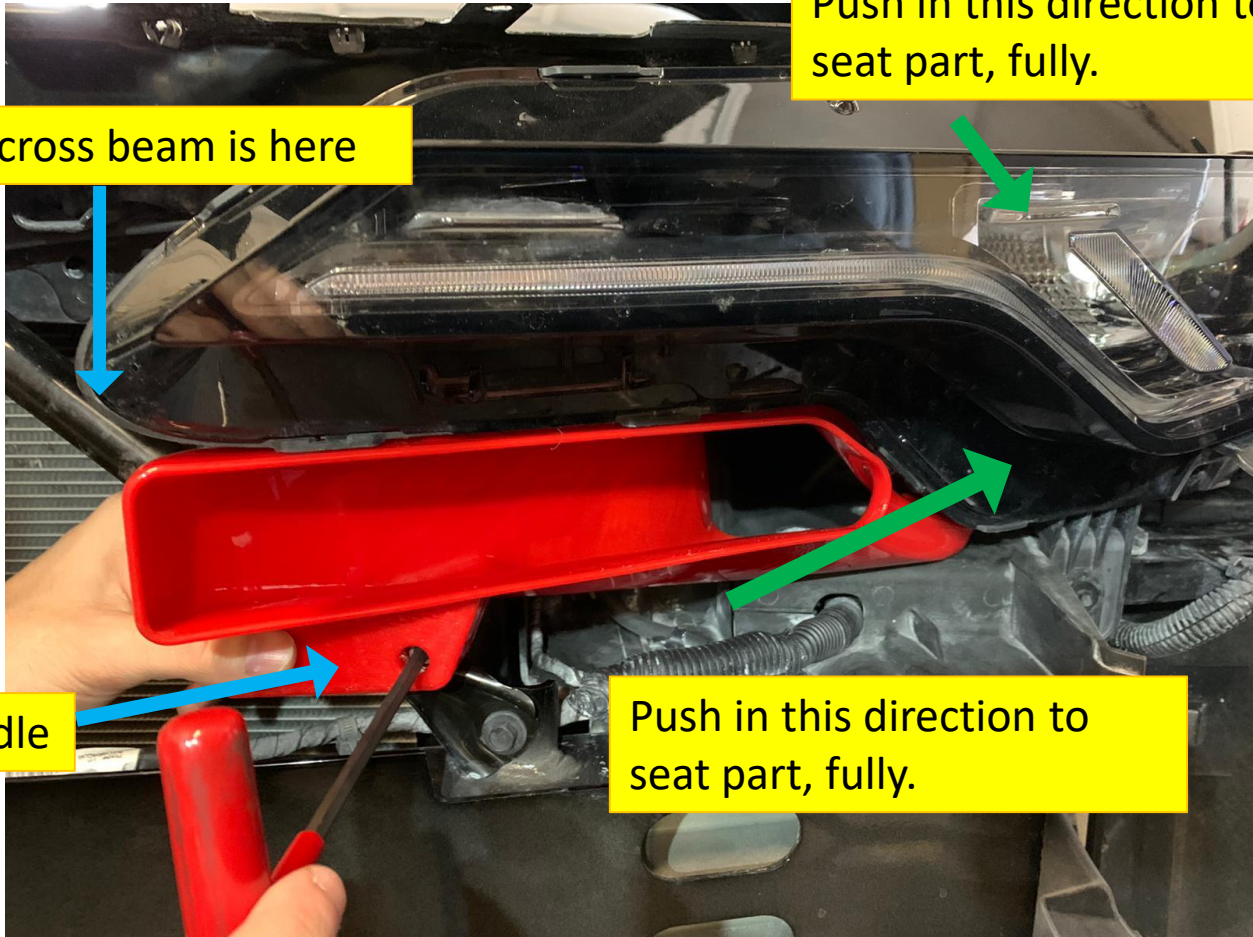






## Big Mouth Installation

Place the mount plate behind the crossbeam and insert one of the supplied bolts through the right-side hole. Spin the nut on by hand, do not tighten yet. Insert the other bolt in the passenger side hole and begin tightening both nuts in an alternating pattern, **SNUG IS ENOUGH.** The body should seat itself as shown below.



Use a 10mm wrench for the lock nuts and a 5mm Allen key for the bolt. **DO NOT OVERTIGHTEN.**

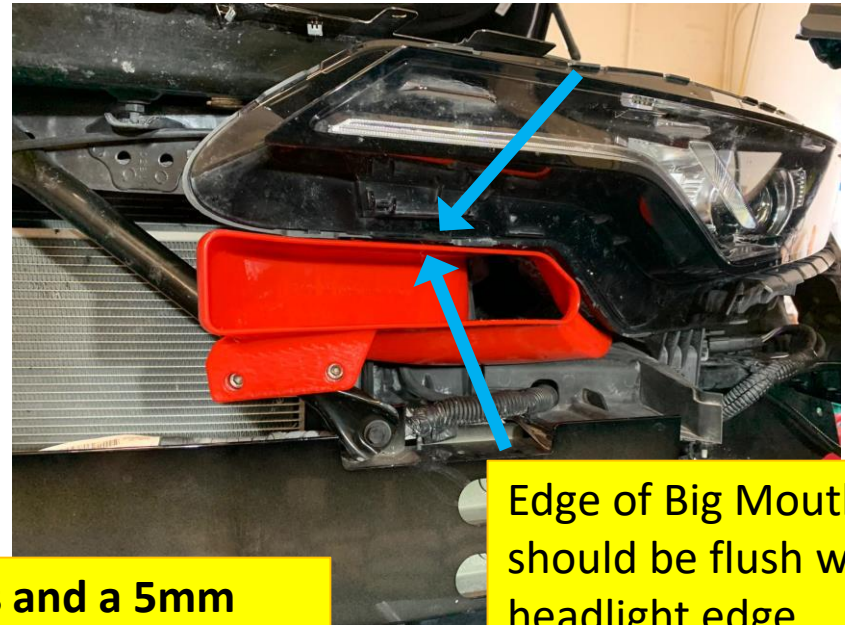

Edge of Big Mouth should be flush with headlight edge



## Finalize

Re-install the bumper the same way it was removed and ENJOY!

