



**2022+ Hyundai Elantra N BIG
MOUTH Intake Installation Guide**



Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and about 2 hours of installation time.

This product reuses OEM hardware.

Kit Contents	Qty
#14 x 1-1/2" Screw	1






Bumper Removal

REMOVE BUMPER PRIOR TO ATTEMPTING INSTALLATION.

Use YouTube as a resource, there are many bumper removal videos to guide you.

Stock Components Removal

Shown below is the OEM radiator shroud. To install the Big Mouth, you will need to either: (a) remove the shroud altogether or (b) modify the shroud using a rotary tool (Dremel) to create a cutout for the Big Mouth (not detailed in this instruction manual). **In either case, hold on to at least one of the OEM screws that retain the shroud because it will be used to install the Big Mouth.**

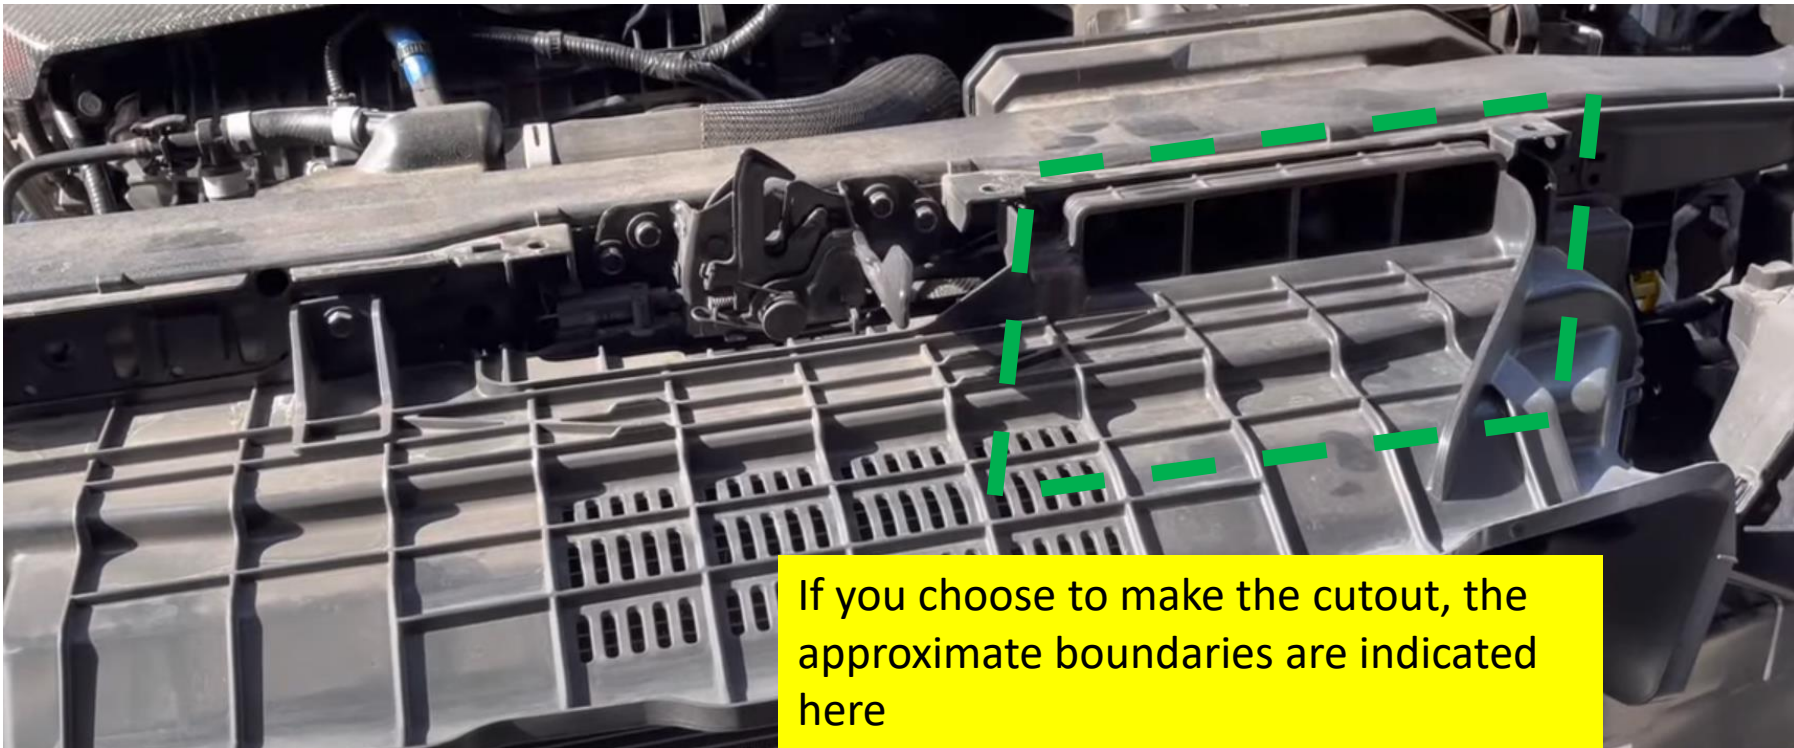

Big Mouth Installation

Slide the BIG MOUTH over the opening and attach using the OEM hardware and the supplied #14 screw. **Use the OEM screw on the passenger side ear and the #14 screw on the driver side ear.** **DO NOT OVERTIGHTEN.**





Finalize

Re-install the bumper the same way it was removed and ENJOY!

