



Focus RS BIG MOUTH Ram Intake and Airbox Seal Installation Guide



Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and about 2 hours of installation time.

Please review the table below and make sure you have received the kit contents.

Kit Contents			
Description	Size	Length	Qty
Socket Head Cap Screws	M6	30mm	1
	M6	65mm	1
6mm Flat Washers	M6	NA	2
6mm Hex Locknut	M6	NA	2
Big Mouth Snorkel	NA	NA	1
Big Mouth Pedestal Spacer	NA	NA	1





Stock Components Removal


Remove the bumper and the stock bellmouth opening.
For best instruction, use the following link as a guide.
The bumper removal for the RS is similar to the ST.

On YouTube search – “Ford Focus Third Gen -
Front Bumper Removal How To Guide Mk3
(2011 - present)”

Stock Shroud

The following shroud is blocking flow to your air intake. You may choose to install the BIG MOUTH without the shroud. If you choose to keep it, you need to cut an opening as shown.

Remove this stock plastic piece.

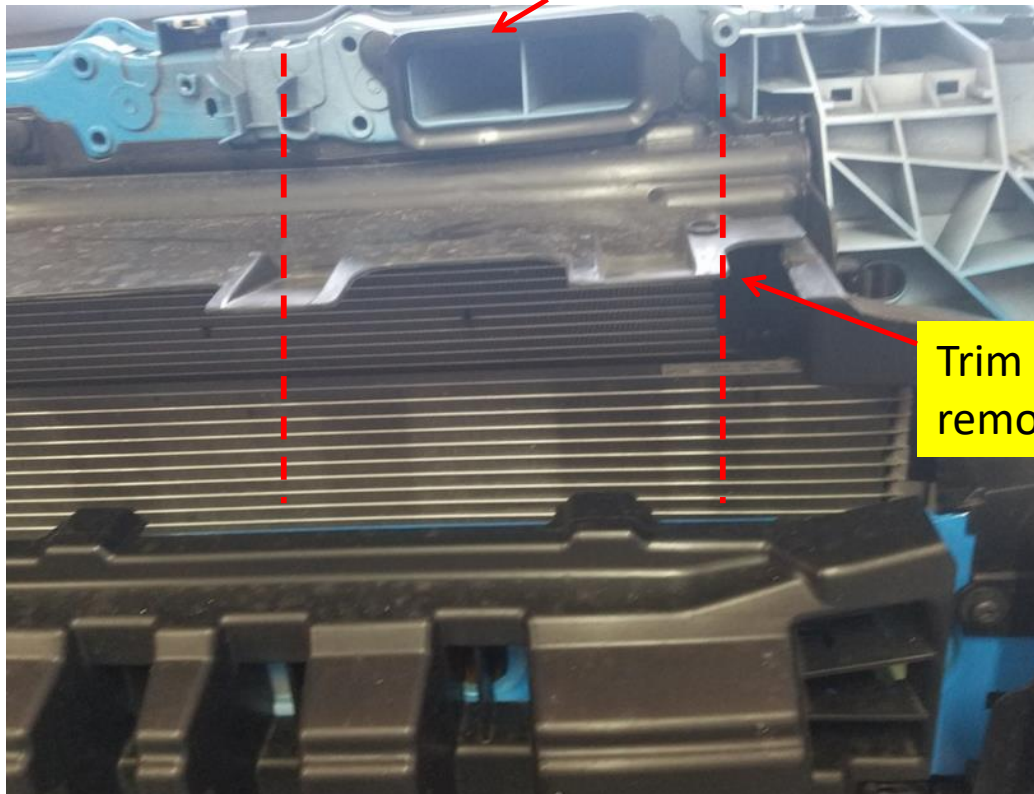

Trim along dotted line or remove shroud.

BIG MOUTH Installation Procedure


30mm bolt goes on
passenger side of cowl

65mm bolt goes on
driver side of cowl

Pedestal spacer

Flat washer
Nut

Seat the snorkel over the cowl.
DO NOT OVERTORQUE the
nuts, tighten until the nut is
flush with the flange, then
tighten another 1/8 turn.

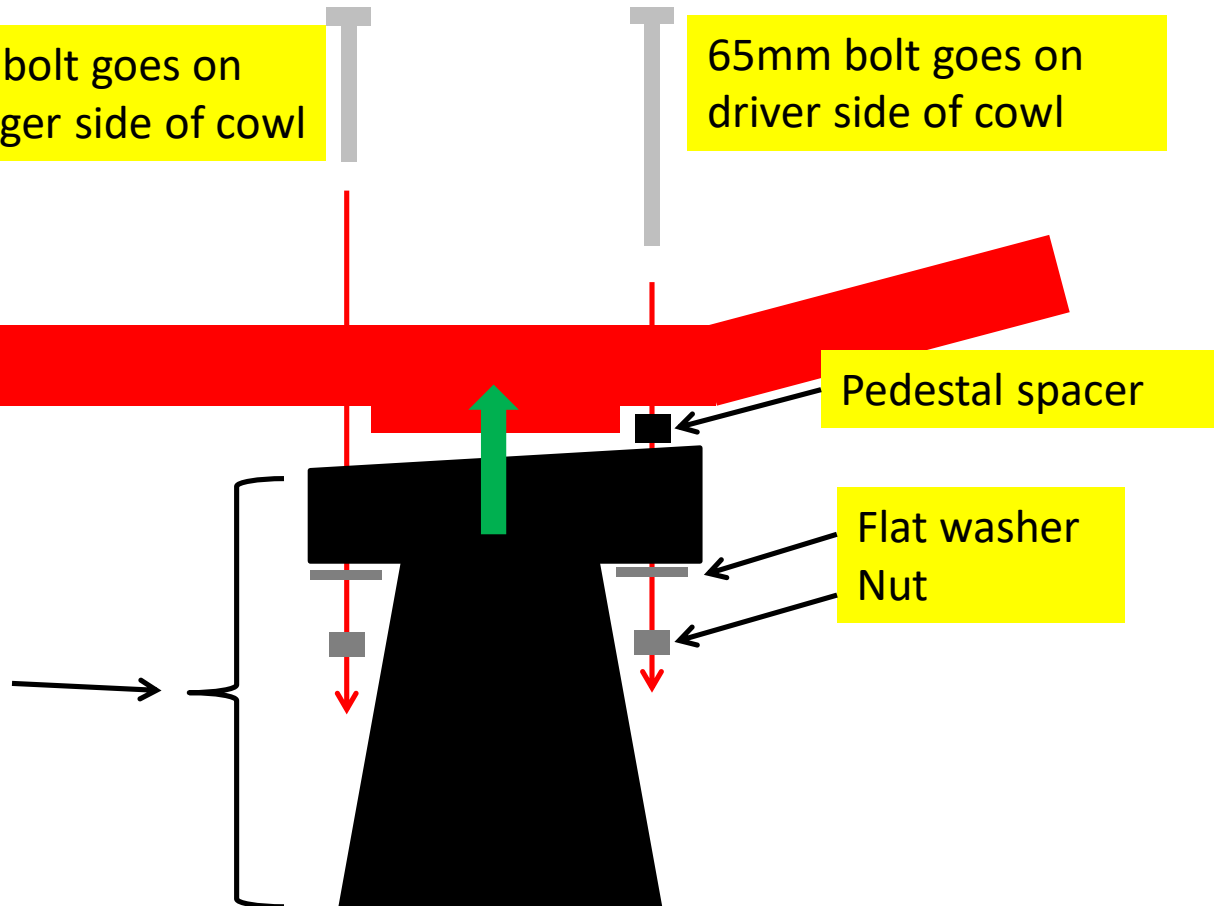



Finalize

Re-install the Airbox and the bumper in the reverse order and enjoy your BIG MOUTH!!!

