



Focus ST/RS BIG MOUTH Intake Installation Guide



Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and about 2 hours of installation time.

Please review the table below and make sure you have received the kit contents.

Kit Contents

Description	Size	Length	Qty	Material
Hex Head bolts	6mm	45mm	1	Stainless steel
	6mm	65mm	1	Stainless steel
Flat Washers	6mm	NA	2	Stainless steel
Big Mouth Snorkel	NA	NA	1	ABS
Pedestal Spacer	NA	NA	1	ABS






Stock Components Removal

If you own a 2012-2014 Focus or Focus RS you will need to remove the bumper.

For best instruction, use YouTube videos to guide you on bumper removal.


2015+ Focus owners do not need to remove the bumper, you can remove the grill only and slide the big mouth through the front of the car.

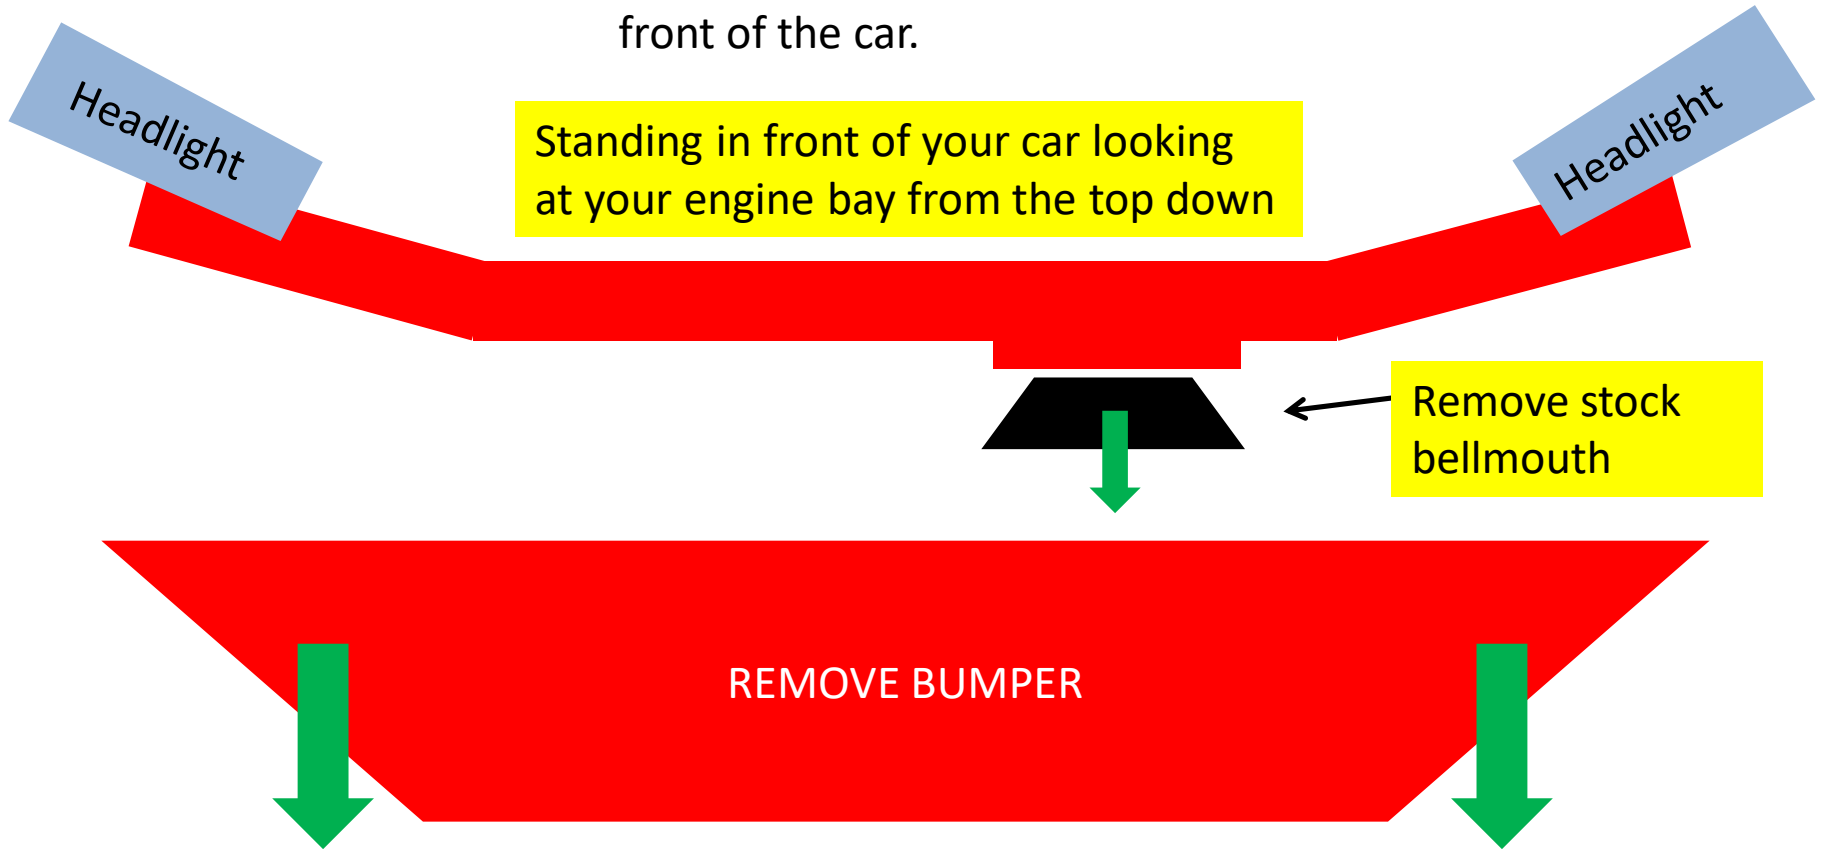



Stock Shroud Modification

You may choose to discard the rubber shroud. If you choose to keep it, you need to cut a 2"x7" opening as shown.

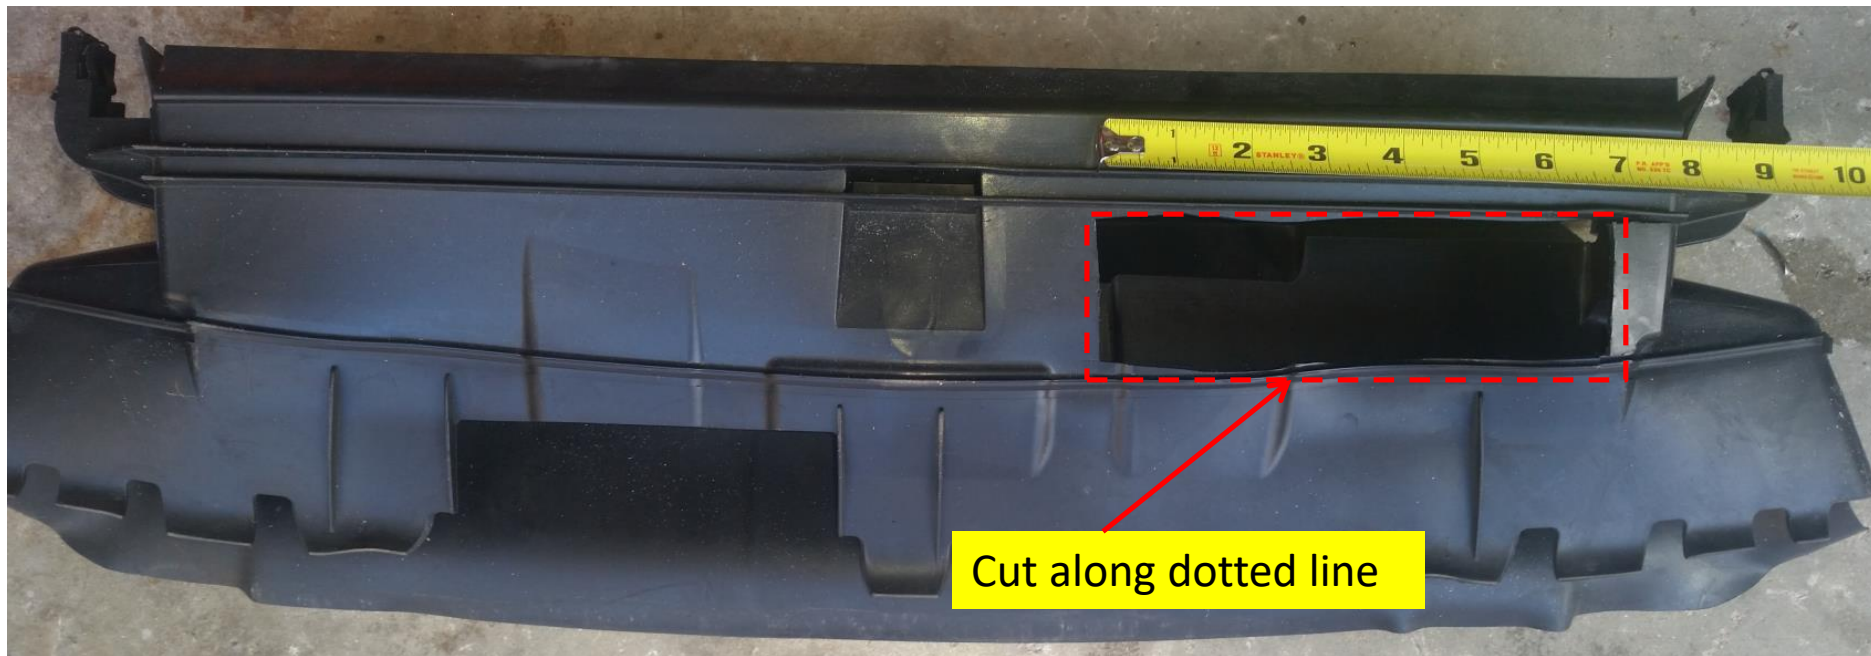

BIG MOUTH Installation Procedure

45mm bolt goes on
passenger side of cowl

65mm bolt goes on
driver side of cowl

Pedestal spacer

Flat washer
Nut

Seat the snorkel over the cowl.
DO NOT OVERTORQUE the
nuts, tighten until the nut is
flush with the flange, then
tighten another 1/8 turn.

