

2022+ Honda Civic SI/Sport BIG MOUTH Installation Guide



# **Kit Contents (Full Kit)**

Please review this document before attempting installation.

You will need basic hand tools and 2 hours of installation time.

Kit Contents	Qty
M6 x 40mm Cap Screw	1
#8 x 1/2 Round Head Screw	1
1/4" x 1" Fender Washer	1





## **Stock Components Removal**

It is best to Google "how to remove bumper" for your particular trim.



#### **Driver Side Hole Location**


Remove the stock shroud to allow for installation of the Big Mouth. Hold on to the pop-up retainer clips that retain the shroud. An OEM retainer clip will be used later to install the Big Mouth.





### **Remove Stock Components**

Remove the indicated air intake assembly by undoing the indicated bolts and plastic push clip.

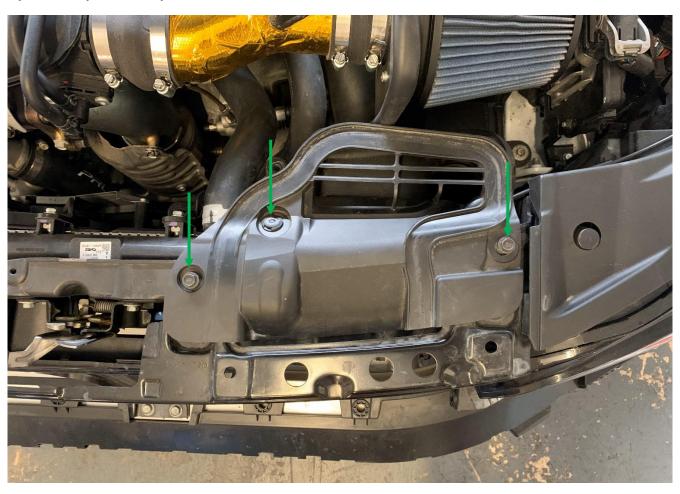

# W V E L O S S A T E C H

### **Remove Stock Components**

Loosen (**no need to remove**) the indicated bolts just enough to allow the section of frame to flex (left). Position the Big Mouth such that the round protrusion lines up with the hole in the section of frame (right).








#### **Big Mouth Installation**

Use the supplied M6 x 40mm cap screw and OEM retainer push clip to fasten the Big Mouth at the shown locations. **DO NOT OVERTORQUE.** 

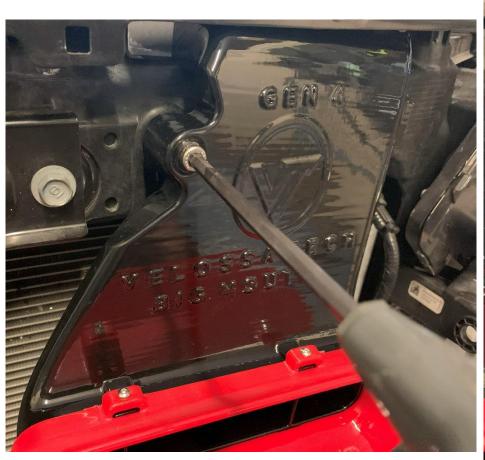





#### **Big Mouth Installation**

Use the supplied #8 screw and fender washer to fasten the Big Mouth from the top. **DO NOT OVERTORQUE.** 





#### **Big Mouth Installation**

Once the Big Mouth has been fastened through all 3 points, re-attach the section of frame and stock air intake components that were removed/loosened prior to install. The Big Mouth should feel sturdy and free of any interference.





#### **Final Assembly Review**

Review the install and make sure nothing is binding or causing any preload on any parts, loosen and retighten if adjustment is necessary.

