



# **Hyundai Veloster R-SPEC / Turbo BIG MOUTH Intake Installation Guide**



## Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and 1 hour or less of installation time.

This product reuses the OEM hardware.






# Stock Components Removal

**REMOVE BUMPER PRIOR TO ATTEMPTING INSTALLATION!!!**

## Stock Components Removal

Once the bumper is removed, you will need to remove the OEM air shield shown below.

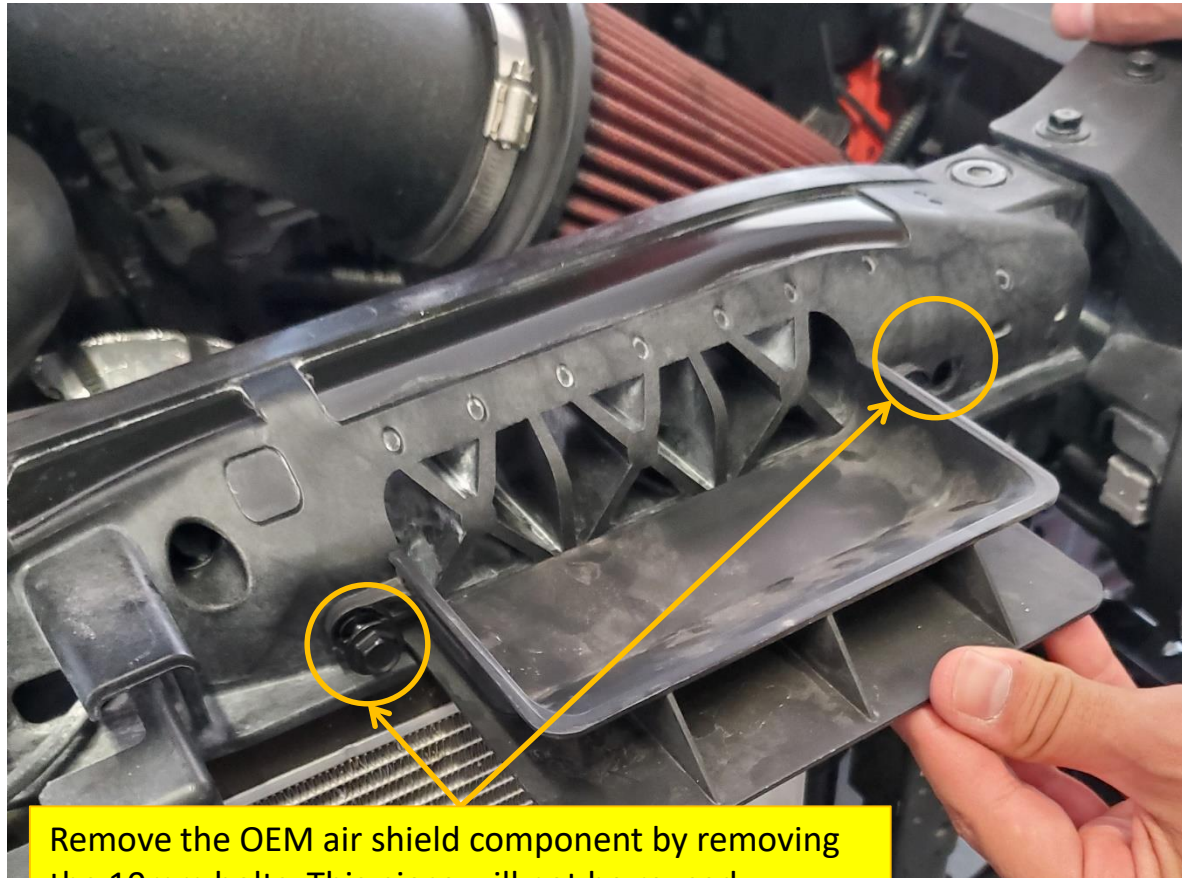

Remove the OEM air shield component by removing the 10mm bolts. This piece will not be reused.

## Stock Component Removal

Remove the screws (10 mm) and pop-up clip placed in the locations indicated below. To remove the wire loom fastener, pinch it from the back and pull forward. Remove the radiator shroud.








## Big Mouth Installation

Slide the big mouth over the opening and attach using the OEM hardware. **Do not cross thread the screws!!!**

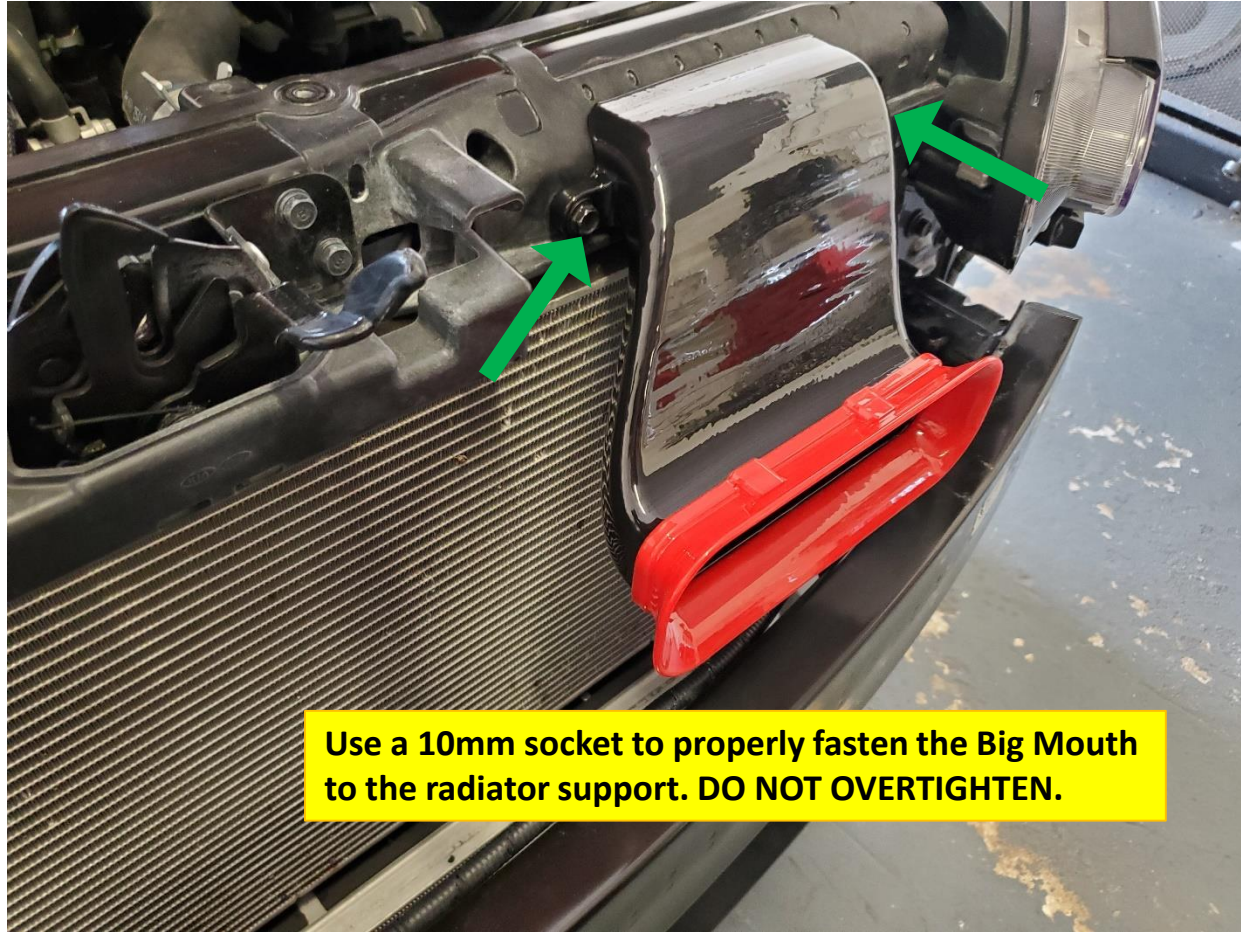

Use a 10mm socket to properly fasten the Big Mouth to the radiator support. DO NOT OVERTIGHTEN.



## Finalize

Re-install the bumper the same way it was removed and ENJOY!

