

2017-2020 Infiniti Q60 BIG MOUTH Intake Installation Guide

Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and about 1-1.5 hours of installation time.

Please review the table below and make sure you have received the kit contents.

Description	Qty in kit
	#
M6 x 30mm socket head cap screw	5
M6 large washer	4
M6 small washer	1
M6 lock nuts	4
Aluminum spacer	1




Bumper Removal

Perform a YouTube Search using the term “How To Remove Your Infiniti Q60's Front Bumper Properly” and follow the steps for bumper removal.

Once you remove the bumper, please continue with this installation guide

Big Mouth Installation

If you DO NOT own a Technology package car, follow this slide by unbolting the horn as shown and relocating it to the screw hole on the crash bar as shown. If you own a Tech package, see next slide.

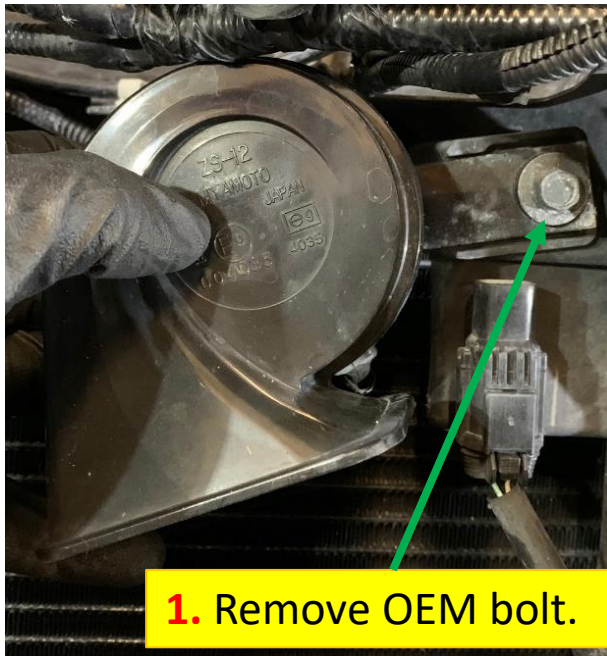

1. Remove OEM bolt.

2. You will need to loosen the nut on the back of the horn, **rotate the ground wire on the horn such that the wire loom is not under tension in step 3**. Re-tighten the wire onto the horn using the nut.


3. Using the same horn bracket, relocate it here and bolt it down using the OEM bolt.



Big Mouth Installation

If you own a tech package car, follow this slide. Unbolt the horn as shown. **Do not re-use the OEM** bolt to fasten to crash bar. Use the supplied M6 hardware.

Remove the OEM bolt from this hole and see the next slide. **The spacer and small washer will be used here.**

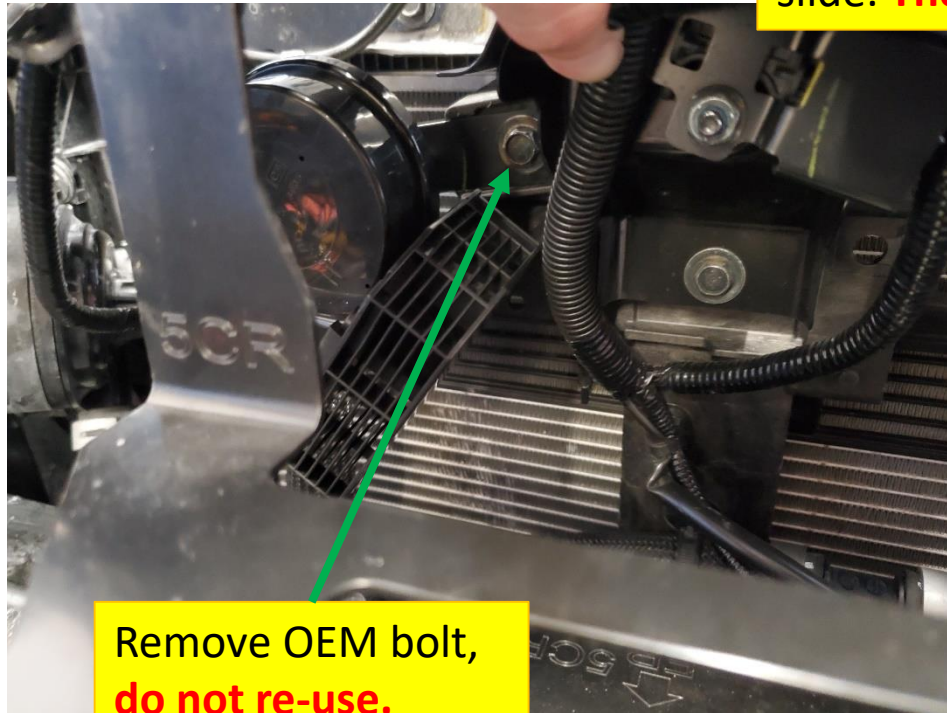

Remove OEM bolt,
do not re-use.




This sensor frame is present on
tech package cars.

See next slide for
more clarity.


Big Mouth Installation

Fasten the horn to the crash bar using an M6x30 screw, the small M6 washer and the aluminum spacer as shown. Choose an orientation of the horn that does not strain the wire loom.

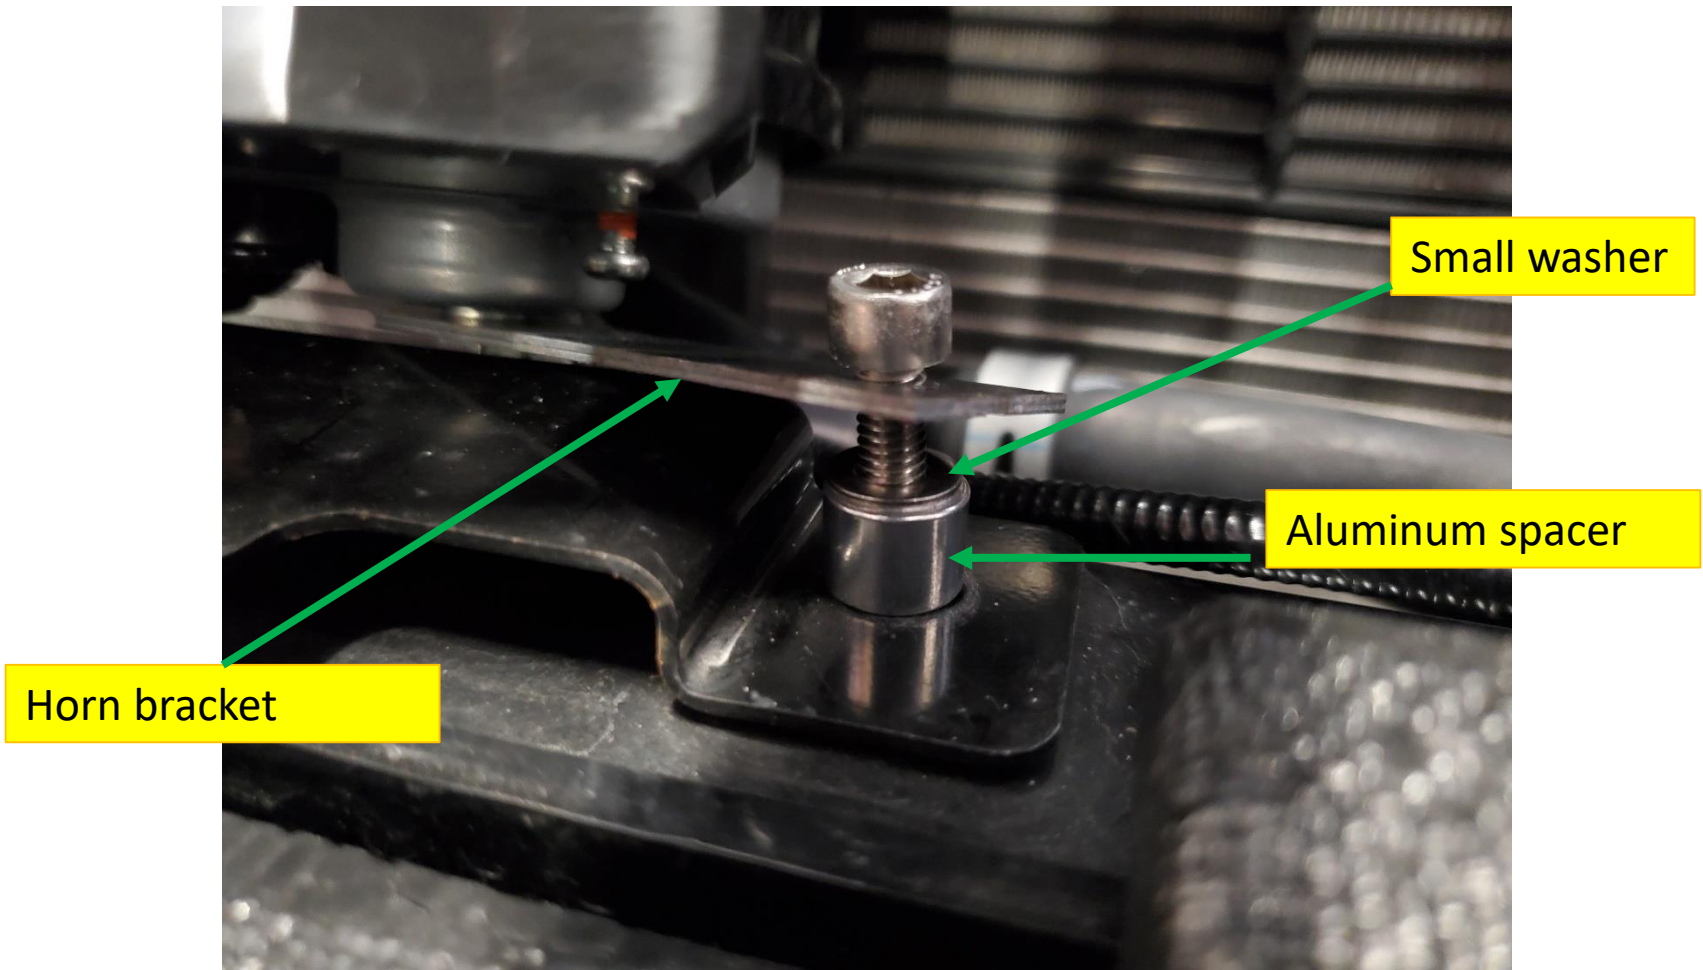

Big Mouth Installation

Insert the Big Mouth in an upward sweeping motion as indicated. Align the holes and use the supplied M6 x 30mm bolts + 6mm large washers (front) and M6 locknuts (rear) to fasten. Turn by hand at first in order to avoid cross threading, use a 5mm hex key and 10mm wrench for tightening. Install both Big Mouth intakes this way.

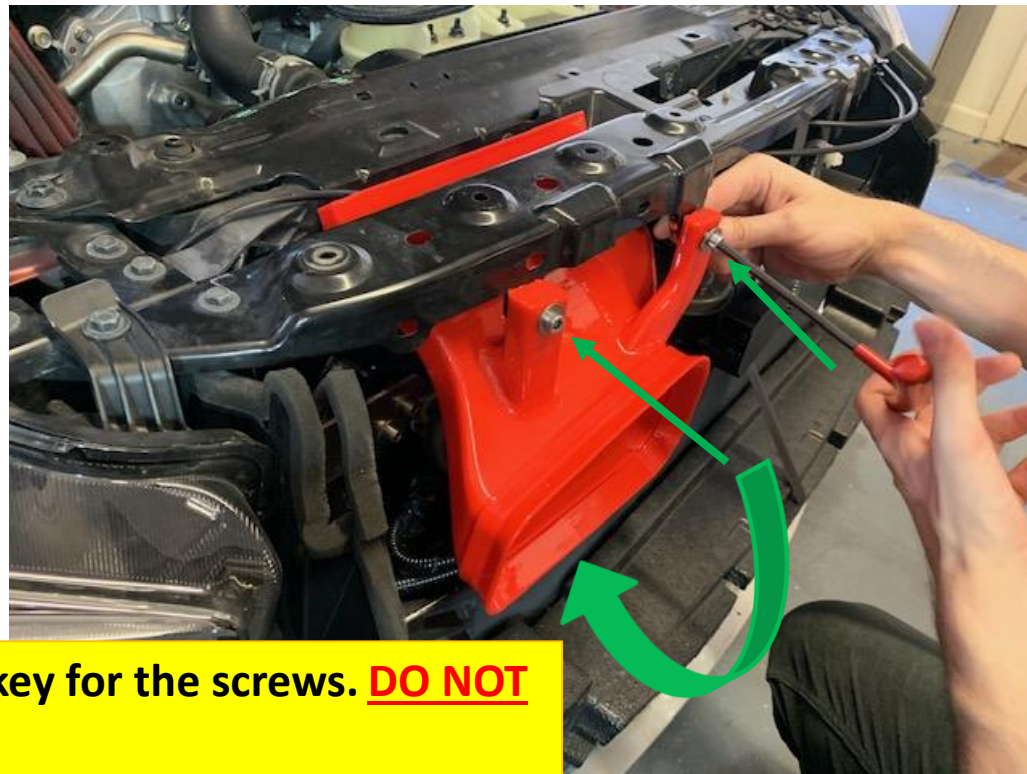

Use a 5mm hex key for the screws. **DO NOT OVERTIGHTEN.**

Finalize

Re-install the bumper the same way it was removed and ENJOY!

