



Hyundai Veloster N BIG MOUTH Intake Installation Guide



Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and 1 hour or less of installation time.

This product reuses the OEM hardware.






Stock Components Removal

REMOVE BUMPER PRIOR TO ATTEMPTING INSTALLATION!!!

Stock Components Removal

Once the bumper is removed, you will need to remove the one OEM component shown below.

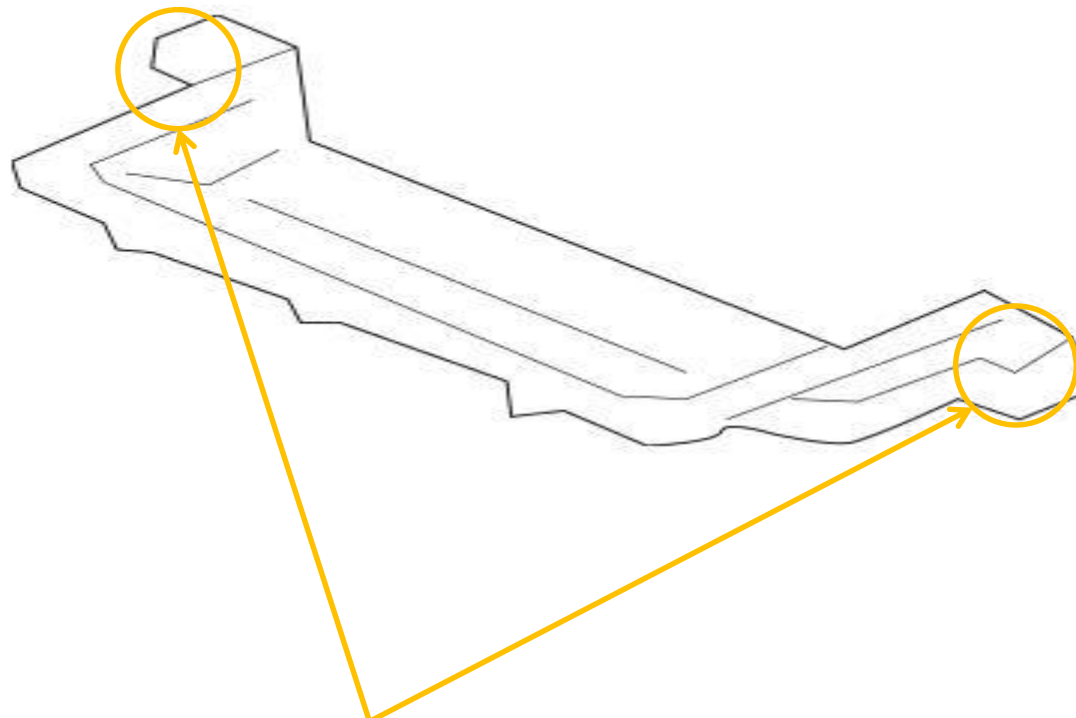


Remove the OEM air shield component by removing the 10mm bolts. This piece will not be reused.



Big Mouth Installation

Slide the big mouth over the opening and attach using the OEM hardware. **Do not cross thread the screws!!!**

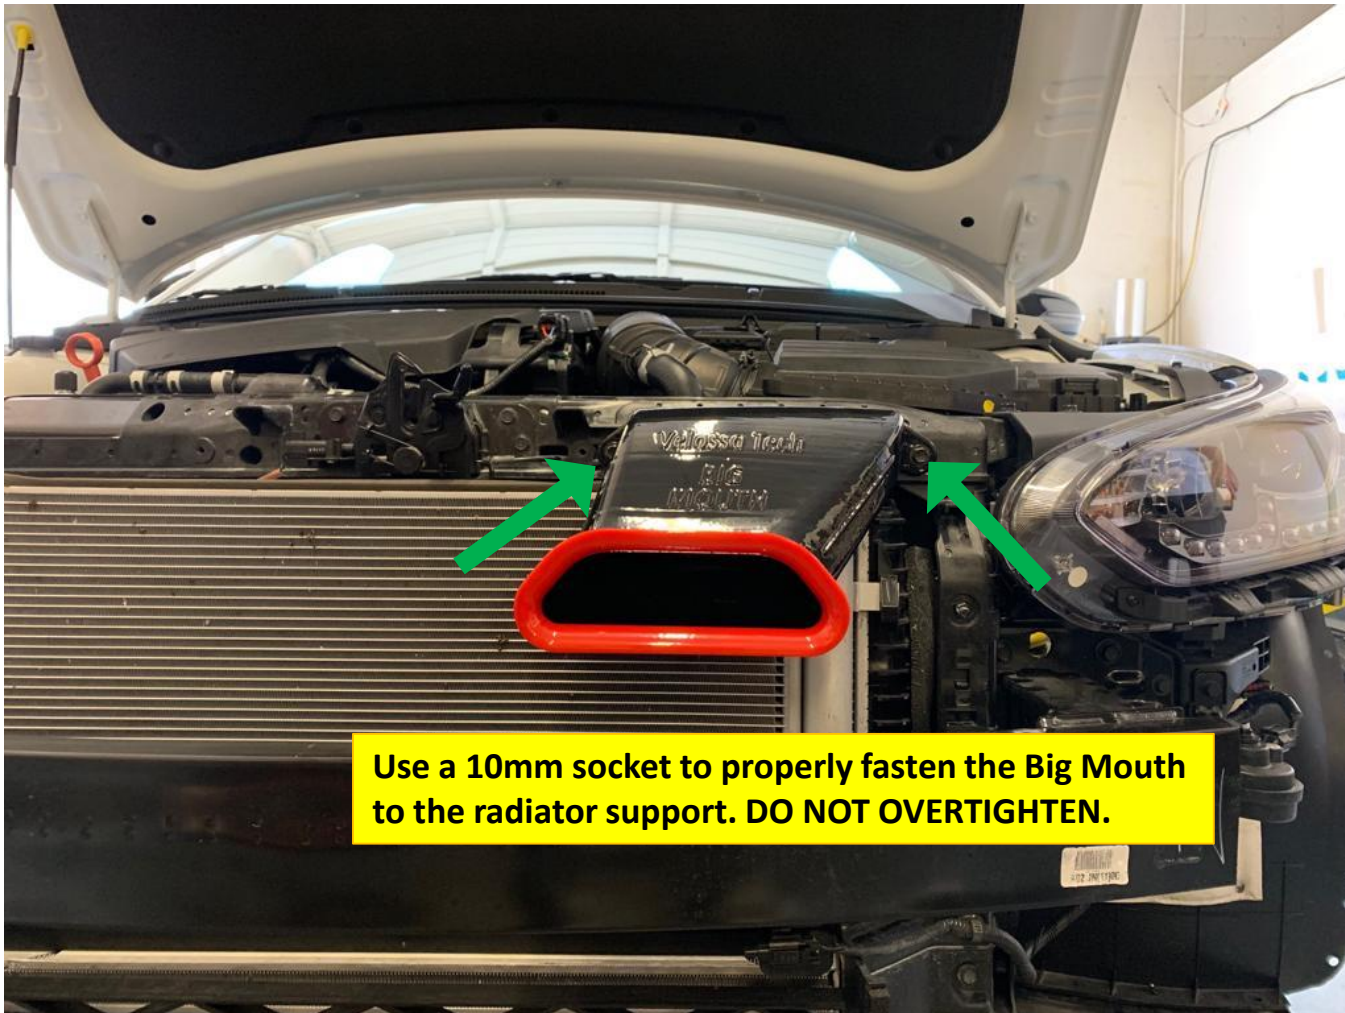

Finalize

Re-install the bumper the same way it was removed and ENJOY!

