



INSTALLATION GUIDE
UltraPlate™



Congratulations on your UltraPlate! You're only a few steps away from hitting the trail.

Installing the RIGd UltraPlate™ to the UltraSwing™

First and foremost if you bought your UltraSwing with a wheel-plate at the second hole down, mount your wheel-plate and be sure the bolts and washers are mounted from the back side, with nuts facing the wheel plate.

(This will ensure maximum clearance for mounting an UltraPlate if needed.)



1. Bolt mounting brackets to the Ultraplate as shown with bracket arms facing downward. Make sure the slots are aligned and hardware is pushed inwards. Take note that when installed correctly you should read the "R" correctly and the button head bolts are on that side while the bracket side reads a backwards "R". (Figures 1 and 2)

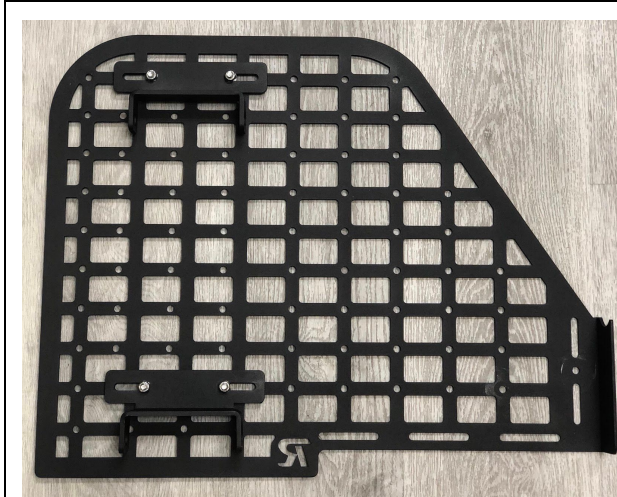


Figure 1



Figure 2

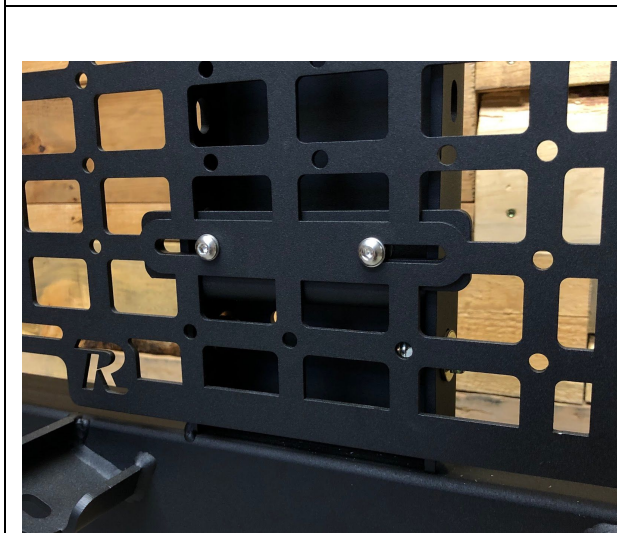


Figure 3

2. Now fit your UltraPlate to the UltraSwing, the brackets should fit inside the channel of the UltraSwing. If needed you can loosen the button head bolts to slide over where needed.

3. Hand tighten the 2 bolts by the handle.



4. Next, hand tighten your 4 remaining bolts into the channel from the outside in.



5. Go back the the 2 bolts by the handle and tighten them with 9/16 wrenches. Follow up with the 4 channel bolts.

Congratulations, your UltraPlate is now installed!