# ASSEMBLY INSTRUCTIONS FOR THE FULL SIZE BED OPTION OF YOUR 1501 CONVERTIBLE CRIB

(PLEASE REFER TO "ASSEMBLY INSTRUCTIONS FOR YOUR 1501 CONVERTIBLE CRIB")

IMPORTANT: PLEASE, READ ALL INSTRUCTIONS BEFORE ASSEMBLING! PLEASE, SAVE INSTRUCTIONS FOR FUTURE USE

DO NOT THROW AWAY THIS INSTRUCTION BOOKLET.



20 Corporation Row, Edison, NJ 08817 Phone (718) 478 5100, Fax (718) 478 5117 www.rominakidsfurniture.com

NOTE: THE STYLE OF YOUR BED MAY VARY FROM WHAT IS PICTURED IN THE INSTRUCTION SHEET

should look like shows how your bed assembly

#### Please locate and confirm that you have the following parts:

BR. bed rails = 2SL. group of support slats assembled with textile ribbons = 2

one bag of hardware with the following:


1. wood screw (1 3/8" or 35 mm) = 8

- 2. Allen bolts (3 7/8" or 100 mm) = 4
- 3. barrel nuts = 4
- 4. Allen wrench = 1
- 5. wooden cap = 8

(2)

Required tools: Allen wrench (supplied), Phillips screwdriver (not supplied). CAUTION: Do not use a power screwdriver which can cause screws to break or strip

 $(\mathbf{1})$ 

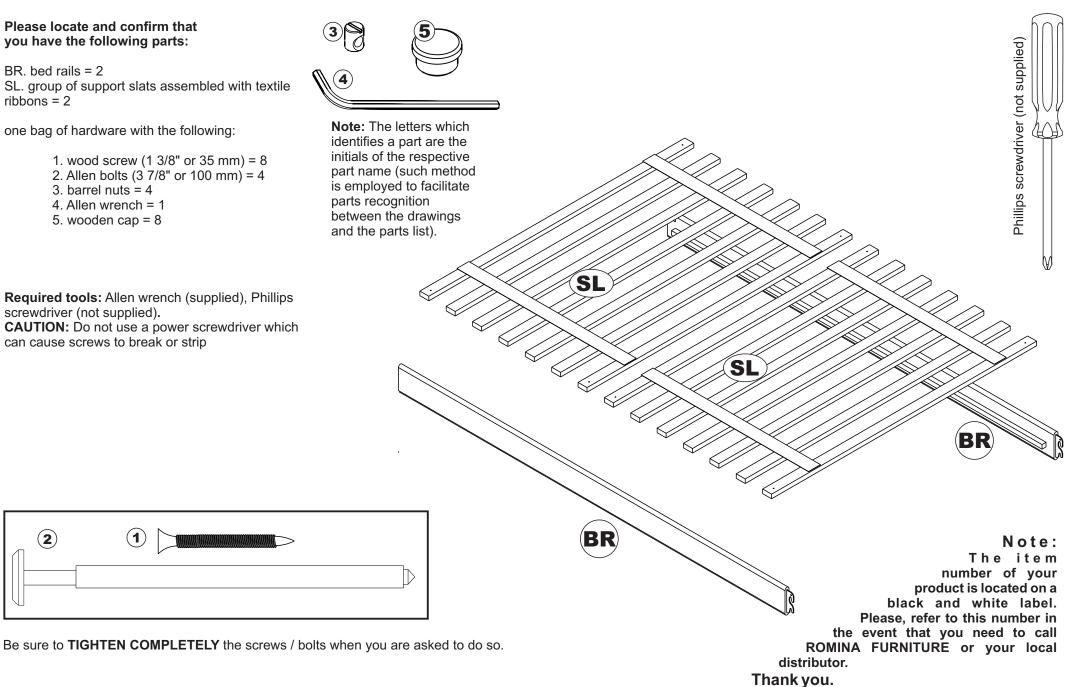

## STEP 1 (Two adults are required to complete this step)

Completely disassemble your crib, taking care not to scratch the wood finish. (see STEPS 4 to 1 from "ASSEMBLY INSTRUCTIONS FOR YOUR 1501 CONVERTIBLE CRIB").

Keep the footboard and the headboard of your crib for the next step and carefully store the other resulted wooden pieces and hardware in a proper place, away from direct sunlight and moisture, taking care not to scratch the wood finish.

# STEP 2 (Two adults are required to complete this step)

Attach the bed rails (**BR**) to the headboard (**HB**) of the crib using all the four Allen bolts (**2**) and all the four barrel nuts (**3**). Make sure that the wood brackets attached to the bed rails faces towards the inside of the bed.

Align the straight slots in the head of the barrel nuts horizontally, so the threads in the bolts will insert in the barrel nuts. You can adjust the position of the barrel nut with a flat head screwdriver (not supplied) or a coin.

Push the Alen bolts through the headboard and into the bed rail. Start the threads by hand to assure you don't strip the threads, then, use the suplied Allen wrench (4). Do not tighten the bolts completely at this step, you will be asked to do that later.

### STEP 3 (Two adults are required to complete this step)

Insert the metallic hooks attached at the ends of the bed rails into the slots provided in the footboard's legs, so the hooks will catch the inner metallic pins. Make sure that both bed rails are firmly attached to the footboard (FB).

Tighten completely all the four Allen bolts.

### STEP 4 (Two adults are required to complete this step)

Place the support slats (SL) onto the wood brackets attached to the bed rails. Position the support slats evenly between the bed ends. Make sure you firmly attach the support slats to the wood brackets using the all the eight wood screws (1) provided. Use a Phillips screwdriver (not supplied) to tighten the screws completely. Use the wooden caps (5) to cover the eight holes from the upper part of headboard and footboard's legs. After completing STEP 4, your bed should look like the one depicted on the first page of this instruction booklet.

Regular cleaning with mild soap on a soft cloth, followed by a clean damp cloth, then a dry cloth, will preserve the original luster and beauty of this fine finish of your Romina Furniture product.

