

INSTRUCTIONS

DIFFICULTY




IN THE BOX

TIME NEEDED: 15 MINUTES

- 1 x Fuse Panel Mounting Bracket
- 1 x Fuse Panel Bracket
- 1 x Bolt kit

TOOLS REQUIRED

- Ratchet/Electric Ratchet
- Trim Removal Tool
- Various Sized Sockets
- Various Sized Spanners
- Allen Keys

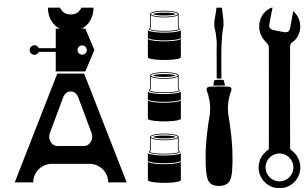

NOTES

Failure to install this product as specified in the installation procedure will void all warranty. If any parts have arrived damaged or were not supplied in the kit, please take photos and then proceed to contact your supplier.

1

Start by removing the 2 plastic clips on the LHS of the vehicle's wiper scuttle panel, these clips can be discarded as they are not needed.

Refer figure 1.

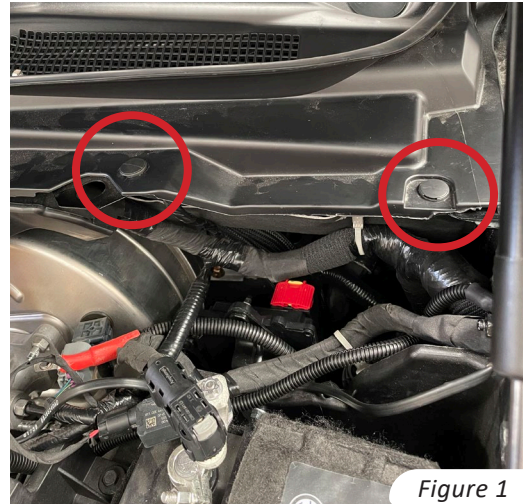


Figure 1

A) Identify the fuse panel mounting bracket and manoeuvre it into place to line up the holes with the previously removed clips.

Refer figure 2.

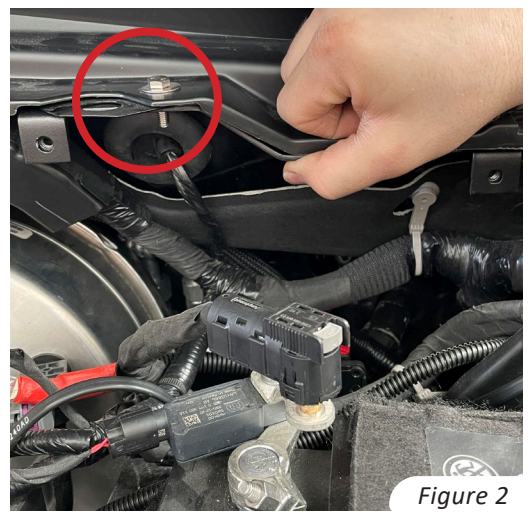


Figure 2

2

B) Loosely fasten the bracket to the scuttle using the supplied M6 hex head bolts, washers and lock nuts in both mounting holes.

NOTE:

Ensure that the large washers are located on top.

Refer figure 3.



Figure 3

C) Tighten both fasteners.

Refer figure 4.



Figure 4

3

A)
Manoeuvre the fuse mounting panel into place and line up the mounting holes with the captive threads on the previously installed bracket.

B)
Secure the panel to the bracket using the supplied M6 button head bolts and washers.

Refer figure 5.

C)
Tighten both fasteners.

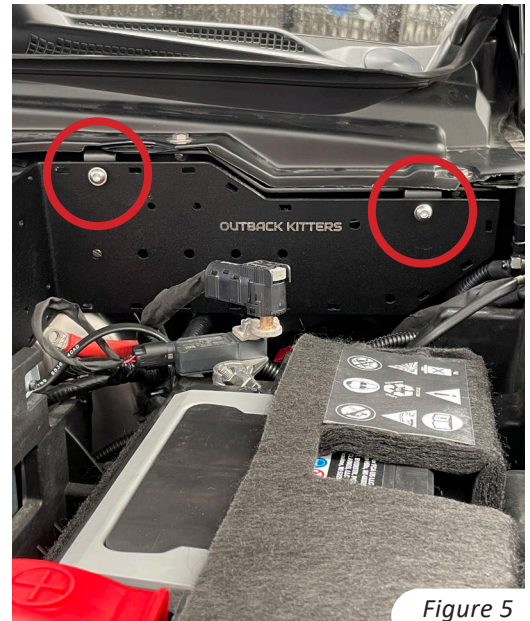


Figure 5

Installation of the RAM 1500 DT Fuse Bracket is now complete.

