

INSTRUCTIONS

DIFFICULTY




IN THE BOX

- 1 x Spacer
- 1 x Bolt/Nut/Washer Fitting Kit
- 1 x Winch Isolator Bracket

TOOLS REQUIRED

- Ratchet/Electric Ratchet
- 10mm Socket/Spanner
- Clip Removal Tool

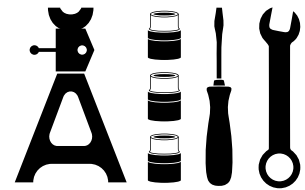

NOTES

Failure to install this product as specified in the installation procedure will void all warranty. If any parts have arrived damaged or were not supplied in the kit, please take photos and then proceed to contact your supplier.



1

Start by removing the 2 clips on the radiator plastic shroud and carefully manipulate the shroud out from the front fender. Retain the clips for later use.

Refer figure 1.

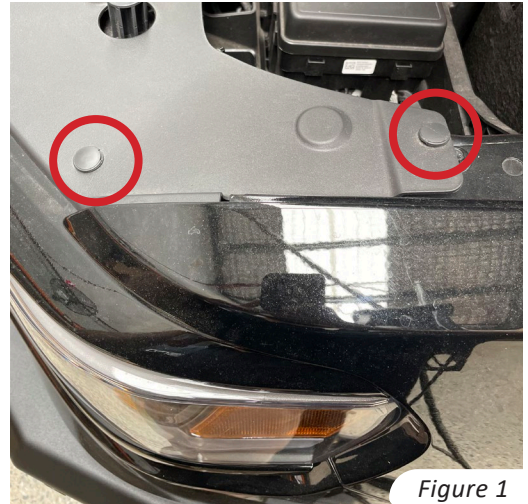


Figure 1

2

Remove the 2 OEM bolts shown and retain the grey bolt securing the headlight for later use.

Refer figure 2.

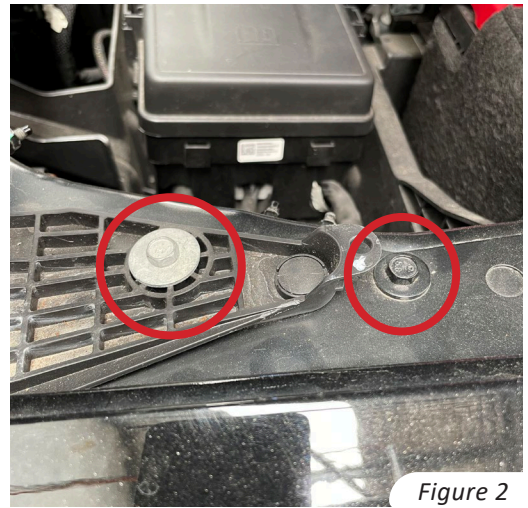


Figure 2

3

Secure the winch isolator bracket to the vehicle using the supplied spacer, M6 bolt, washer and spring washer in the kit along with the OEM bolt removed in the previous step and tighten.

Refer figure 3 and 4.



Figure 3

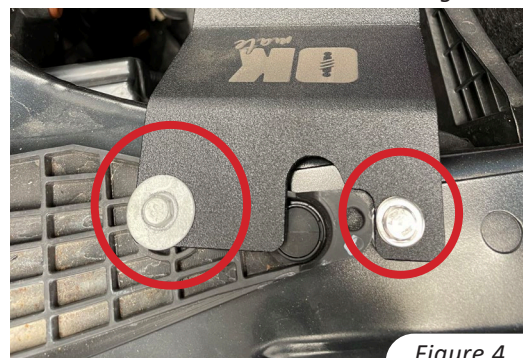


Figure 4

4

Manipulate the plastic radiator shroud back into place and re secure with the clips removed in **step 1**.

Refer figure 5.

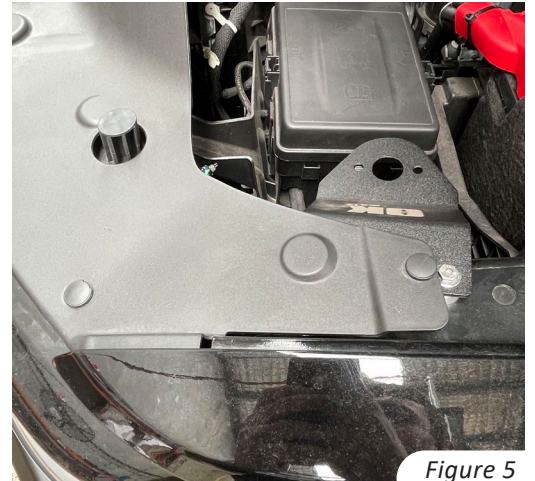


Figure 5

Installation of the RAM 1500 DT Winch Isolator Bracket is now complete.

