

Ash Big Tee Door

Assembly instructions

Hardware is provided with your door. Do not use glue or other hardware in assembly.

Staining and finishing

If staining

- stain door <u>before</u> you assemble it
- assemble and then apply topcoat

If painting

- prime door with shellac based prime
- apply paint

Step 1 – form the "C"




- All joints are lettered
 -make sure you
 match up the
 correct letters.
- You will need the t-25 torx bit supplied.
- A rubber mallet will also come in handy
- Install screws to form a large letter "C"

Step 2 - Assembling the panels and the middle rail.



- Start with the a bottom panels, then use the matching size in the top panel.
- There are 2 skinny panels, use these in the middle on either side of the middle rail.

Step 3 – the middle stile

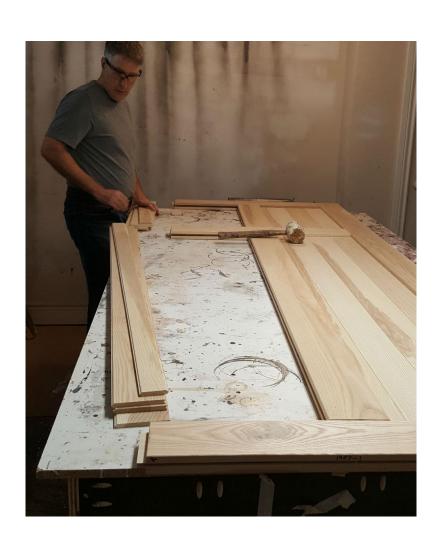

 When you get to the middle rail, simply insert it like it was a panel piece.

Step 4 – fill in the remaining panels



 From the middle continue filling in the panels.

Step 5 – the other side



 When you install the second vertical piece you will need to start at the top. Align the joint and then tap it together with a rubber mallet.

Step 5b – the other side



 Continue to tap the vertical side moving down the door, thus closing the gap at the bottom of the door.

Step 5c – the bottom



 You will need to tap the bottom together with a rubber mallet, and may need to tap the bottom horizontal to get it to perfectly line up.

Step 6 – door is ready for hardware.



 Shoot your screws in and the door will be fully assembled. The holes for your hardware are already drilled at the top.