



# Chevron or Half Chevron Door

## Assembly instructions

Hardware is provided with your door. Do not use glue or other hardware in assembly.

# Staining and finishing


## If staining

- stain door before you assemble it
- assemble and then apply topcoat

## If painting

- prime door with shellac based prime
- apply paint


# Step 1 – lay out your parts

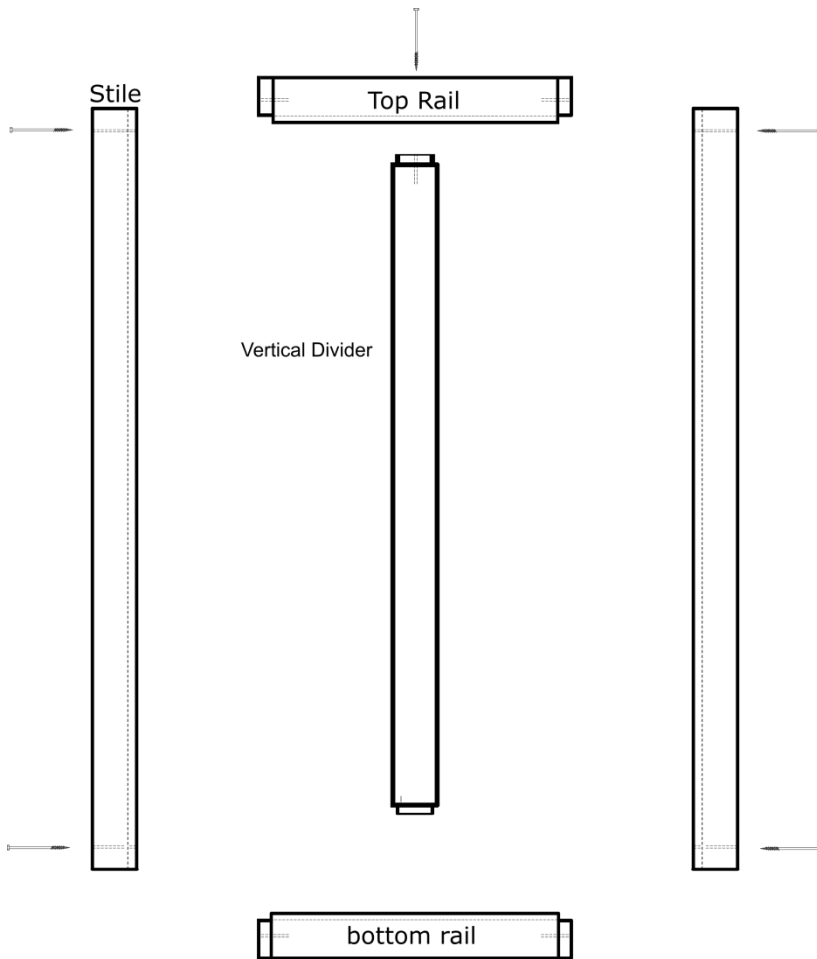


- All joints are lettered – **make sure you line up the correct letters.**
- You will need a t-25 torx bit from your local hardware store.
- A rubber mallet will also come in handy

# Step 2 – form the “T”

- The t is formed by placing the middle stile into the top rail using the dowel as a guide to centering it.

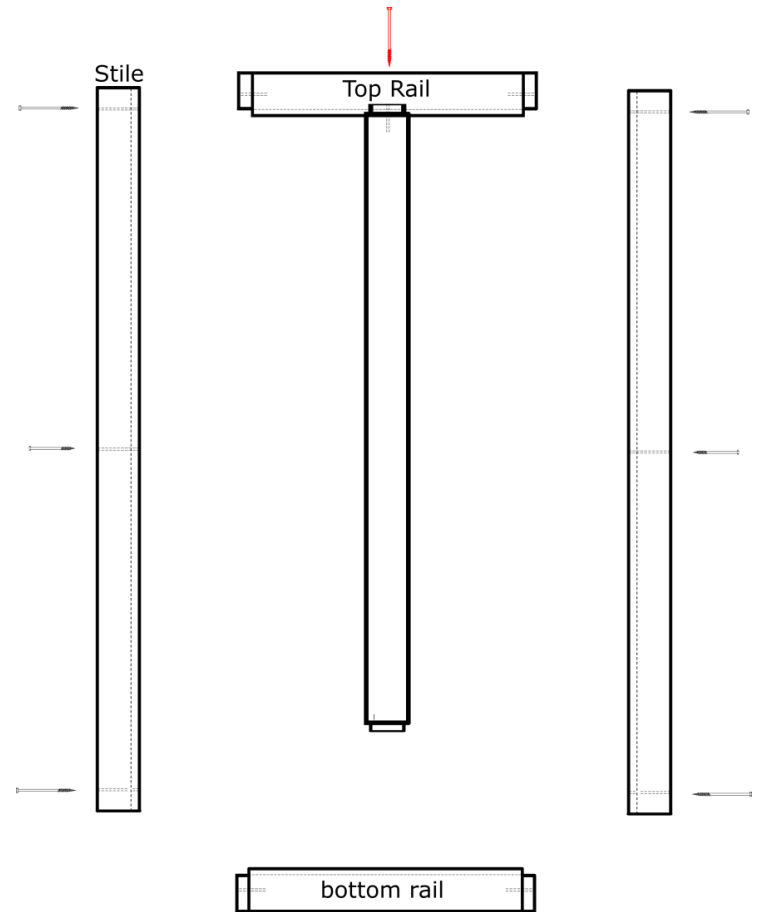

# Step 3 – The Big E

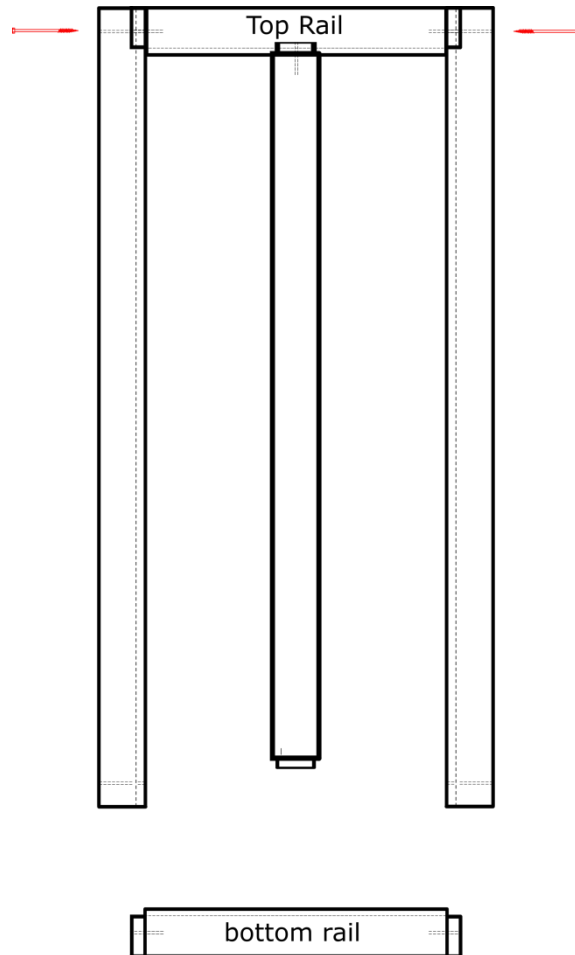

- Next, attach the two side stiles at the top with the supplied torx screws.
- Make sure you line up the letters.

# Step 4 – fill in the top panels




- The top panels will be labelled as “TOP” on each piece. Start in the outside upper corner and install

## Step 5 – the remaining panels

- Assemble the remaining panels in the door.
- Check every 4 panels that the vertical stiles are the same distance apart, as assembling diagonal panels will cause drift.



# Step 6 – the bottom

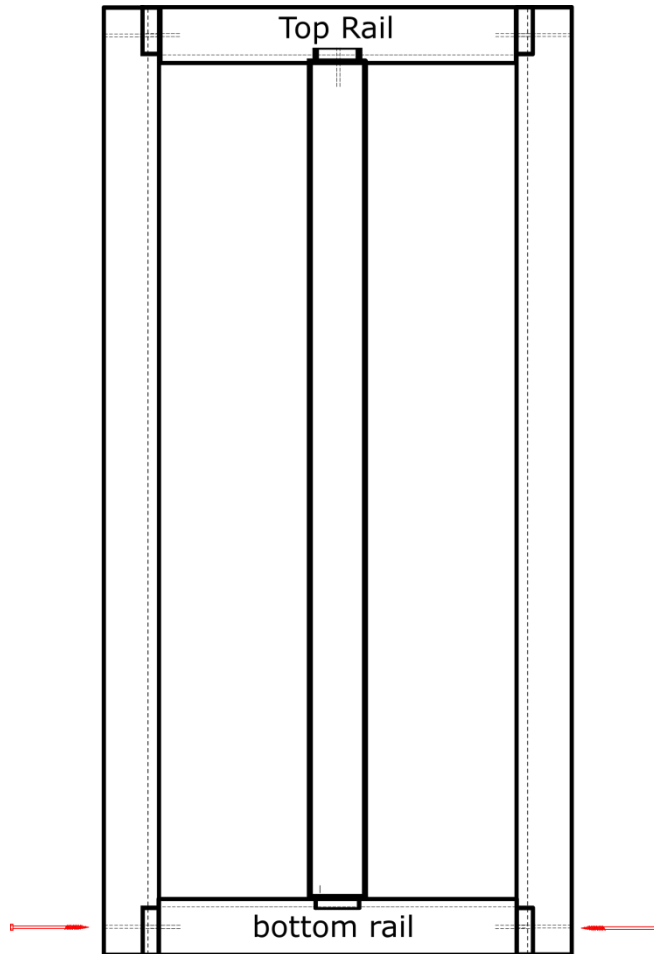

- You will need to tap the bottom together with a rubber mallet, and may need to tap the bottom horizontal to get it to perfectly line up with the dowel on the bottom rail.
- Screw door together with torx screws.



# Step 6 – The door is ready for hardware and install



- You can now mount your hardware and place your door on the rail.