


1. DETERMINE YOUR DOOR HANDING - LEFT HAND OR RIGHT HAND

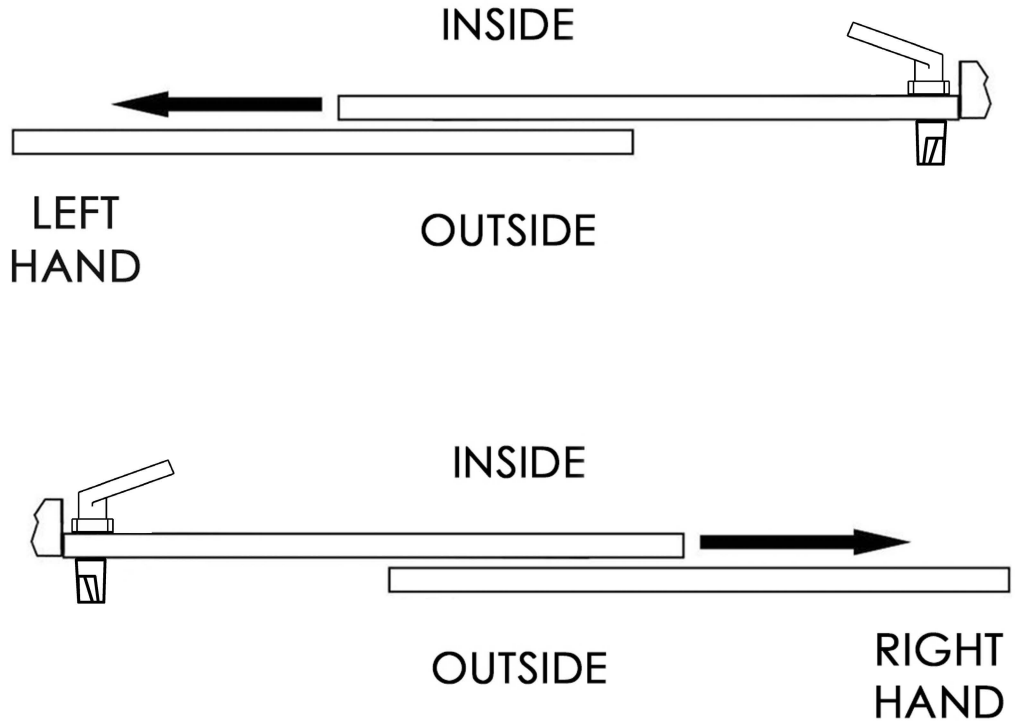

HARDWARE HANDING IS TAKEN FROM THE OUTSIDE OF THE DOOR. THE EASIEST WAY TO DETERMINE THE CORRECT HANDING IS TO NOTE WHICH DIRECTION THE DOOR SLIDES. FOR EXAMPLE, IF THE DOOR SLIDES TO THE **LEFT** WHEN OPENING, THE DOOR IS **LEFT HAND**.

2. INSTALL THE KEY CYLINDER ACCORDING TO YOUR DOOR HANDING SO THAT IT MATCHES THE PICTURE BELOW. SECURE THE KEY CYLINDER WITH THE SCREW AND BRACKET PROVIDED.

