



**1. Door Prep • Prepare la Puerta**

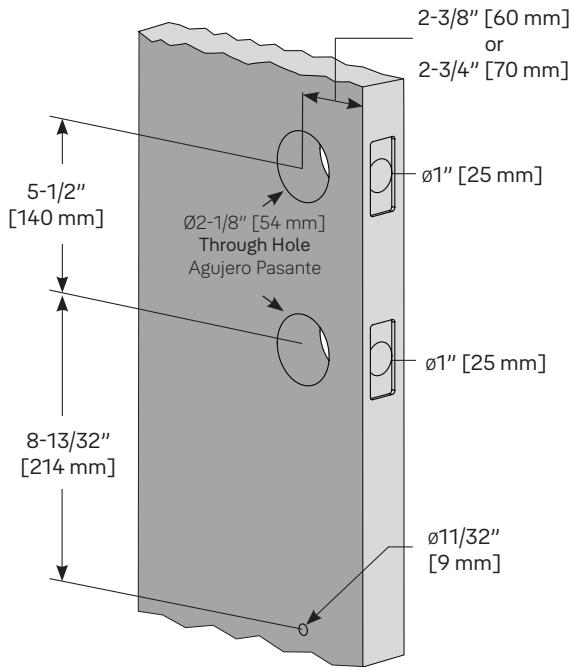


**2. Select Proper Backset • Seleccione distancia apropiada**


**DEADBOLT LATCH**  
PESTILLO CERROJO

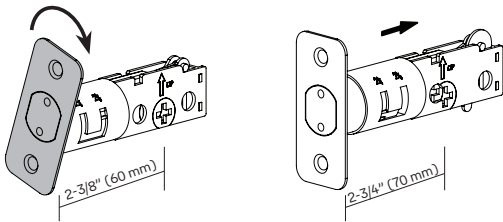


**PASSAGE LATCH**  
PESTILLO PASAJE

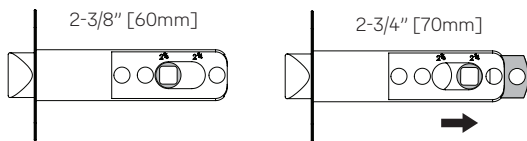


**3. Install the Latch, Strike, and Dust Box • Instale el pestillo, las placas, y caja antipolvo**

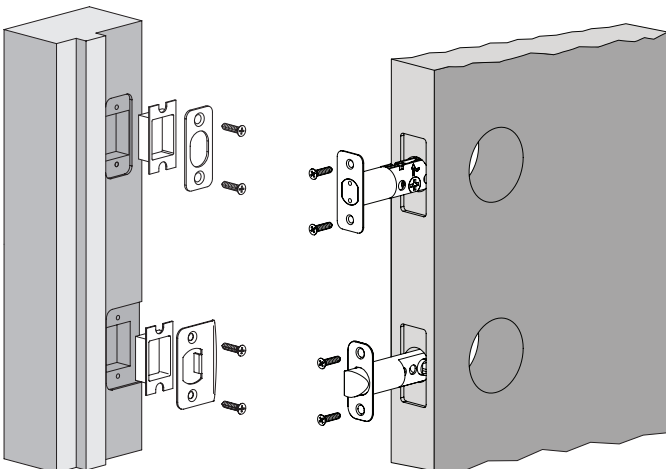

**4. Install Deadbolt • Instale el Cerrojo**

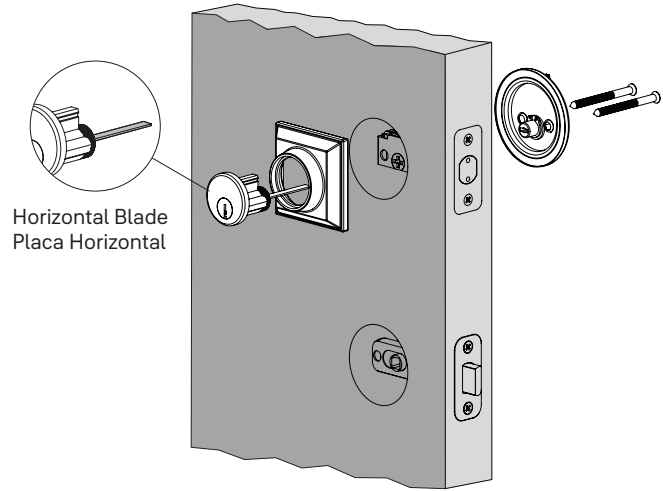

**5. Install Exterior Handle and Interior Knob/Lever • Instale la manija y la perilla/manija interior**

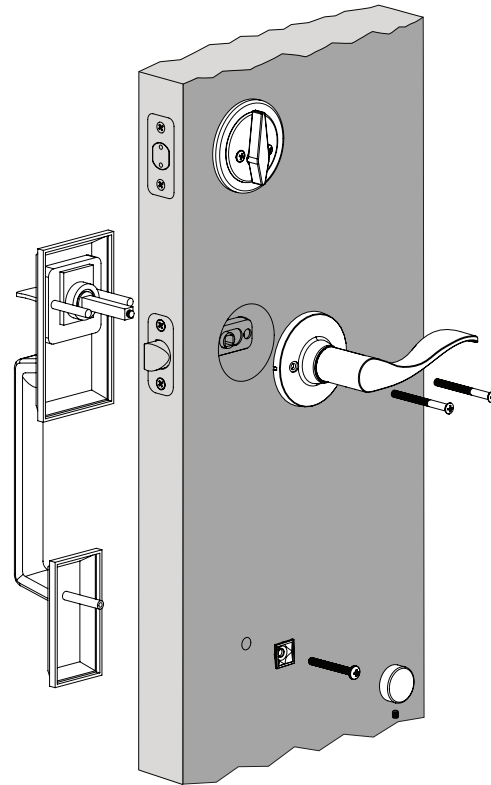

600 Baldwin Park Blvd., City of Industry, CA 91746  
yalehome.com 1-800-356-2741

© Copyright 2020. All rights reserved.  
Reproduction in whole or in part without the  
express written permission of ASSA ABLOY  
Residential Group is prohibited.