



INSTALLATION GUIDE

3/4" THERMOSTATIC SHOWER VALVE TRIM ONLY

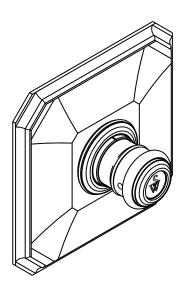


Installation tools that may be needed:








TMO Shower Valve Trim Installation

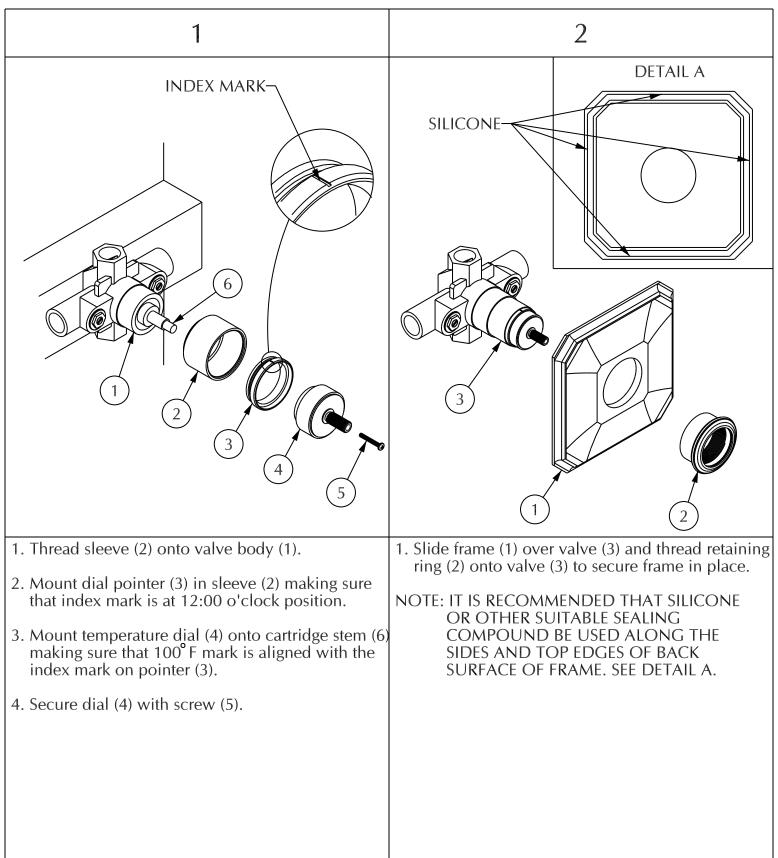

TMO Shower Valve Trim Installation

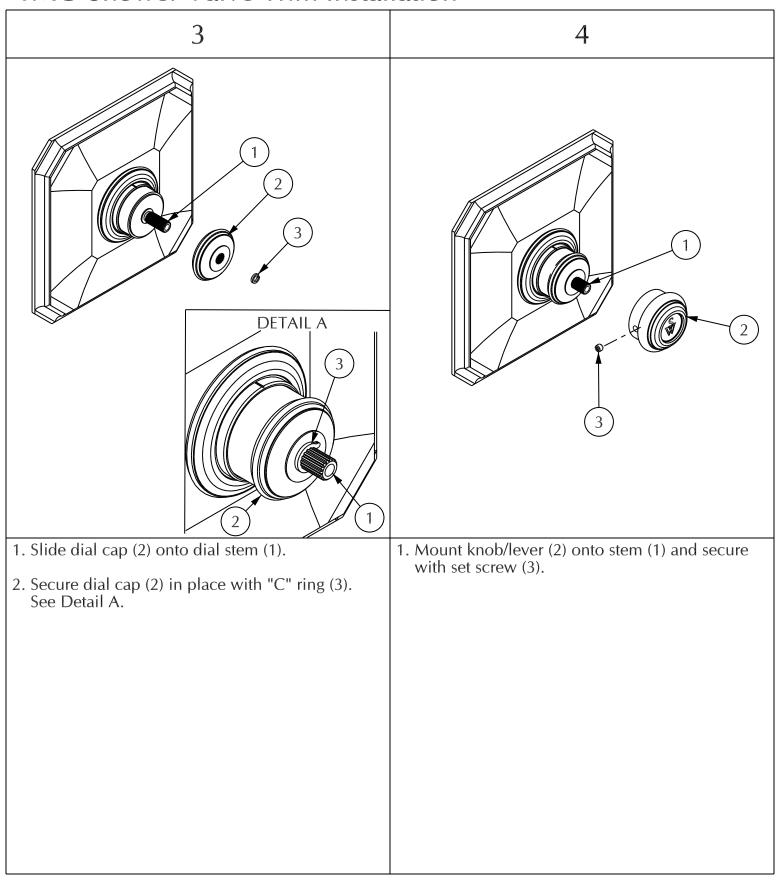

Extension Kit Installation

For 1" Extension For 2" Extension For 3" Extension For additional extension, 1" kits can be combined to create a 2" extension or 3" extension. 1. Remove trim per the trim installation guide. 2. Mount cartridge extension (4) on broached hub (2) of thermostatic cartridge. 3. Mount cartridge stem extension (5) onto stem (3) of thermostatic cartridge. 4. Screw sleeve extension (6) onto valve body (1) until it bottoms out. 5. Reinstall trim per valve trim installation using screw (7) to secure temperature dial of trim.


TMO Shower Valve Trim Parts List

Item	Part Number	Description
1	10868*	Harrison Frame
2	15250*	Square Knuckle Frame
3	13207*	Acanthus Frame
4	13208*	Ribbon & Reed Frame
5	14804*	Filigree Frame
6	13209*	Bamboo Frame
7	15251*	Reeded With Rosette Frame
8	10923*	Grey Frame
9	12456*	Sleeve
10	12460*	Dial Pointer

Item	Part Number	Description
11	12461*	Temperature Dial
12	12464	M4X30mm Screw
13	12462*	Temperature Dial Cap
14	12463	Clip
15	12442*	Face Plate Retaining Ring
	13210*	Plain Knob with SW Logo
16	13211*	Knurled Knob with SW Logo
	13212*	Acanthus Knob with SW Logo
17	12465	10-32X.375 Set Screw

* SPECIFY FINISH WHEN ORDERING

* SPECIFY FINISH WHEN ORDERING

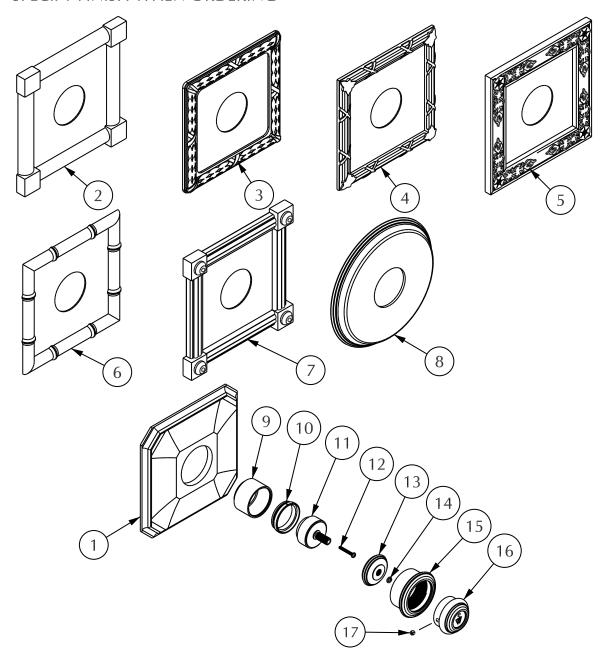

Page 5 12546 Rev A