




INSTALLATION GUIDE

RAIN DOME - MODERN 12"

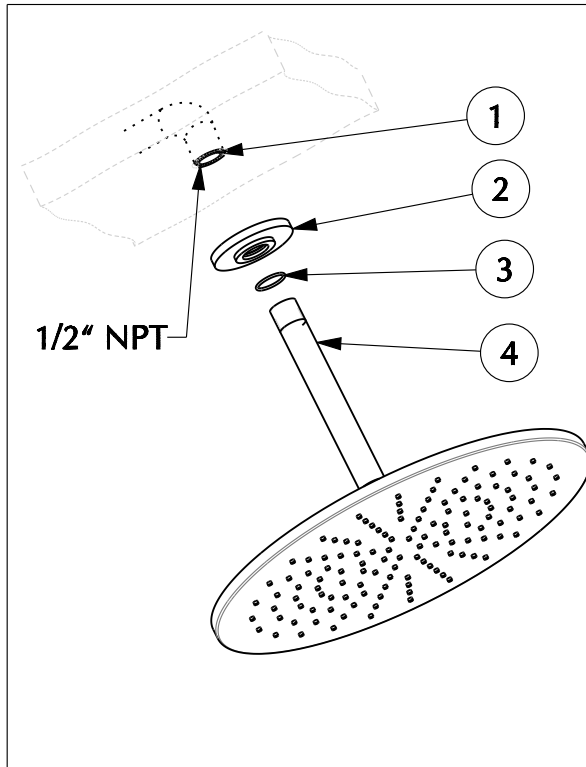

1. Make sure that o-ring (3) is properly seated into escutcheon (2). Slide escutcheon (2) onto rain dome (4).
2. Thread rain dome (4) onto 1/2" NPT male connector (1 - not included) in ceiling and wrench tighten. Use teflon tape for sealing as needed. Female connector (1) to be recessed approximately 1/2"[13mm] from finished ceiling surface.
3. Slide escutcheon (2) up until bottom surface of escutcheon is against ceiling.

Installation tools that may be needed:

