

Part 1: For users who have your own Non-PVR videos on you own MicroSD card


1. Transcode your own videos into PVR format videos.




Step 1: Connect your MicroSD card to your Mac via a card reader.



Step 2: Download the Transcode Tool (WonderMini) onto your Mac through this link:


<https://1drv.ms/u/s!AgjII99QmyEDgnhFcCObNcGbLQxE>

Step 3: Follow the steps as below:

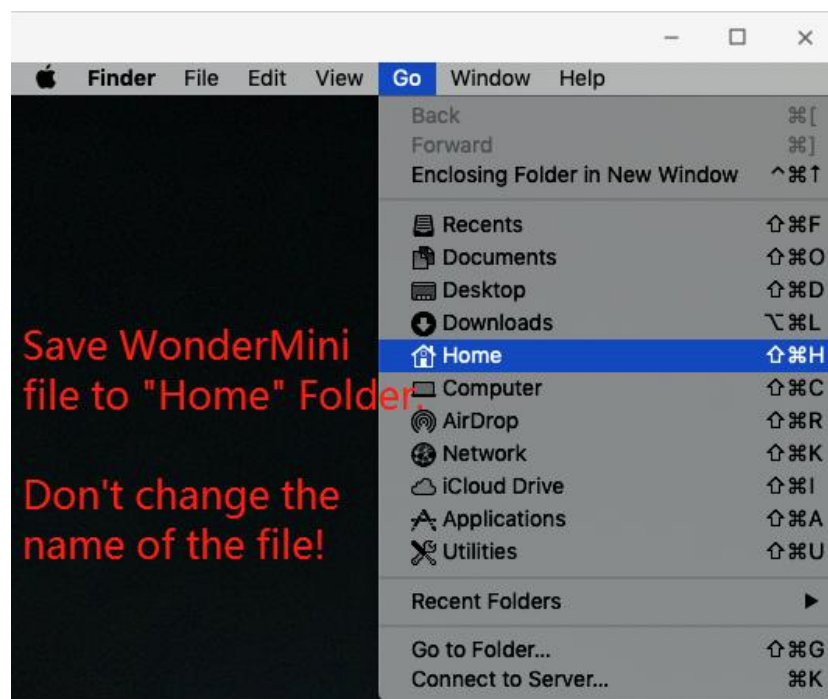

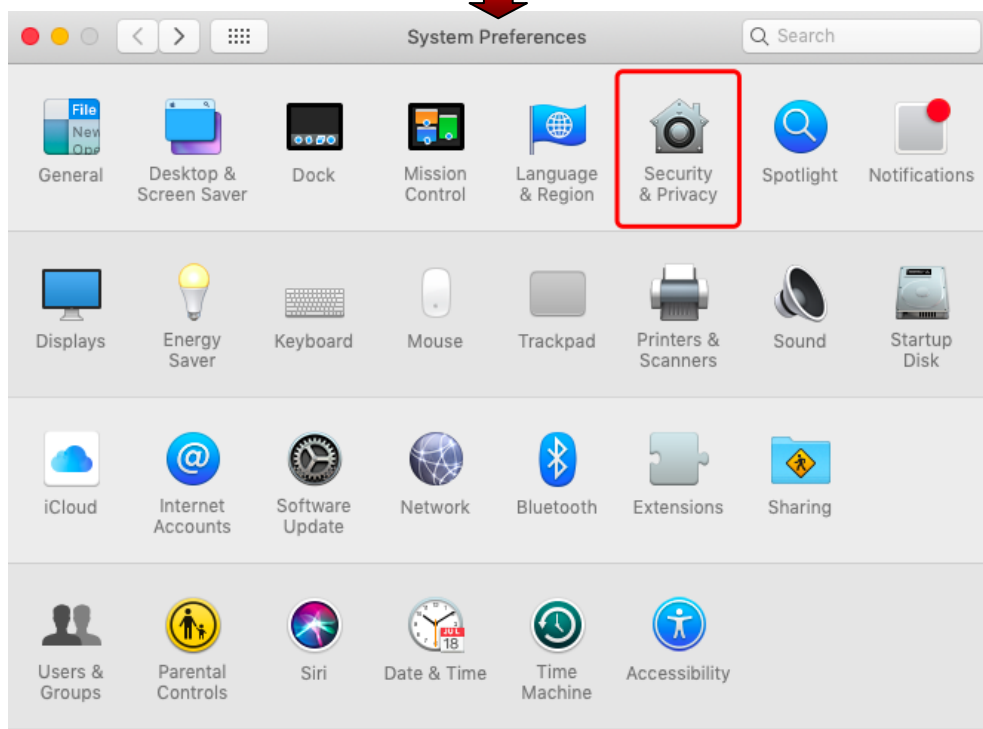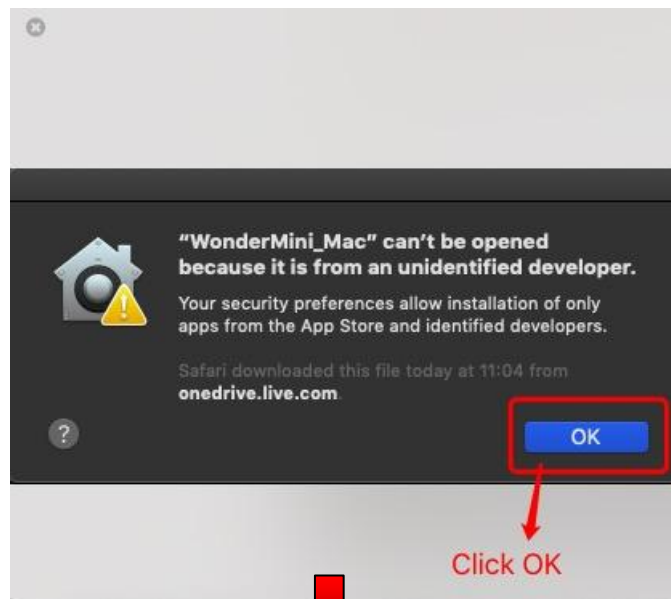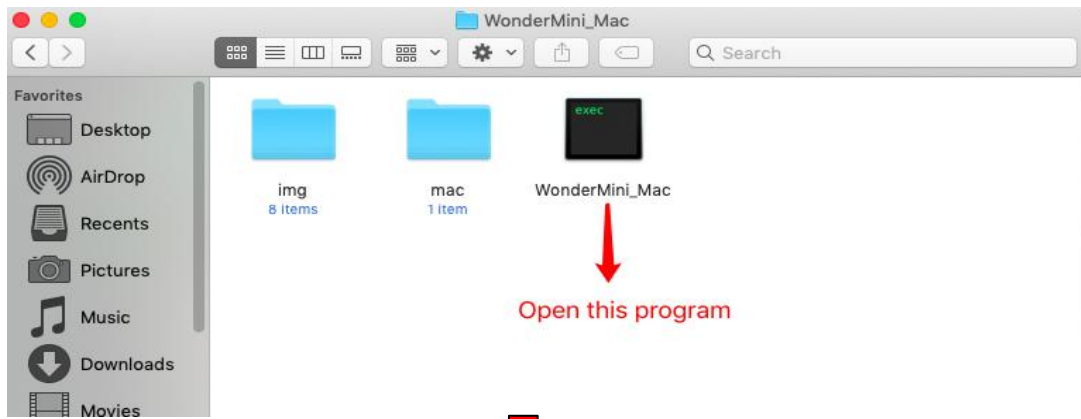

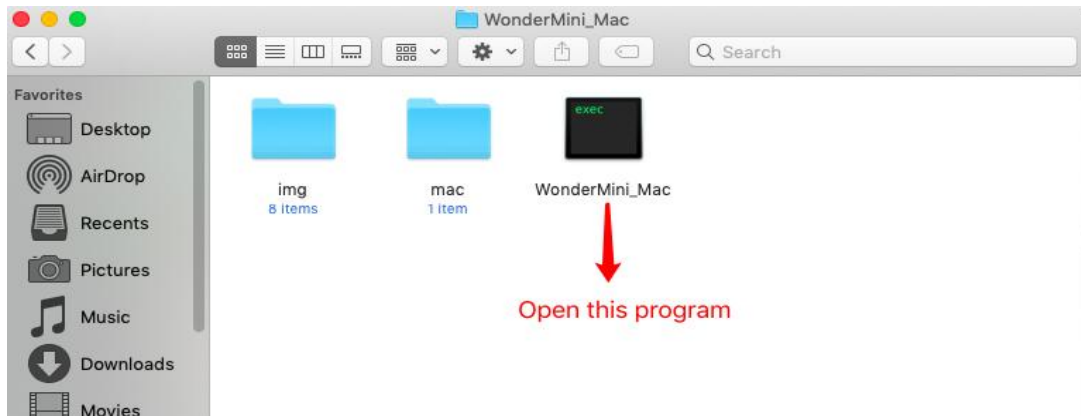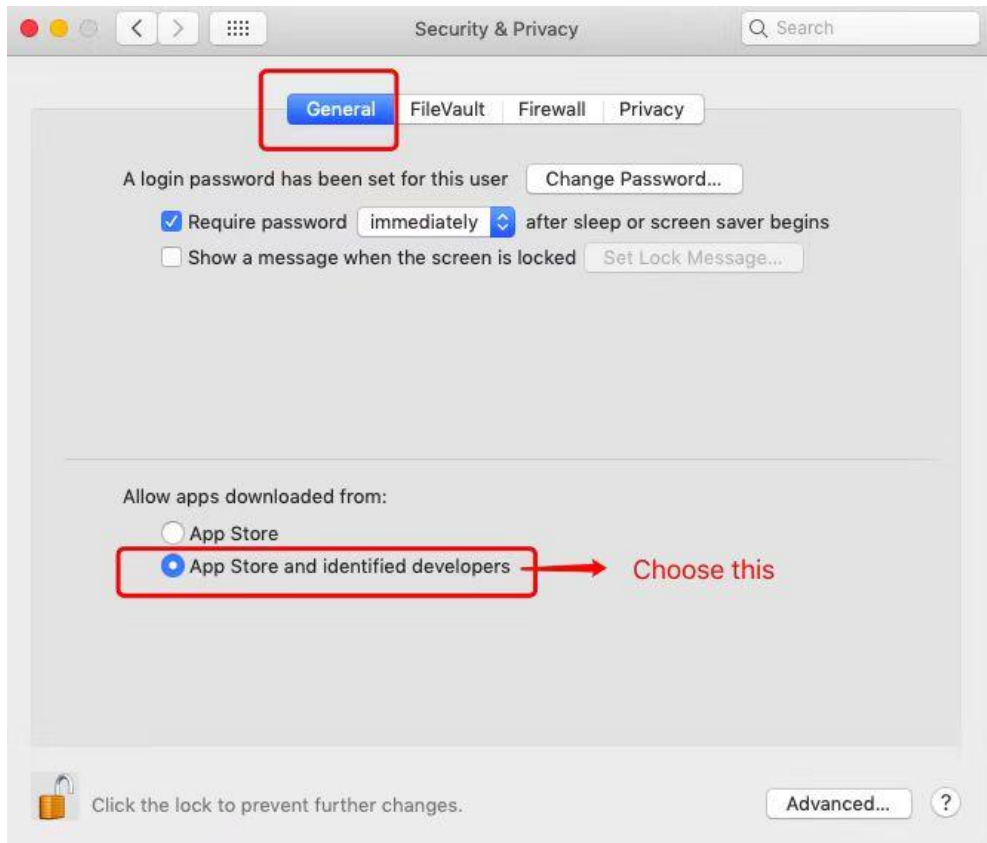

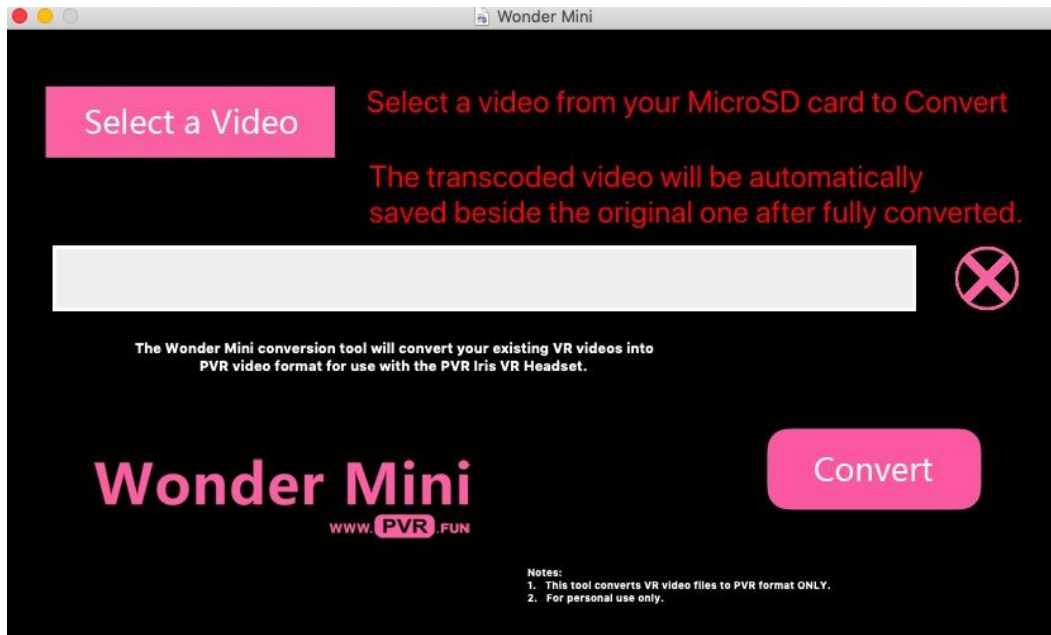

Don't close this window during transcoding !!



Make sure to move both videos onto your Mac, as your MicroSD card is required formatting in the next step.

2. Format your SD card (Class 10 UHS-III, read speed 100mb/s, write speed 60mb/s MicroSD card highly recommended)

Step 1: Connect the SD card to your computer via a card reader.

Step 2: Format the SD card into extFat format.

Step 3: Remove the SD card from your computer and insert it into Iris headset and power it on.

Step 4: If it is your first time to set up the headset, then follow the setup guide to complete the process; If you have already set up the headset, skip to Step 5.

Step 5: Make sure the headset detects your SD card.

Step 6: Connect the headset to your computer via USB cable.

Step 7: You will see a folder named “pvr” on your SD card/Iris, if not, create one yourself.

Step 8: Now you can copy all the transcoded video files from your computer to this SD card on Iris. Click on these videos to directly watch on Iris.