




Transcode your own videos into PVR format videos.



Step 1: Download the Transcode Tool (WonderMini_Mac) onto your Mac through this link:


<https://1drv.ms/u/s!AgilI99QmyEDgnhFcCObNcGbLQxE>

Step 2: Follow the steps as below:

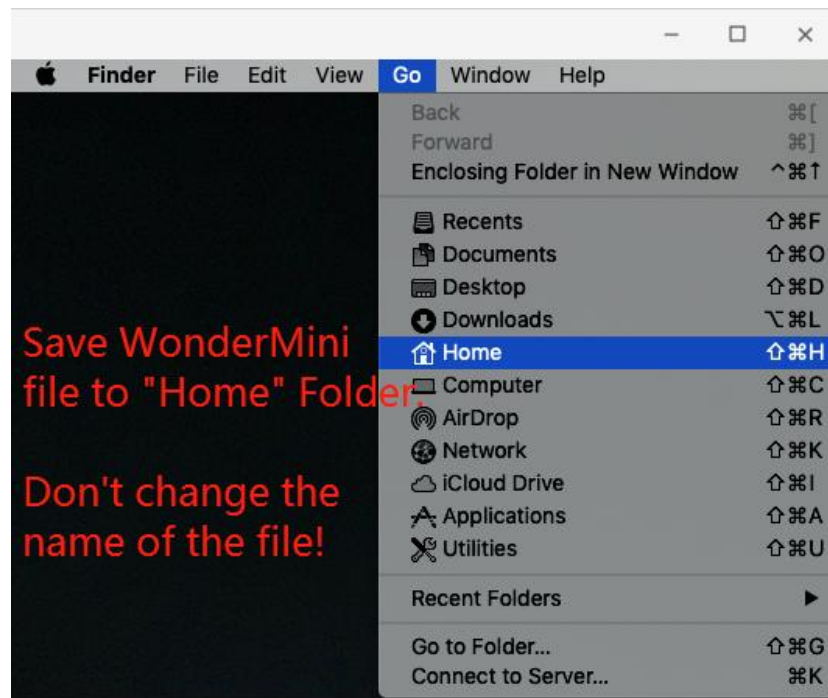

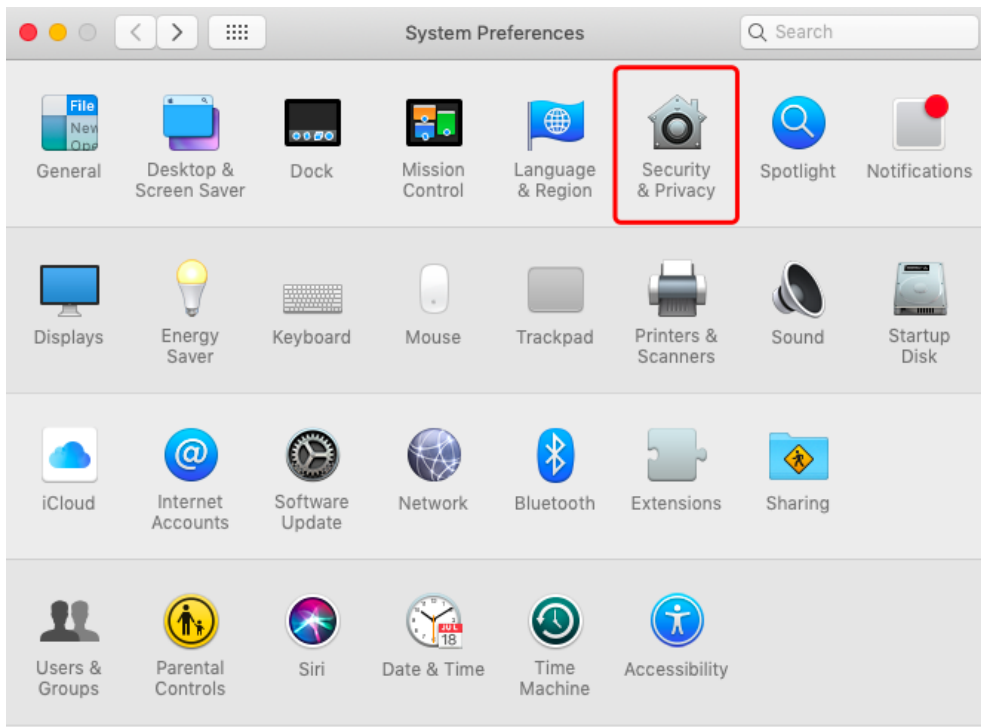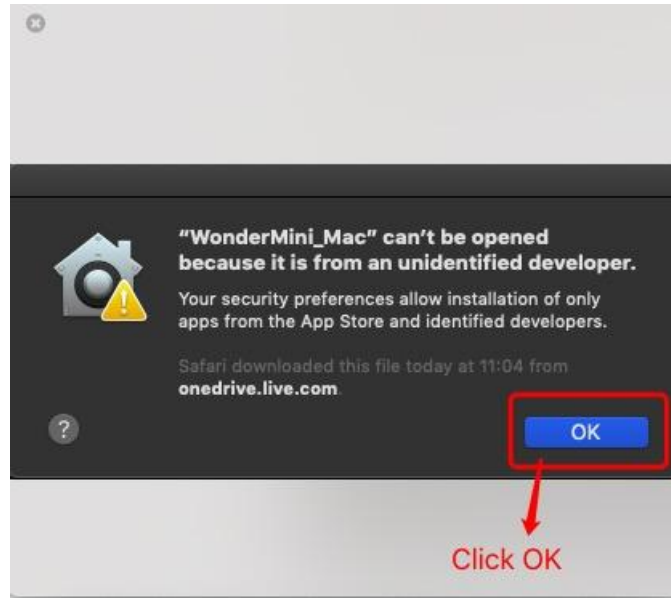

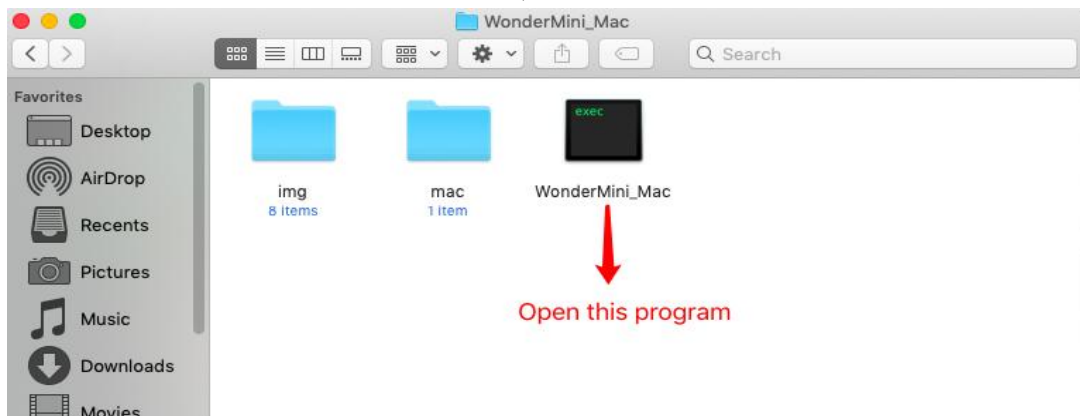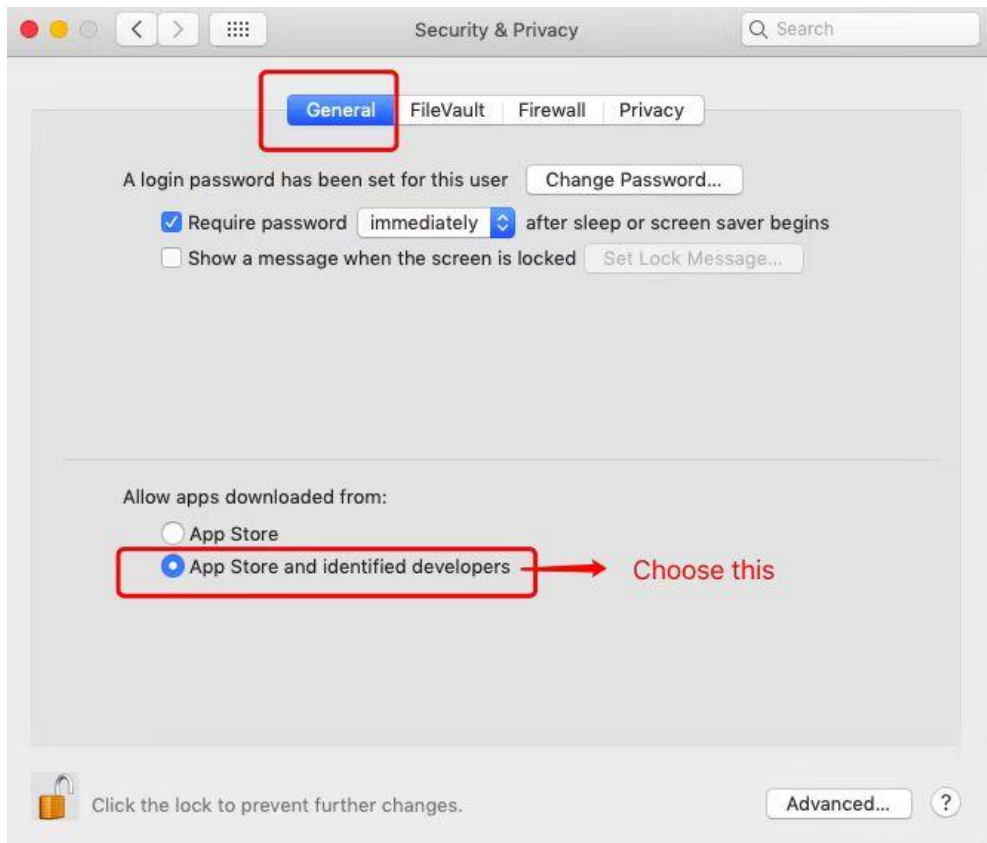

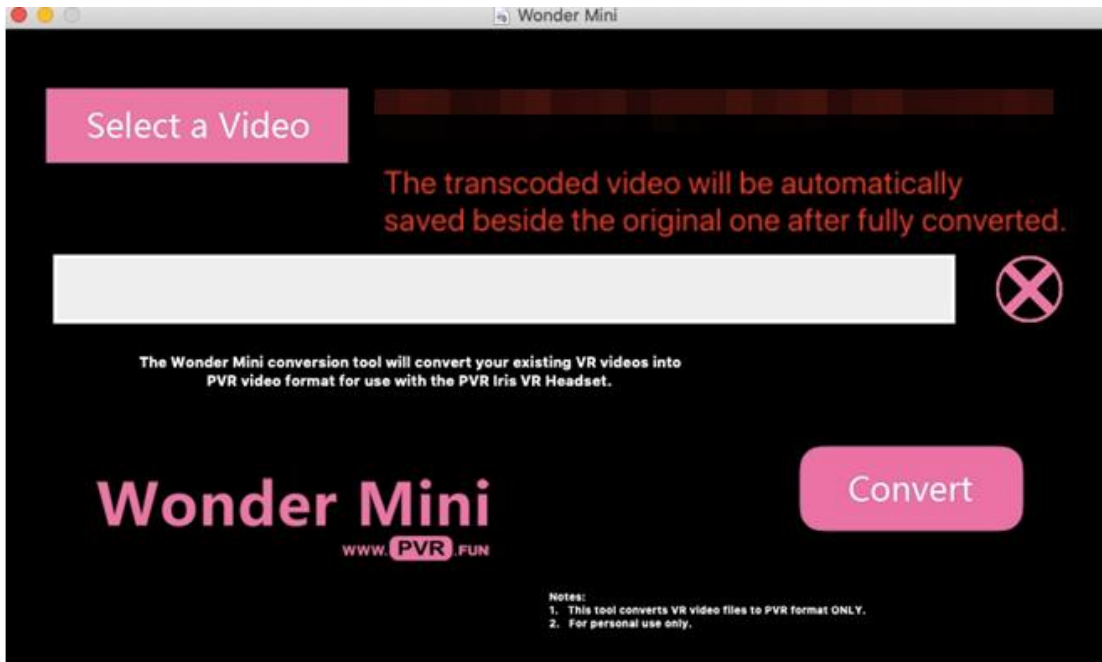

Don't close this window during transcoding !!





Step 3: Connect the MicroSD card to the Mac via a card reader, and save the **transcoded** videos into the folder “**pvr**” of this card.

Step 4: Plug the card off the Mac and insert it into the IRIS. Now you are ready to play the videos in IRIS directly on SD card section.