


Wall Mounting Shadowbox Swingframes

Back View of Swingframe Shadowbox



Wood Z-Bar

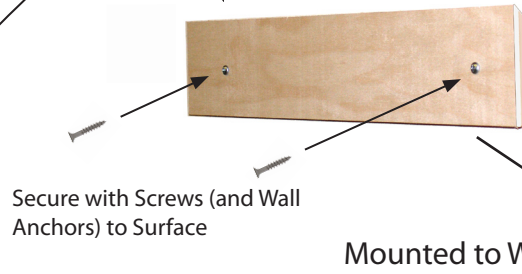

Side View

Lift Shadowbox and Slide over Z-Bar That's Secured to Wall

Screw Through Wood Z Bar onto wall

Front View of Swingframe



Step 1

Measure where you want the top of the frame to be positioned. Drill holes in wall for Wood Z-Bar. Secure Wood Z-Bar to the wall using screws and wall anchors provided.

Step 2

Slide and place Swingframe Shadowbox onto mounted angled Wood Z-Bar carefully. Open front frame. Mark holes through bottom metal bracket with pencil. Remove Shadowbox from wall, drill holes and insert anchors into wall.

Step 3

Replace Shadowbox over Wood Z-Bar. Open frame door. Insert screws through the bottom metal bracket holes and secure into wall anchors with screwdriver. Close frame.

Simple hand tools required: Level, Pencil, Drill, Phillips Head Screwdriver