



### Two Color Finish SNAP OPEN FRAME

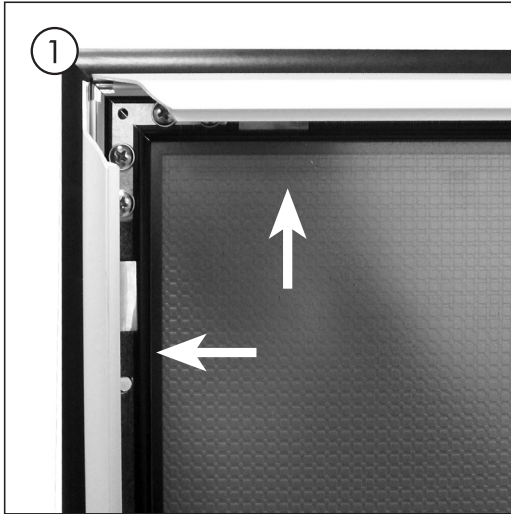

- Open all profiles upwards.

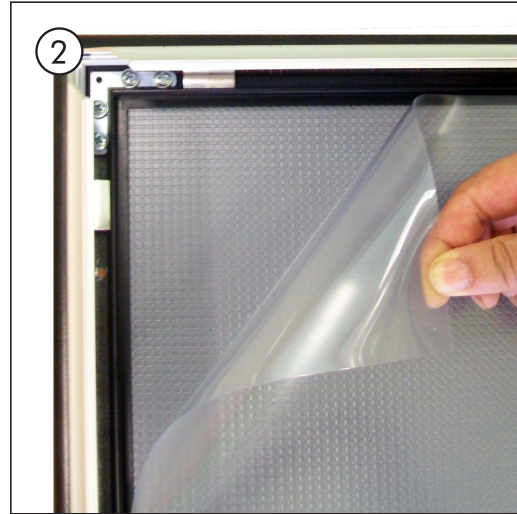

- Take-off the anti-reflex cover.



- Place the poster in.
- Poster einlegen.
- Posteri yerleřtirin.



- After placing the cover back on the poster, close the profiles downwards.