


Wall Mounting Letter Board Swingframes

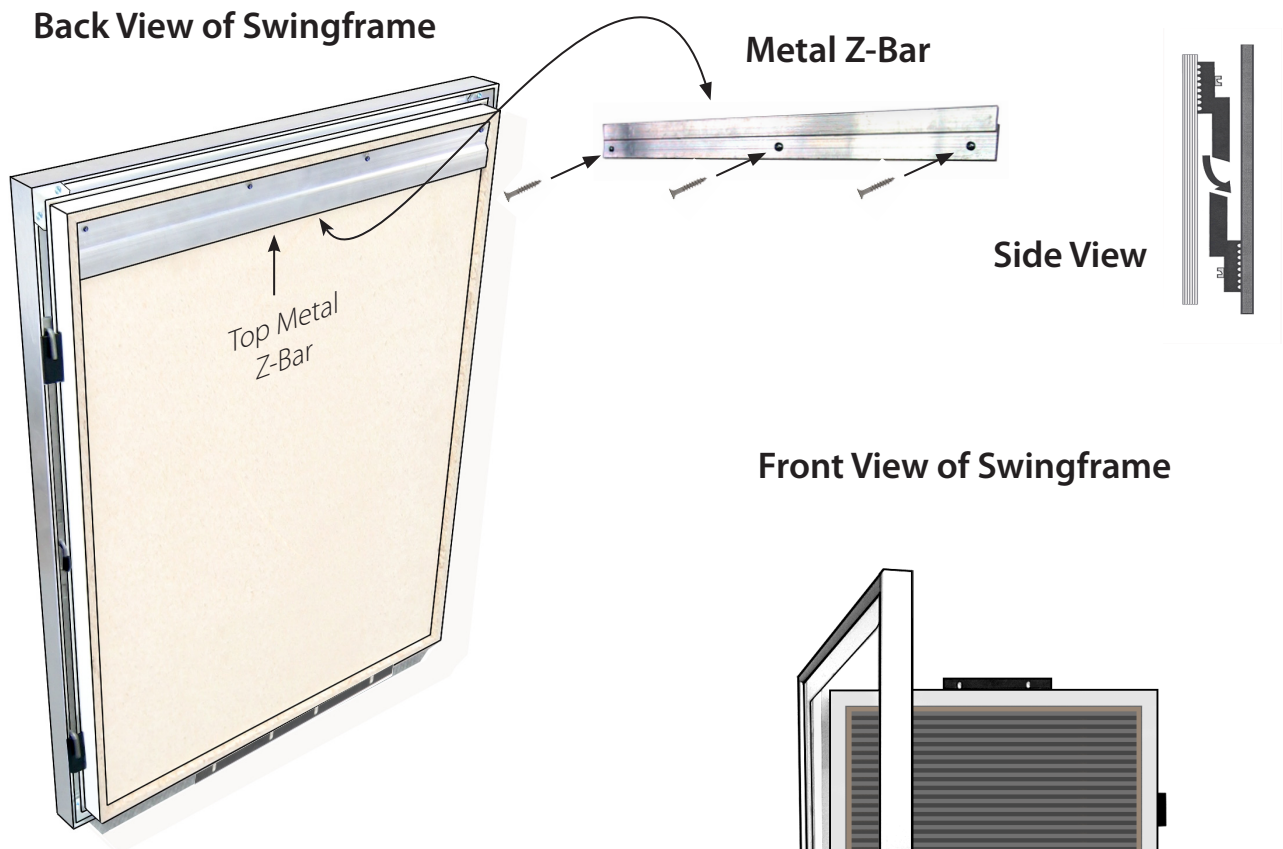

Step 1

Measure where you want the top of the frame to be positioned. Drill holes in wall for Metal Z-Bar. Secure Metal Z-Bar to the wall using screws and wall anchors provided.


Step 2

Place Swingframe onto Metal Z-Bar. Mark Hanging Bracket holes with pencil. Remove Swingframe from wall, drill holes and insert wall anchors.

Step 3

Replace Swingframe over Metal Z-Bar. Insert screws through the Hanging Bracket and secure into wall anchors with screwdriver.

Simple hand tools required: Level, Pencil, Drill, Phillips Head Screwdriver

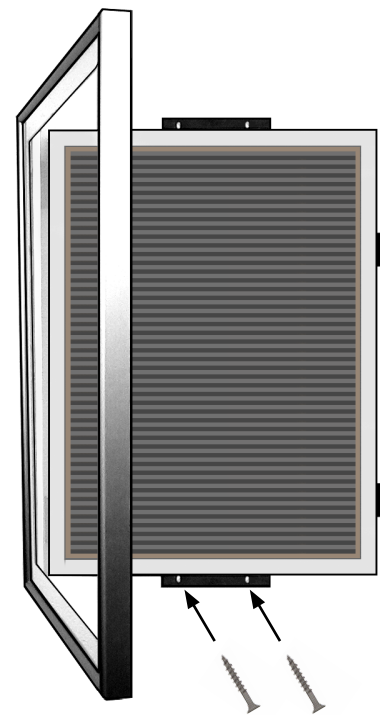

Insert screws through
Hanging Bracket and
secure into wall anchors