


Instruction Sheet


Snap Frame with Matboard Poster Change Instructions



Step 1:
Snap Open the Snap Frame to
Change the Graphic

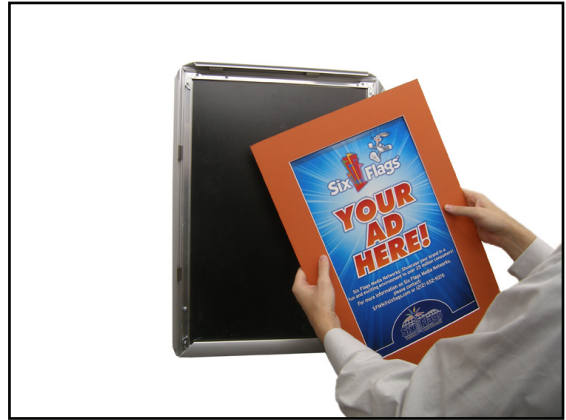

Step 2:
Remove the Clear Overlay and
Matboard from the Frame

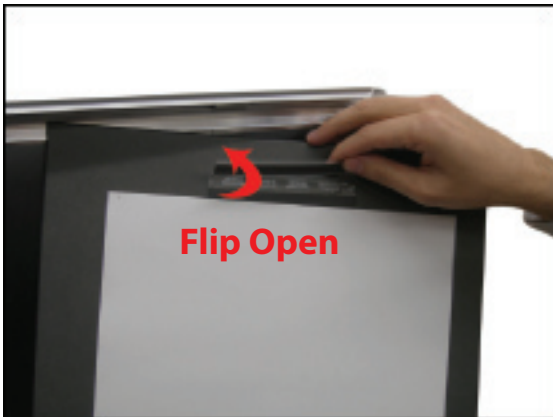

Step 3:
On the back of the Matboard Flip Open
the Magna-Clamps to Remove and
Replace your Graphic Insert





Step 4:
Place the Matboard and Clear Overlay
back into the Snap Frame



Step 5:
Snap all 4 Frame Sides Down.
Your Poster Change is now Complete!

Wall Mounted - Snap Frame Front Loading Poster Frames

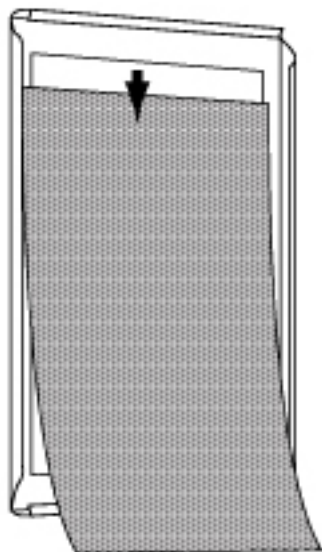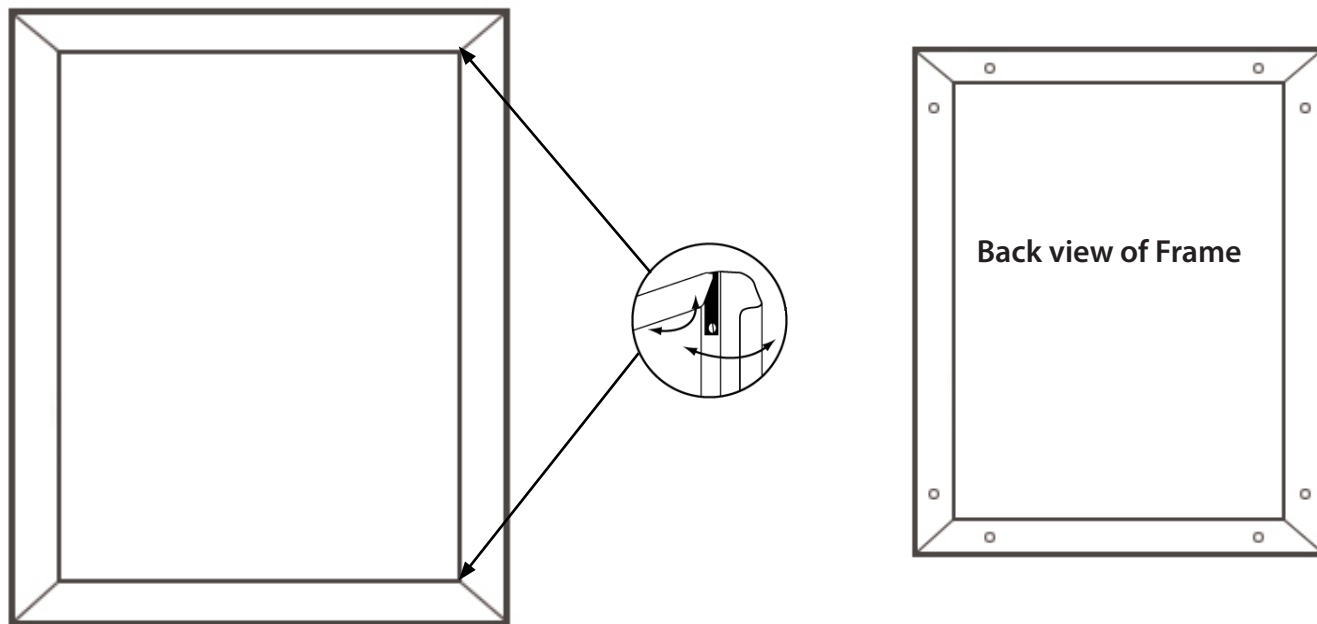

Step 1

Open all four frame edges

Step 2

Mark Hanging holes with pencil. Drill holes.

Step 3

Replace SwingSnap over holes. Insert screws through the holes and secure into wall with screwdriver.

Step 4

Insert poster into cavity and make sure it is centered. Close the top frame edge.

Step 5

Snap rest of corners down, making sure they are aligned at the corners