


## Instruction Sheet

### Wall Mounting - Indoor Letter Board Swing Cases

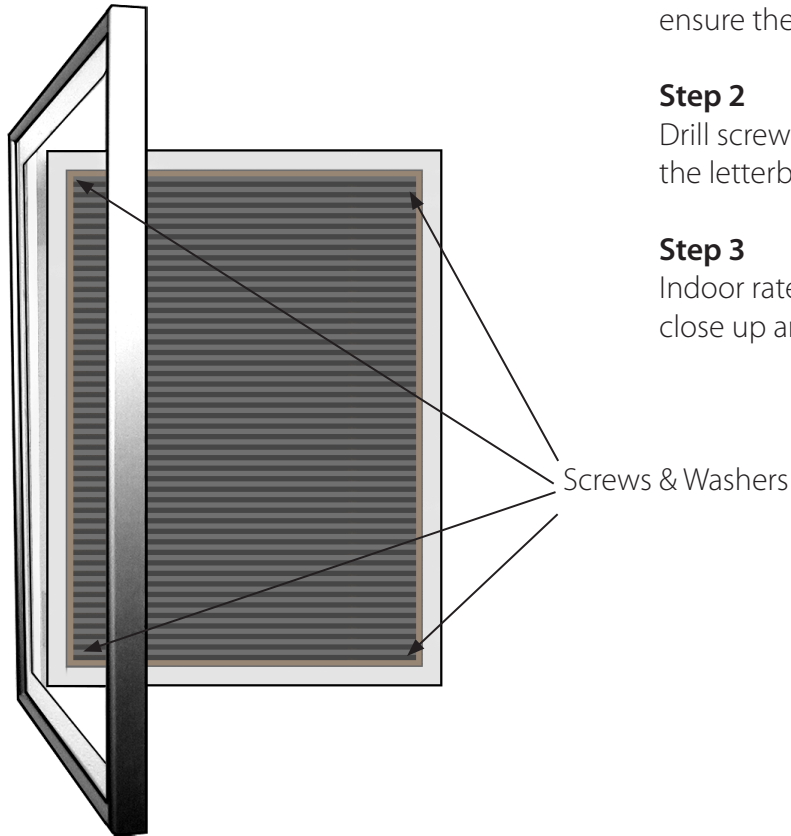

#### Step 1

Place a wood board in front of where you wish to drill each hole in the corner of the frame. This will ensure the material does not come untucked.

#### Step 2

Drill screws into the wall (use washers to protect the letterboard from the screw pressure).

#### Step 3

Indoor rated clear sealant can then be used to close up any holes to protect the display.



**Simple hand tools required:** Level, Drill, Screwdriver