


Instruction Sheet

Wall Mounting - Outdoor Letter Board Swing Cases

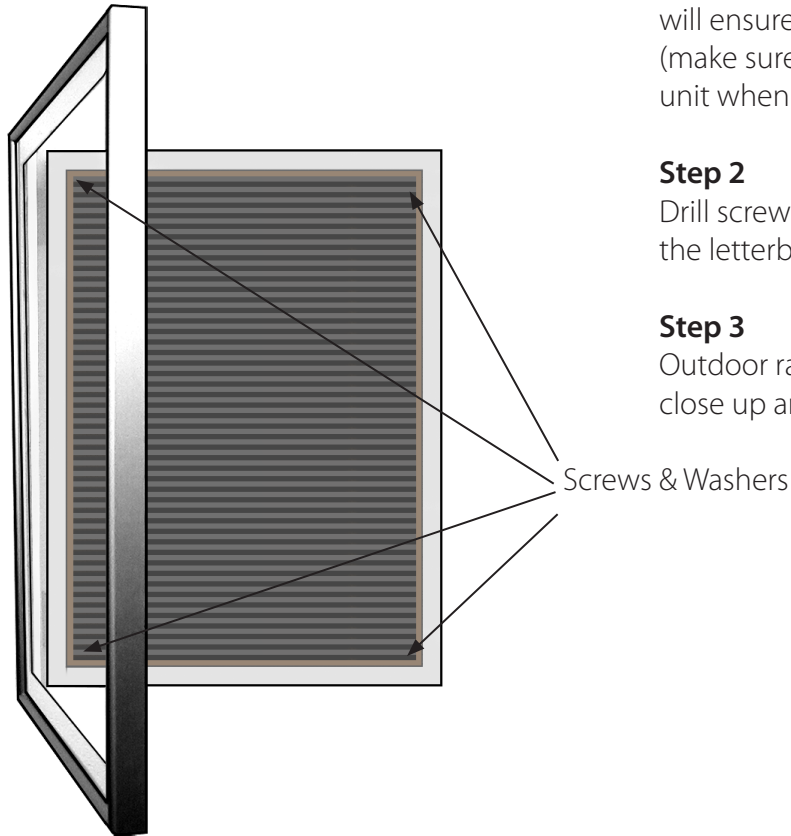

Step 1

Place a wood board in front of where you wish to drill each hole in the corner of the frame. This will ensure the material does not come untucked (make sure drain holes are on the bottom of the unit when drilling into wall).

Step 2

Drill screws into the wall (use washers to protect the letterboard from the screw pressure).

Step 3

Outdoor rated clear sealant can then be used to close up any holes to protect the display.



Simple hand tools required: Level, Drill, Screwdriver