


### Wall Mounting Open Shadowbox

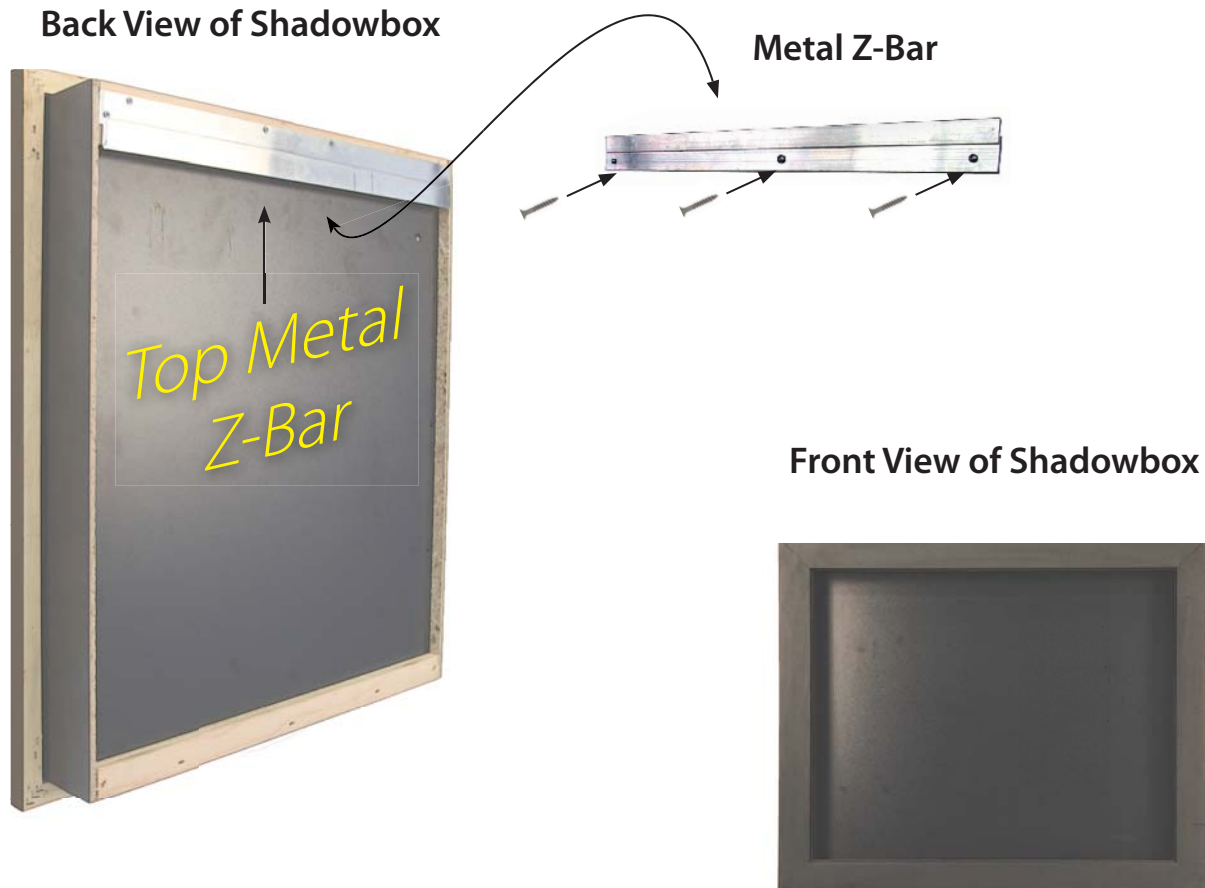

#### Step 1

Measure where you want the top of the frame to be positioned. Drill holes in wall for Z-Bar. Secure Z-Bar to the wall using screws and wall anchors provided.

#### Step 2 (for larger boxes, if necessary)

Place shadowbox onto Z-Bar. Mark holes in shadowbox with pencil. Remove shadowbox from wall, drill holes and insert wall anchors.

#### Step 3 (for larger boxes, if necessary)

Replace shadowbox over Z-Bar. Insert screws through the holes and secure into wall anchors with screwdriver.

**Simple hand tools required:** Level, Pencil, Drill, Phillips Head Screwdriver