

Snap Frame Assembly Instructions



Step 1:
Remove Wrapped Snap Frame
Rails From Box



Step 2:
Un-Wrap and Snap Open each
Frame Rail



Step 3:
Place Hardware Corners into Ends
of Mitered Snap Frame Rails





Step 4:
Join Mitered Corners.
The Hardware Slides Into Slots



Step 5:
Use Philips Screwdriver and
Tighten Screws on Hardware






Step 6:
Repeat until all Four Mitered
Corners are Joined. Then Place
Backing Board and Overlay into
Frame (If Included) and Snap all 4
sides down.

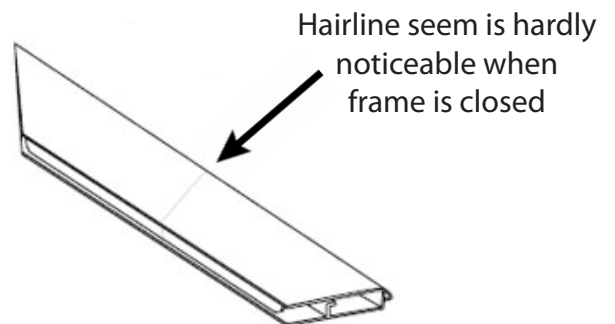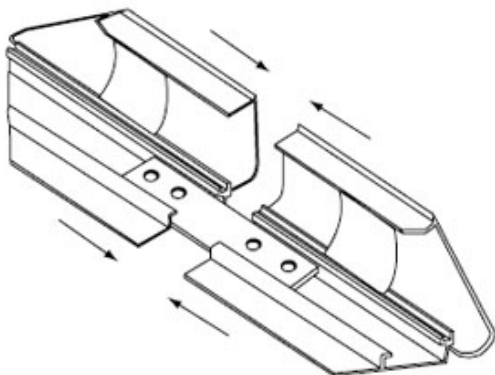


ALL snap frame rail sizes 90" and larger will be CUT in HALF and provided with a Straight Joiner Key to connect the two snap frame rails together.

Instruction Sheet

Wall Mounted - Snap Frame Front Loading Poster Frames

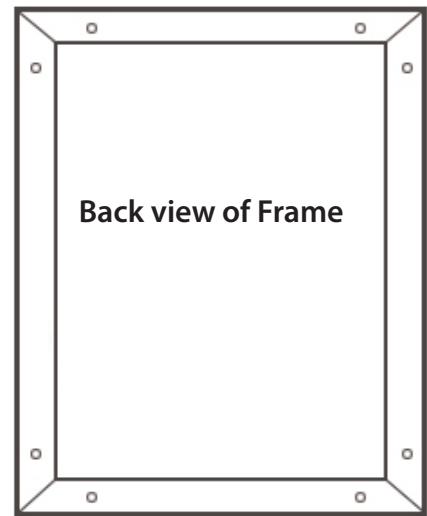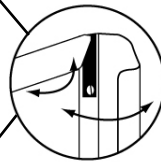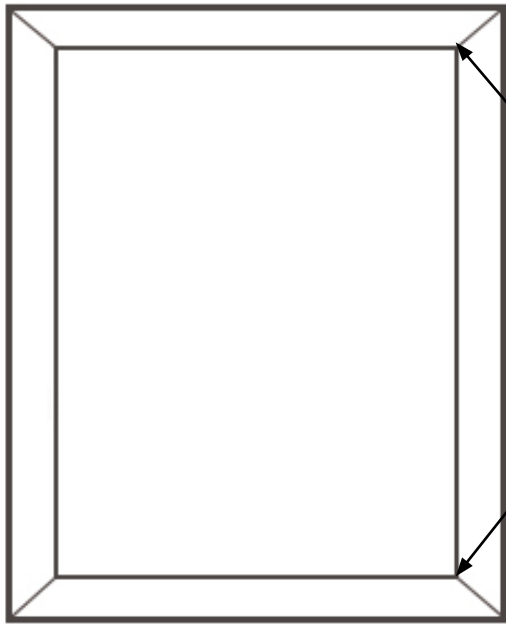

Back view of Frame

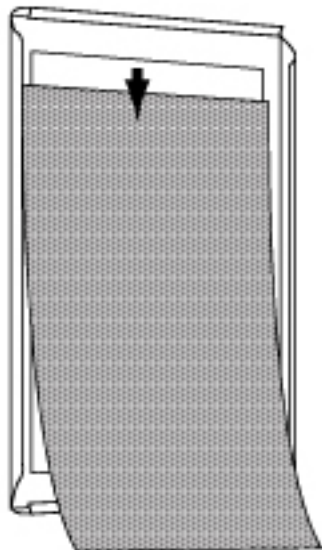

Step 1

Open all four frame edges

Step 2

Mark Hanging holes with pencil. Drill holes.

Step 3

Replace SwingSnap over holes. Insert screws through the holes and secure into wall with screwdriver.

Step 4

Insert poster into cavity and make sure it is centered. Close the top frame edge.

Step 5

Snap rest of corners down, making sure they are aligned at the corners