


# Modulus-686 DIY Drill Template

© Tom Christiansen, Neurochrome, 2019

For attaching the Modulus-686 (DIY option) directly to a heat sink (no backplate).  
Mounting holes should be tapped for M3 metric or US #4 machine screws.

All dimensions in inches. Please use the scale below to confirm that you have printed the template to the correct scale before drilling.

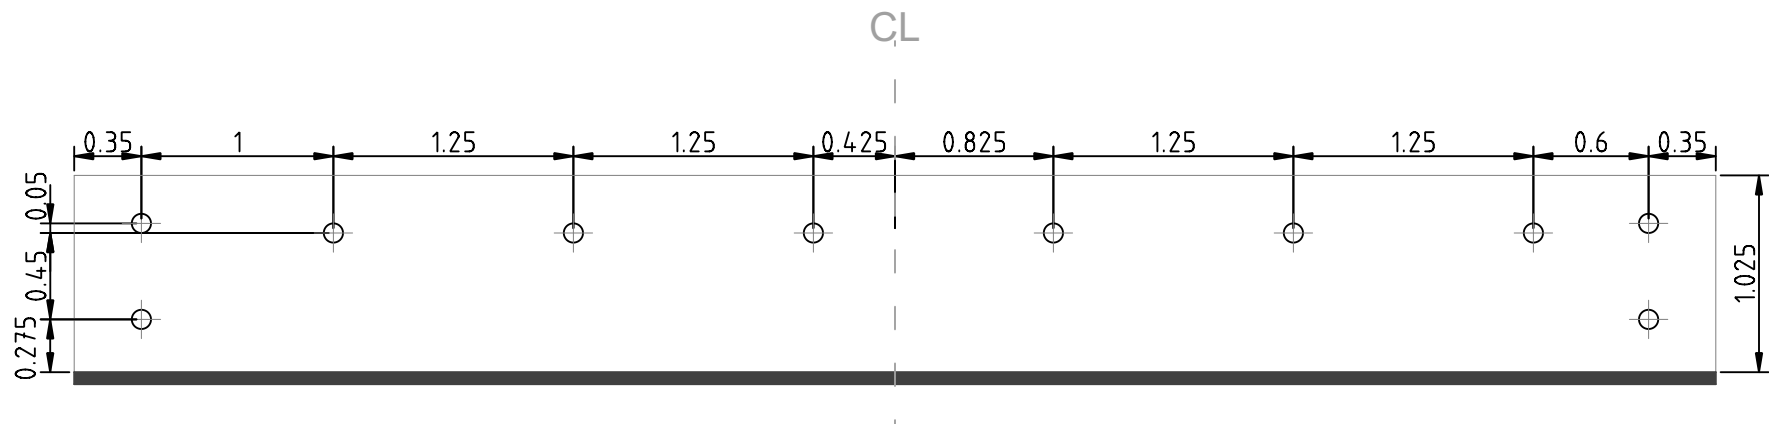

Scale

