


### ③ APPLYING THE REAR SPOILER TO THE CAR

Line up the spoiler in position. Make sure that the corners of the spoiler have a nice even gap to the front and especially to the sides. Make sure you can still reach the detached protective film of the tape.

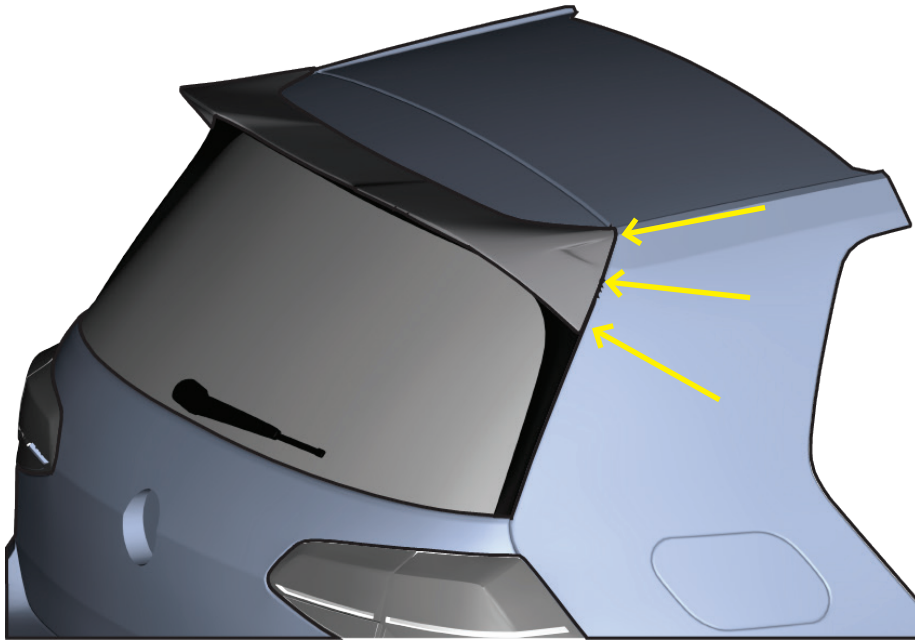

Now press the corners of the spoiler lightly against the car. Once again, make sure that the gaps are even. You can now carefully pull out the protective film of the tape from under the rear spoiler. Press the spoiler firmly against the surface where the tape is placed.

You can now remove the protective film of the rear spoiler.

**Note:** The tape needs up to 24 hours to develop its full adhesive strength. Installation is not recommended, especially in colder temperatures.

We wish you a lot of fun with your new spoiler!  
Tuning is not just a passion, it's a lifestyle!  
Enjoy it!

# Z A E R O

D E S I G N


## EVO-1 REAR SPOILER FOR VW GOLF 7 & 7.5

Installation Manual


① **EVO-1 REAR SPOILER  
FOR VW GOLF 7 & 7.5**

**TEST FITTING**

Make a test fitting by placing the spoiler on the roof edge of the car. Take a close look at where the tape makes contact between the spoiler and the car.

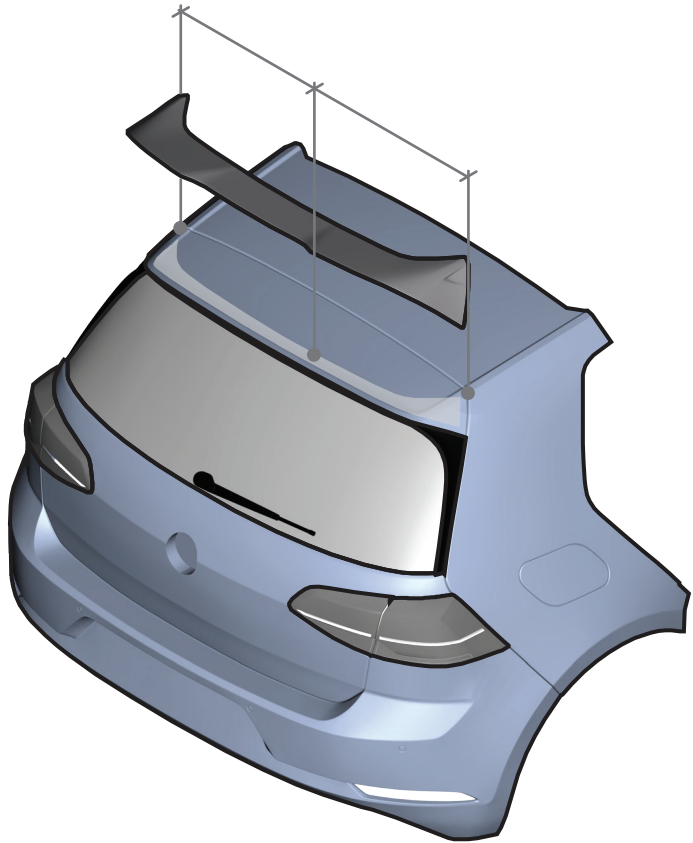

Tape application on the inside of the rear spoiler:

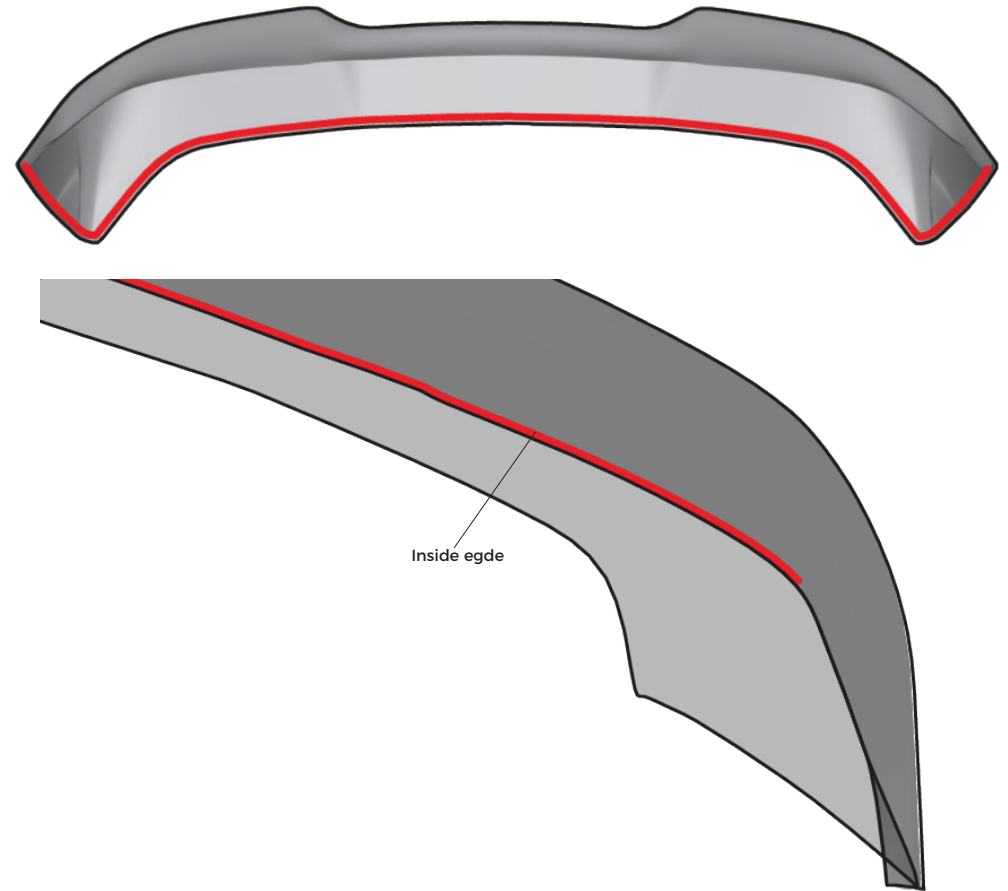

Pull the ends of the tape slightly from 6-8cm. Do not pull the tape off completely to make the installation easier.

② **CLEANING THE SURFACE & APPLYING THE TAPE.**

Clean the surface of the roof edge of your car thoroughly.

Make sure that the surface is free of grease.

Also clean the areas of the spoiler where the tape will be applied.

After cleaning, you can now apply the tape as shown in our template.

