


Then you can slowly pull the protective film of the double-sided adhesive tape out from under the side skirts. Press the side skirts carefully against the vehicle at the places where the tape was placed.

Now screw the side skirt on the underside in the direction of the rear wheel. Connect the enclosed plastic holder with the side skirt and the screw-on point of the splash guard.

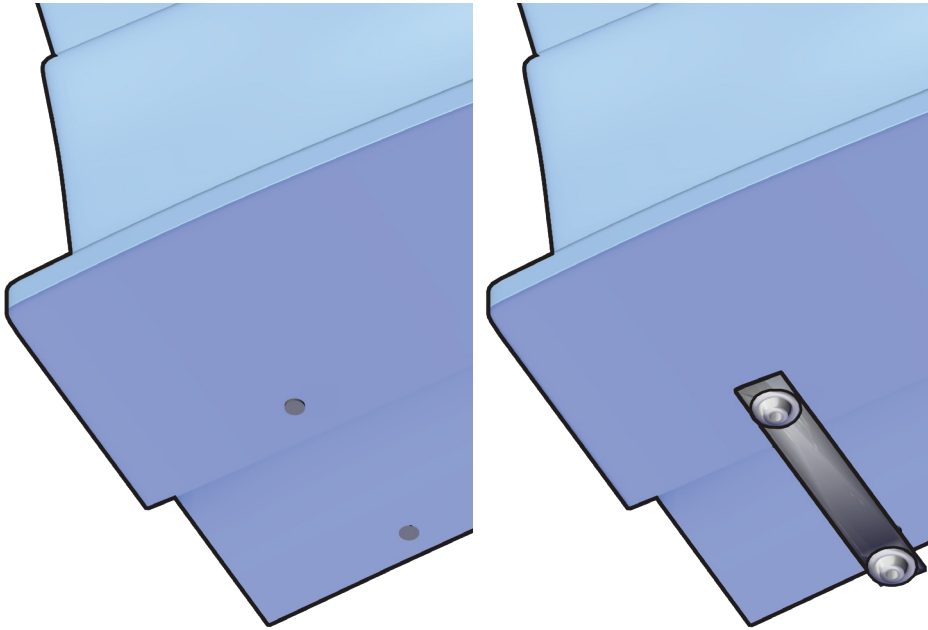

You can now remove the protective film.

Note: The tape needs up to 24 hours to develop its full adhesive strength. Installation is not recommended, especially in colder temperatures.

We wish you a lot of fun with your new side skirts.

Tuning is not just a passion, it's a lifestyle!

Enjoy it!

Z A E R O
D E S I G N

SIDE SKIRT REPLACEMENTS FOR VW GOLF 7

Installation Manual

① SIDE SKIRT REPLACEMENTS FOR VW GOLF 7

TEST FITTING


If you drive a VW Golf Model that has original side skirts, please disassemble the original side skirts.

Make a test fitment to get an idea of how the final position of the side skirts should look like. Align the side skirt so that you can use the bolt-on point on the front wheel arch, as shown in point 3.

② CLEANING THE SURFACE & APPLYING THE DOUBLE-SIDED ADHESIVE TAPE


Please clean and degrease the surface of the vehicle in the area of the side skirt thoroughly and make sure there is no dirt residue. Before applying the tape to our side skirts, clean and degrease them on the marked areas as well. Press the tape firmly to the side skirts so that it cannot come loose when attached to the vehicle.

Now apply the double-sided adhesive tape as shown in the pictures - marked red.

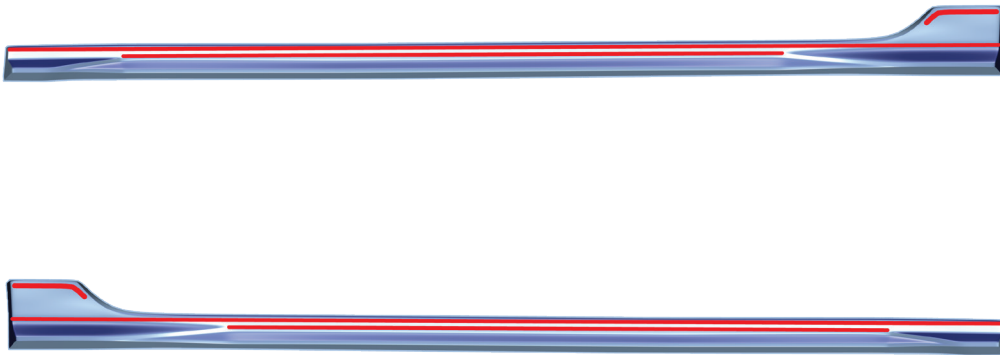

③ ATTACHMENT OF THE SIDE SKIRTS

Pull off the protective film at the ends of the double-sided adhesive tape so that you can reach the protective film at any time when the side skirts are attached.

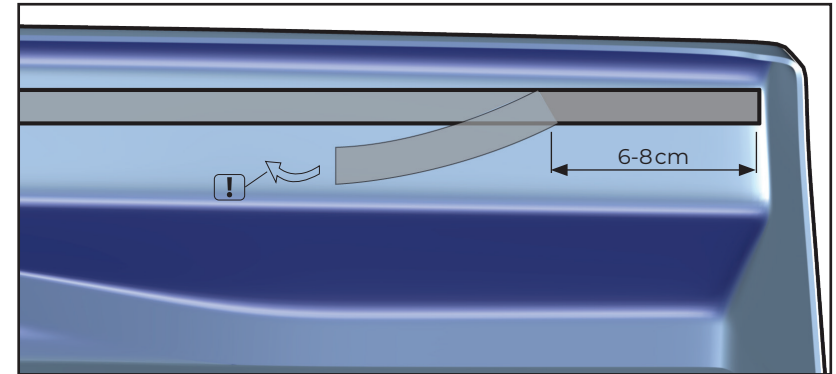

You can now move the side skirts into position. Start with the screw connection at the front wheel arch.

