




Lid or Base Front or Back Trim Replacement Instructions

(#3, 10, 59, 66)

What's Included:
Lid or Base/Front or Back Trim



Tools Needed:
Phillips head screwdriver

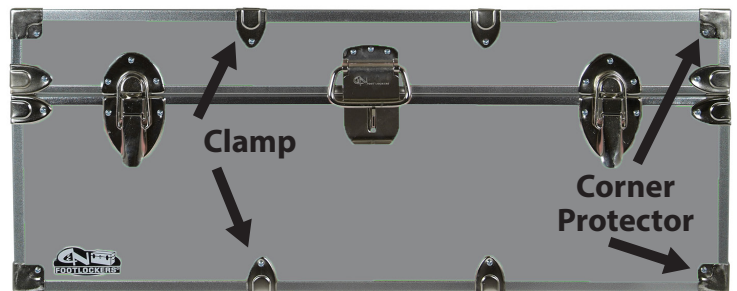

1. Loosen but don't remove the screws from the two Clamps (Figure 1) and one of the Corner Protectors (Figure 2) that are currently on your footlocker. Set aside.
2. Carefully slide out the Trim piece from under the remaining Corner Protector that was left in place. Discard. Replace with the new Trim piece. (Figure 3)
3. Tighten remaining corner protector.
4. Replace the 2 clamps and corner protector that you removed in step one, back into their original positions.

