





Lid or Base Side Trim Replacement Instructions

(#6, 14, 62, 70)

What's Included:
Lid or Base Side Trim



Tools Needed:
Phillips head screwdriver

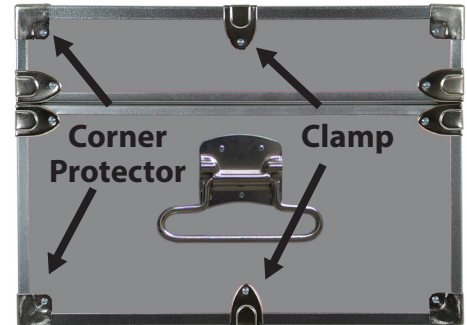

1. Completely remove the screws from the Clamp (Figure 1) and one of the Corner Protectors that are currently on your footlocker. Loosen the screws on the remaining Corner Protector. (Figure 2) Set aside.
2. Carefully slide out the Side Trim from under the remaining Corner Protector with that was left in place. Discard. Replace with the new Side Trim piece. (Figure 3)
3. Replace the hardware that you removed in step one back in their original positions and tighten all screws.

