

FITTING INSTRUCTIONS

making everyday smoother



VOLKSWAGEN T6.1

***VB-FullAir 2C, 4C
rear axle, front axle***

FOR KIT: 1050906XXX

(ADDITIONAL TO 730105090612)









REVISION TABLE


Document number	730105090613		
New revision:	V1.0		Old revision: -
Release date (yyyy-mm-dd):	2020-03-25		
Page (new):	Changes:		











FITTING INSTRUCTIONS 730105090612

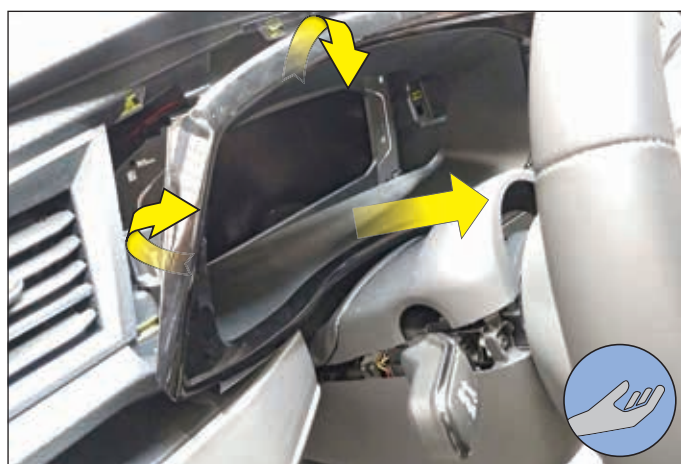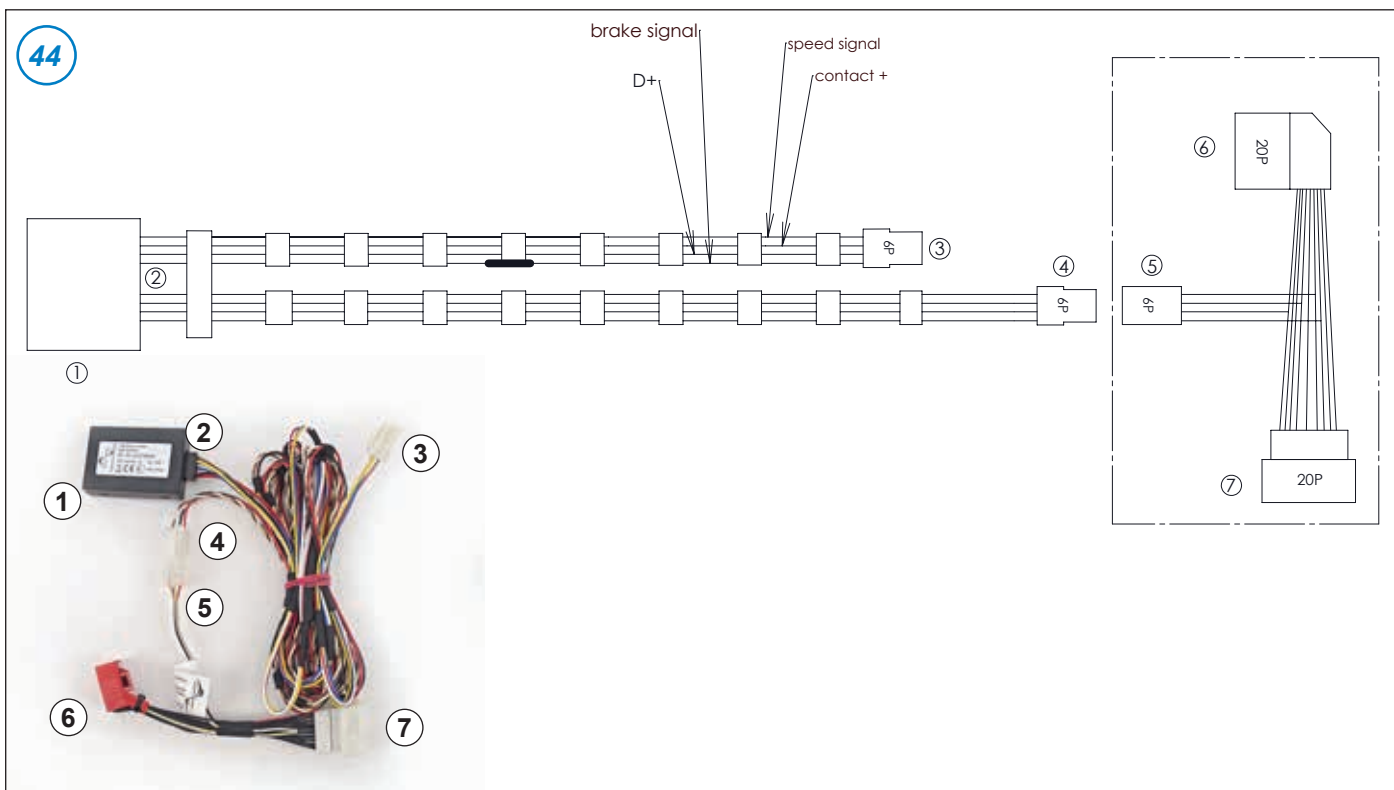

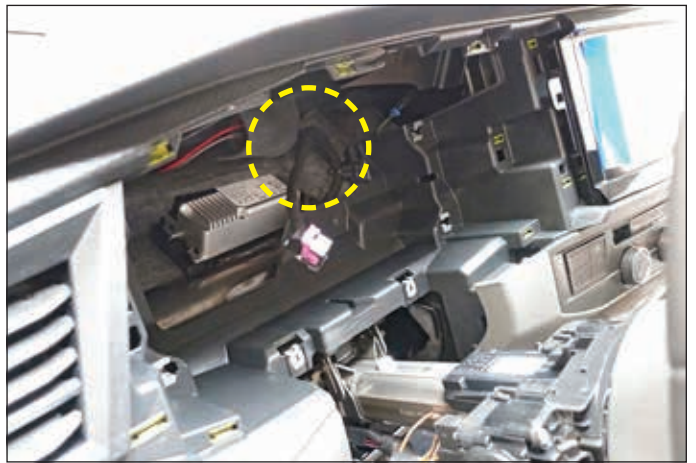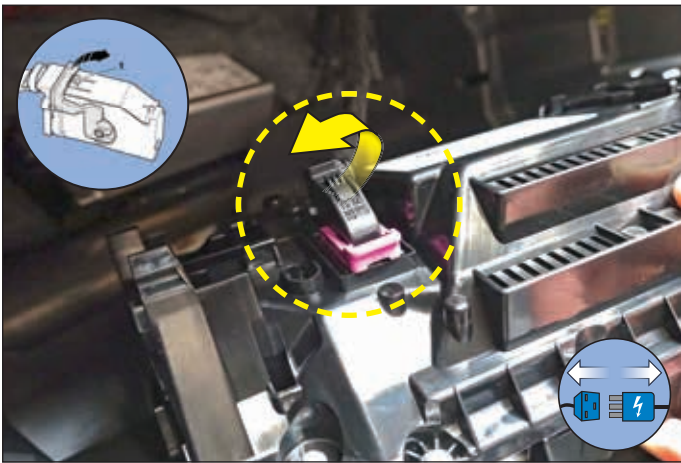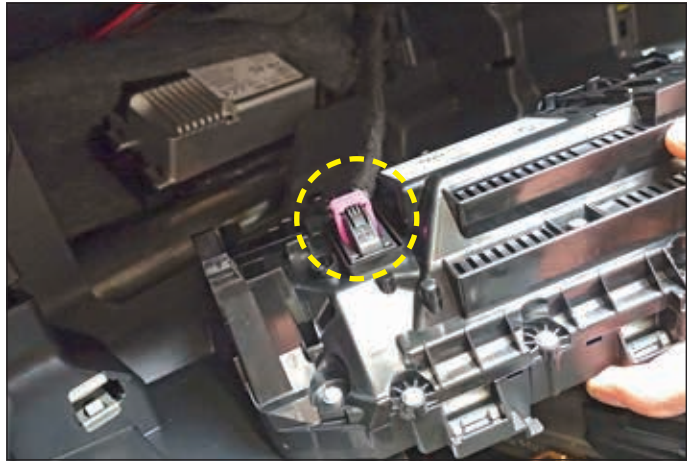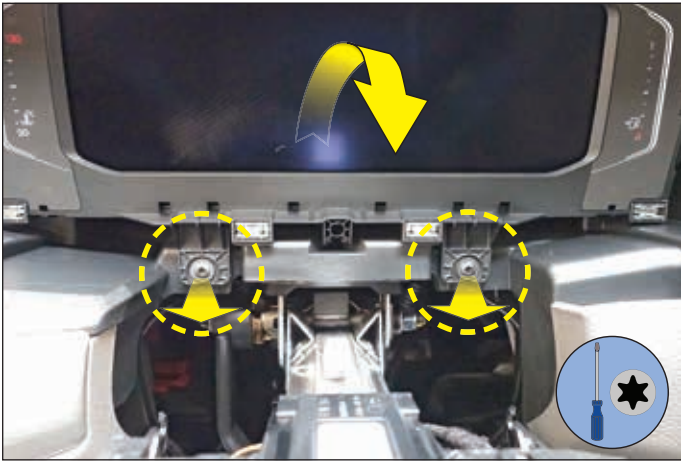

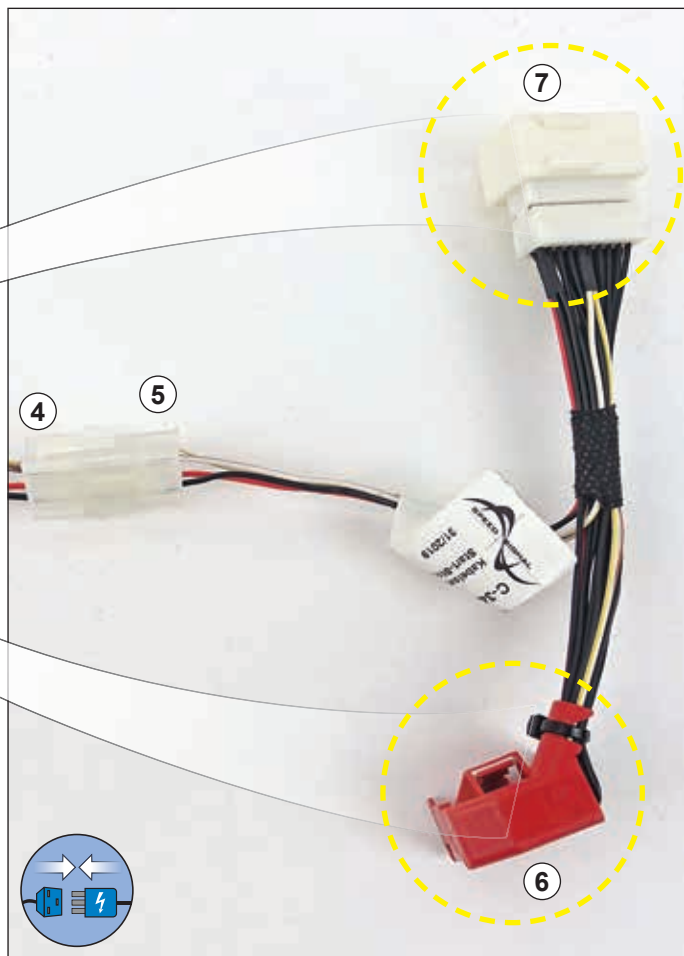


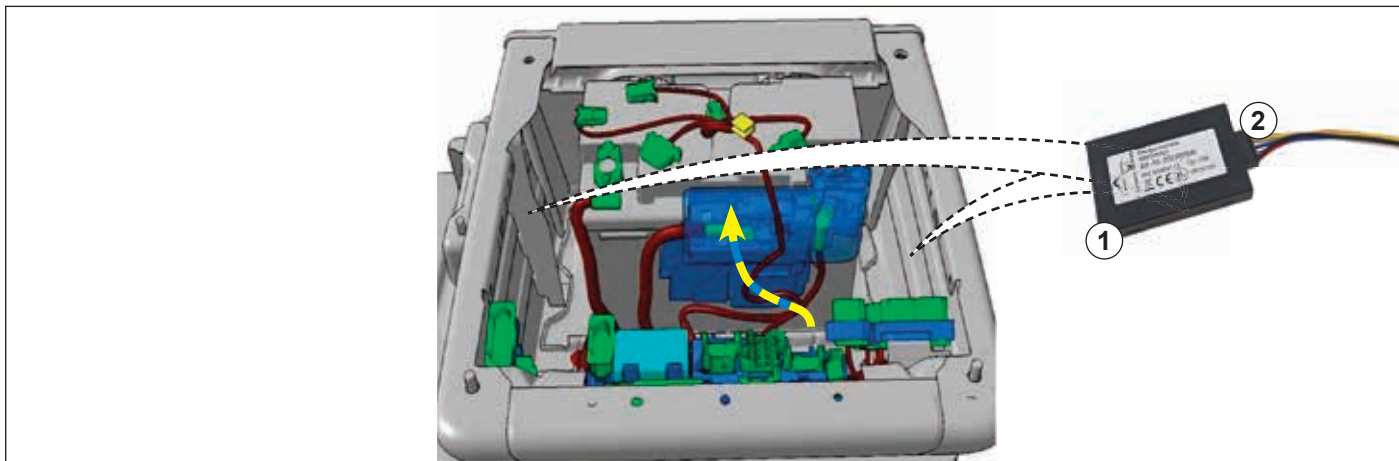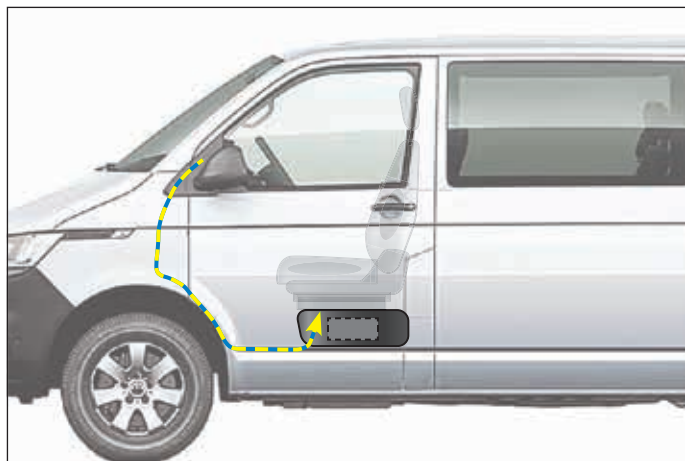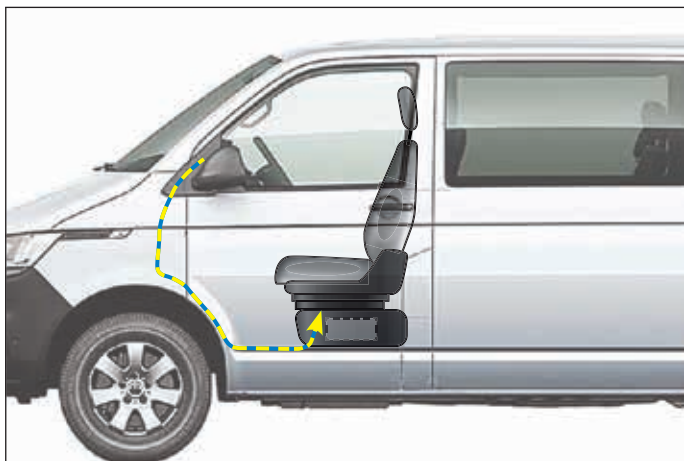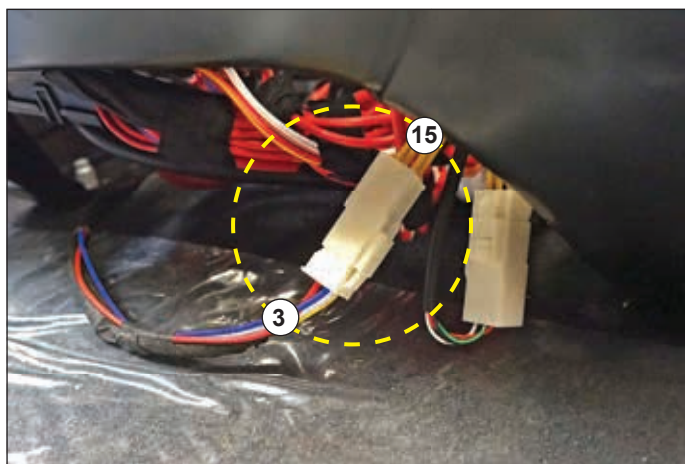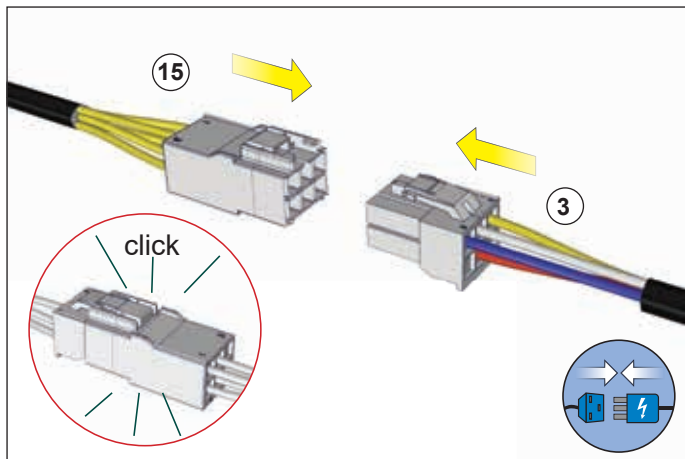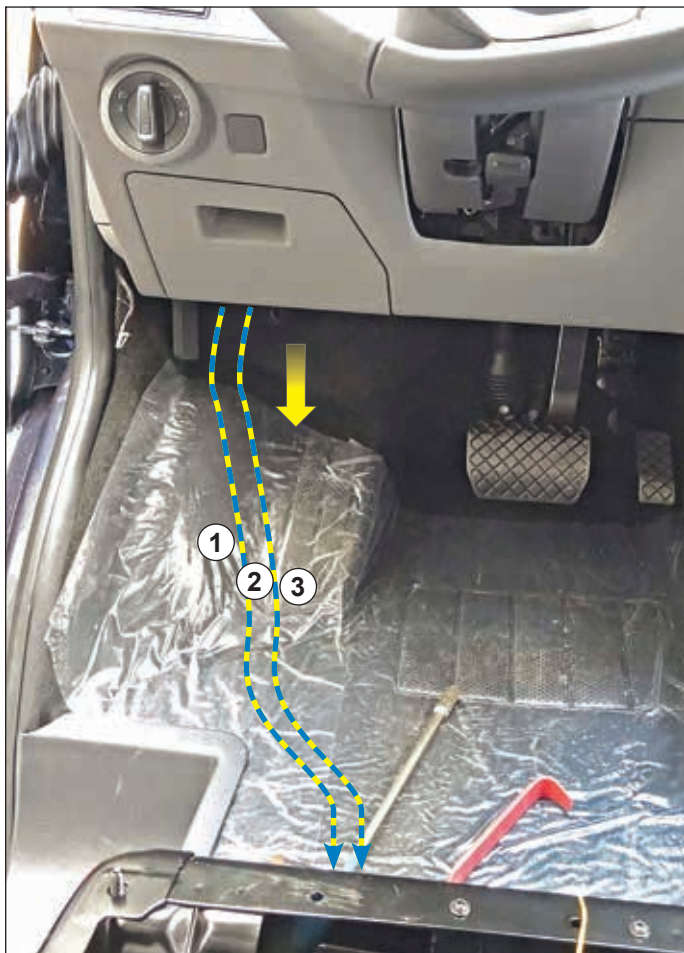

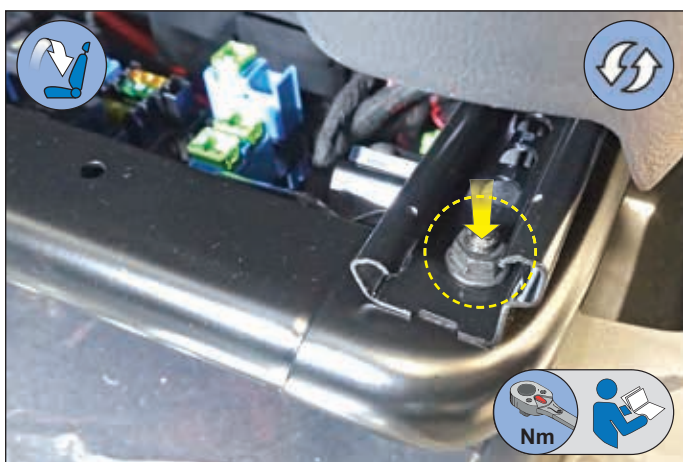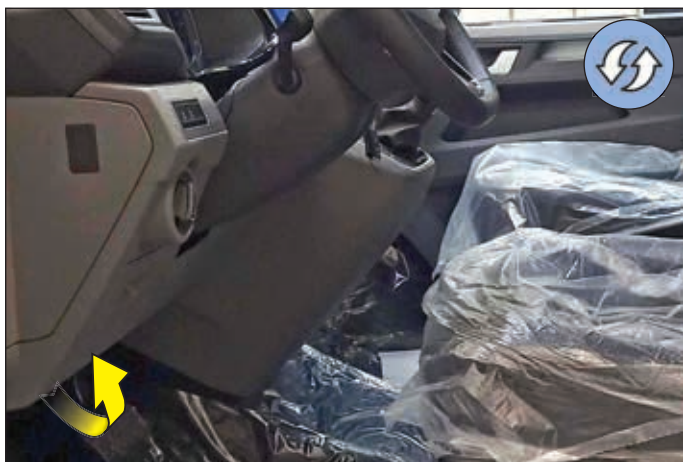

FITTING INSTRUCTIONS
730105090612



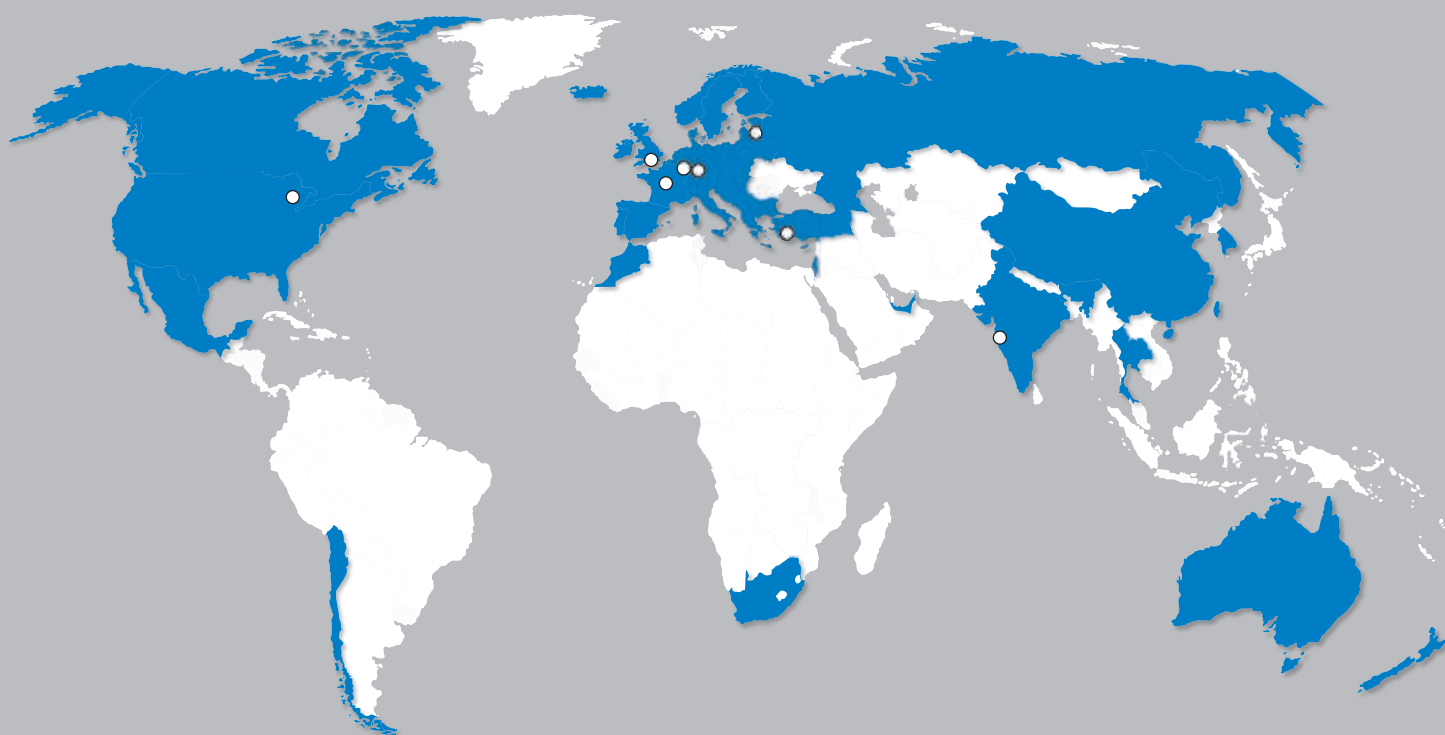

VB-AIRSUSPENSION,

INCREASED COMFORT, BETTER DRIVEABILITY, MORE SAFETY.



730105090613 ALL V1.0