

Instruction Guide:
- Sprinter -
Defender Front Bumper

Checklist



- + REVIEW PACKING SLIP TO ENSURE YOU'VE RECEIVED ALL COMPONENTS**
- + PREPARE ALL TOOLS NECESSARY FOR PRODUCT INSTALLATION**
- + PRE-MEASURE DISTANCES OF ALL PRODUCT MOUNTING LOCATIONS**
- + CONFIRM CLEARANCES FOR OTHER INSTALLED BUILD COMPONENTS**
- + FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THE VEHICLE**

Packing Slip



Components List

VNSPD-007-(SUBASSEMBLY#)

Defender Front Bumper

VNSPD-007-SA1

Quantity : x1




Hardware Kit

VNSPD-007-HK

Button Head Bolt (M8x1.25mm / 50mm Length)

Quantity : x2

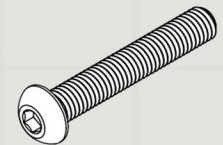

Split Lock Washer (M8 Sizing / 14.8mm OD)

Quantity : x2



Steel Flat Washer (5/16" Sizing / .75"OD)

Quantity : x2




Step 01




Mount Defender Front Bumper to OEM Upper Mounting Locations

From the top facing down, use (x2) M8 button head bolts w/ (x2) split lock washers and (x2) steel flat washers to mount the Defender Front Bumper to the factory mounting locations on top of the vehicle's OEM bumper cover.

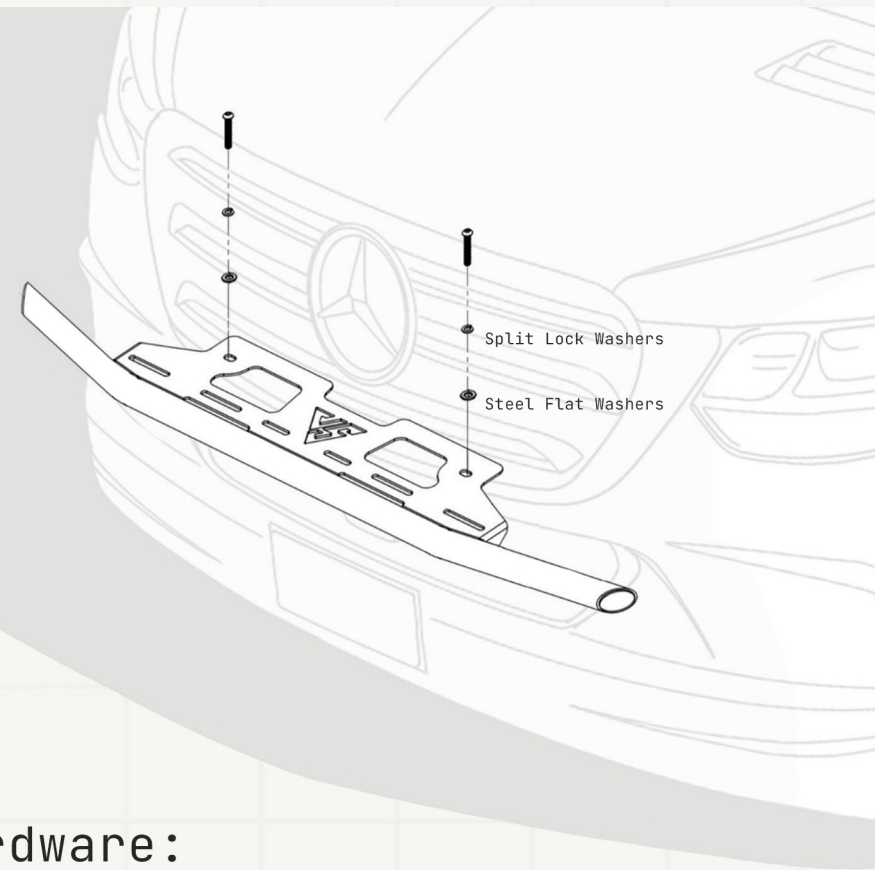

Hardware:

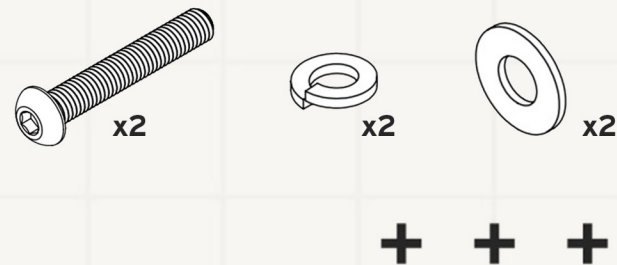

You've Reached the Finish Line

