



## Instruction Guide:

- Sprinter -  
Baja Front Bumper

# Checklist



- + REVIEW PACKING SLIP TO ENSURE YOU'VE RECEIVED ALL COMPONENTS**
- + PREPARE ALL TOOLS NECESSARY FOR PRODUCT INSTALLATION**
- + PRE-MEASURE DISTANCES OF ALL PRODUCT MOUNTING LOCATIONS**
- + CONFIRM CLEARANCES FOR OTHER INSTALLED BUILD COMPONENTS**
- + FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THE VEHICLE**

# Packing Slip




## Components List

VNSPD-008-(SUBASSEMBLY#)

### Baja Front Bumper


VNSPD-008-SA1

Quantity : x1

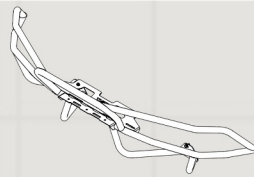

### M8 Button Head Bolt

Quantity : x2

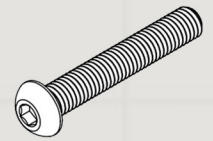

### M8 Split Lock Washer

Quantity : x2



### 5/16" Steel Flat Washer

Quantity : x2






# Step 01




## Mount the Baja Front Bumper to the upper mounting locations

From the top facing down, use (x2) M8 x 1.25mm button head bolts w/ (x2) split lock washers & (x2) steel flat washers to mount the Baja Front Bumper to the upper mounting locations on the top of the vehicle's bumper cover.

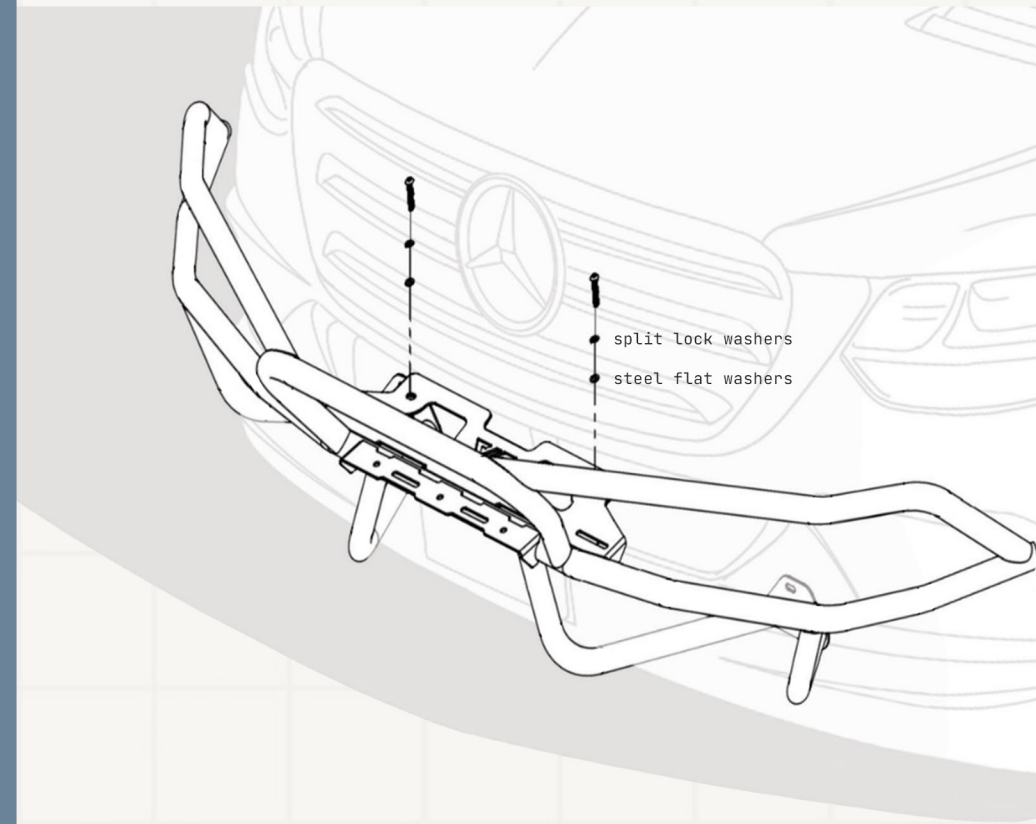

Hardware:

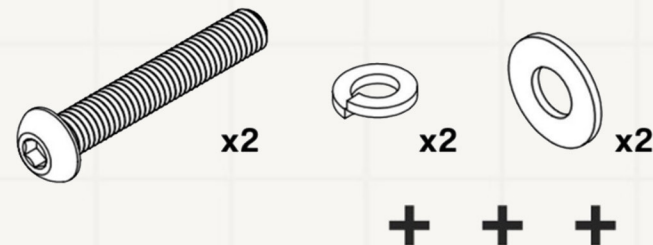


# Step 02





## Mount the Baja Front Bumper to the lower mounting locations

Reuse the (x4) OEM chassis bolts located on the driver & passenger lower mounts after removing the lower front crossmember. Use that hardware to secure the lower mounts on the Baja Front Bumper into place.

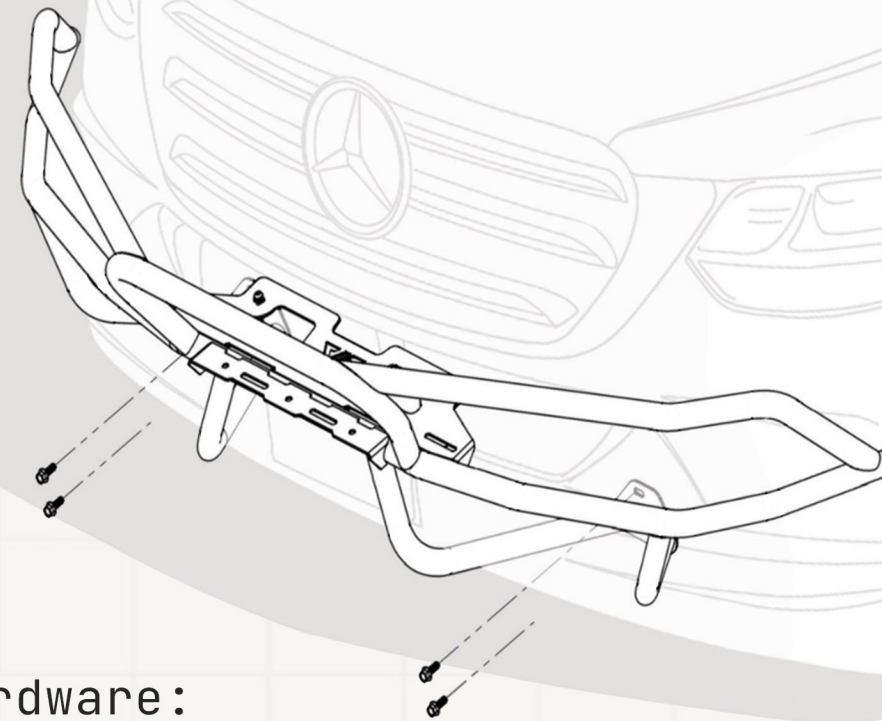

Hardware:

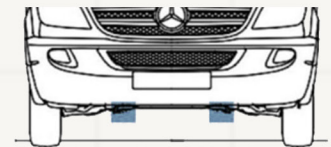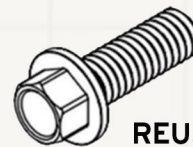

REUSE x4 LOWER CROSSMEMBER MOUNT BOLTS



You've Reached the Finish Line

