



Instruction Guide:

- Sprinter -
Headliner Shelf

Checklist



- + REVIEW PACKING SLIP TO ENSURE YOU'VE RECEIVED ALL COMPONENTS**
- + PREPARE ALL TOOLS NECESSARY FOR PRODUCT INSTALLATION**
- + PRE-MEASURE DISTANCES OF ALL PRODUCT MOUNTING LOCATIONS**
- + CONFIRM CLEARANCES FOR OTHER INSTALLED BUILD COMPONENTS**
- + FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THE VEHICLE**

Packing Slip




Components List

VNSPD-066-(SUBASSEMBLY#)

Shelf Panel

VNSPD-026-SA1

Quantity : x 1

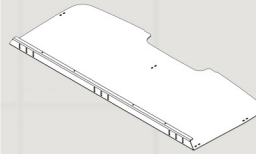

Shelf Brace

VNSPD-026-SA2

Quantity : x 1



Shelf Dividers

VNSPD-026-SA3

Quantity : x 4



Mounting Brackets (Front)

VNSPD-026-SA4

Quantity : x 2



Mounting Brackets (Rear)

VNSPD-026-SA5

Quantity : x 2



Packing Slip



Hardware Kit

VNSPD-026-HK

1/4" Button Head Bolts

Quantity : x10



1/4" Steel Flat Washers

Quantity : x10



1/4" Serrated Flange Nuts

Quantity : x10




Step 01



Slide the Shelf Dividers through the Headliner Shelf Brace

Slide the (x4) Shelf Dividers through the vertical slotted channels on the inside of the Shelf Brace. Once slotted into place, fix the Shelf Dividers into place by pressing downwards until the interlocking channels engage one another.

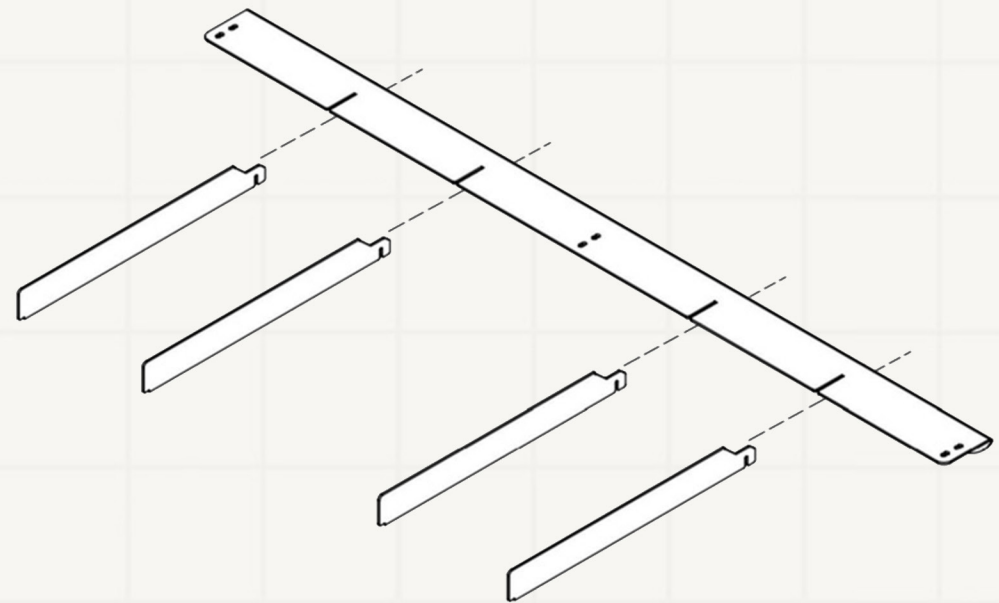

+ + +


Step 02



Position the Shelf Panel over the completed Shelf Brace

From the top facing down, use the protruding ends of the Shelf Dividers to help guide the Shelf Panel into place overtop the Shelf Brace.

Note* The bottom notches of the Dividers should nest into the inside lip of the Shelf Panel

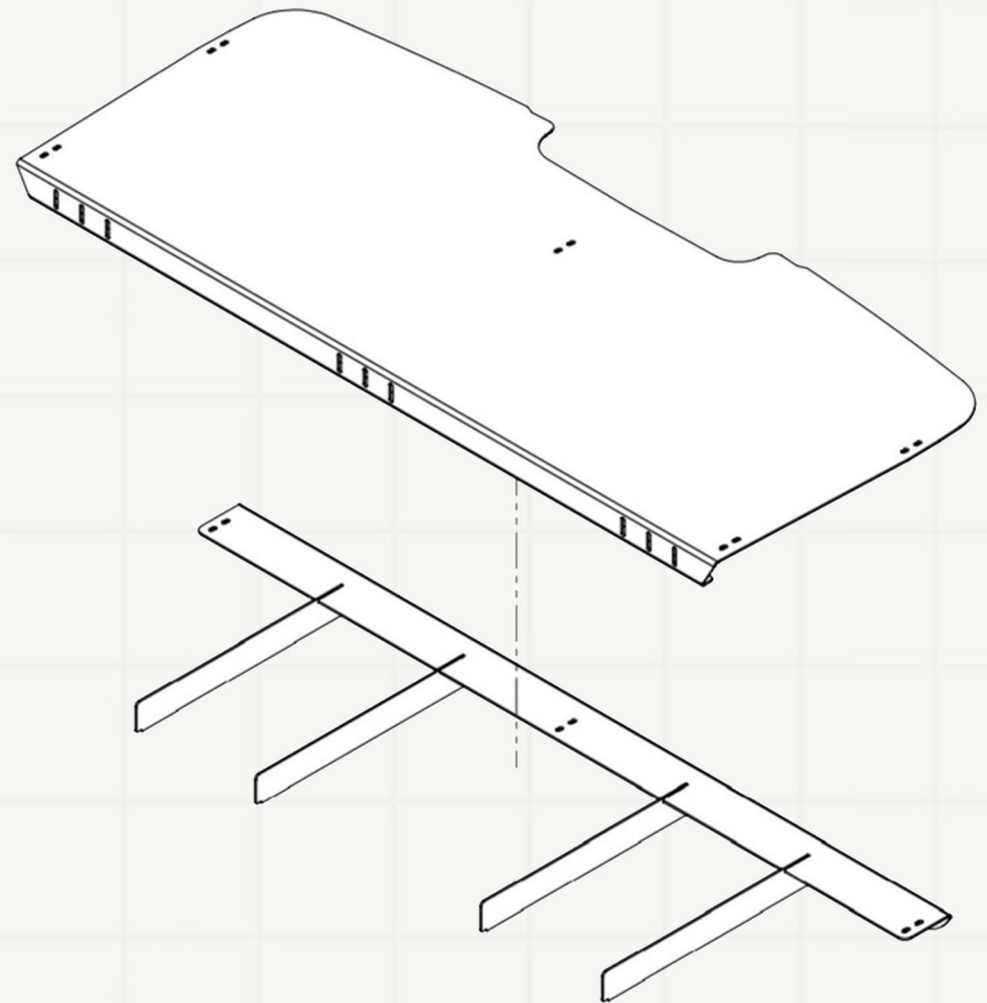


Step 03



Secure the Shelf Panel into place atop the completed Shelf Brace

Through the slotted center holes, from the top facing down, use (x2) of the button head bolts w/ (x2) flat washers through (x2) serrated flange nuts to secure the Shelf Panel to the Shelf Brace.

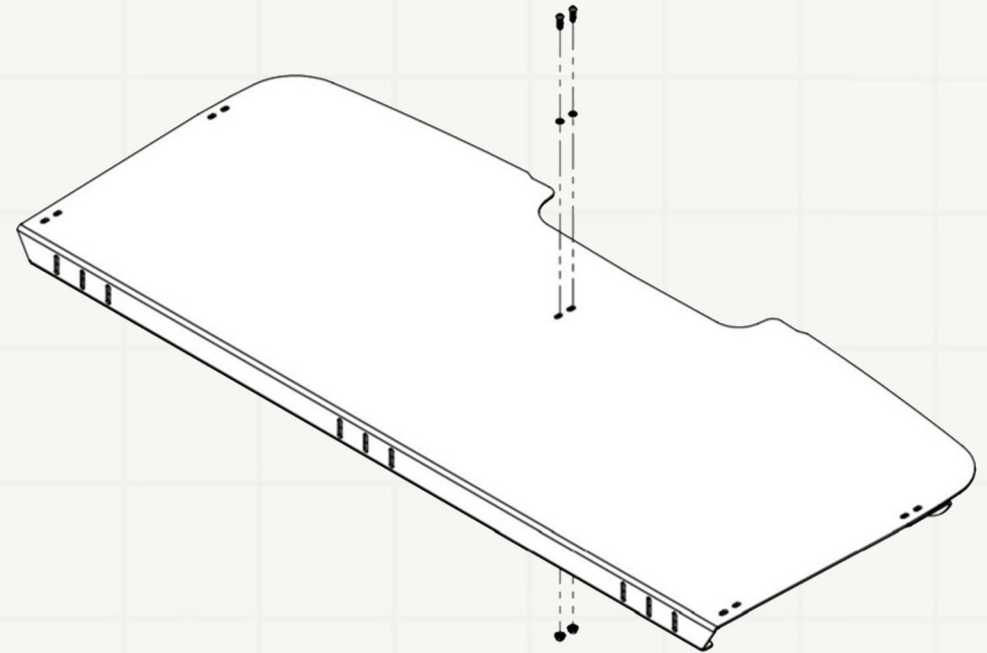

Hardware:



x2



x2



x2




Step 04



Attach the Mounting Brackets (Front) to the outside of the Shelf Panel

From the top facing down, use (x4) button head bolts w/ (x4) flat washers through (x4) serrated flange nuts to attach the front two Mounting Brackets to the outside of the Shelf Panel.

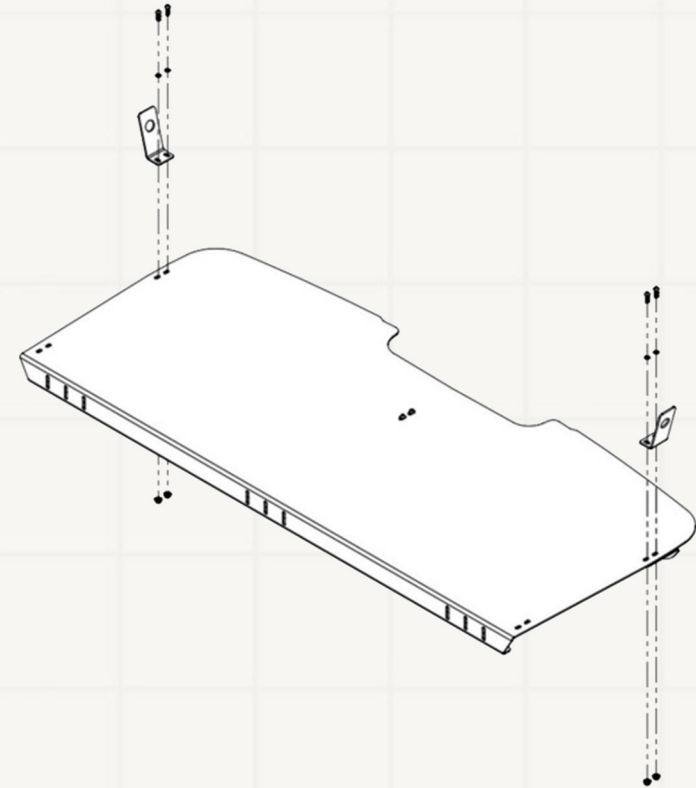

Hardware:



x4



x4



x4




Step 05



Attach the Mounting Brackets (Rear) to the outside of the Shelf Panel

From the top facing down, use (x4) button head bolts w/ (x4) flat washers through (x4) serrated flange nuts to attach the rear two Mounting Brackets to the outside of the Shelf Panel.

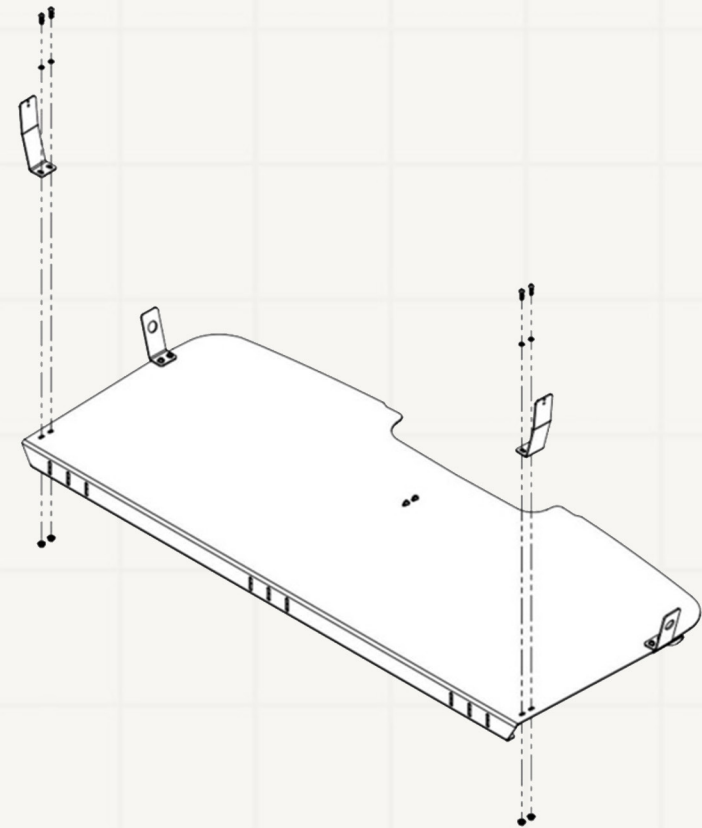

Hardware:



Step 06




Mount the completed Headliner Shelf into place inside the vehicle

Flip the Headliner Shelf right-side up with the Mounting Brackets pointed downwards.

Reusing the (x2) Overhead Hand Grip mounting bolts & (x4) cabin accessory hook screws, position the Shelf within the overhead space above the front cabin & fasten hardware once all four mounting brackets are set.

Note* Brackets should be sandwiched in between the interior components and interior sidewalls before reinstalling the hardware

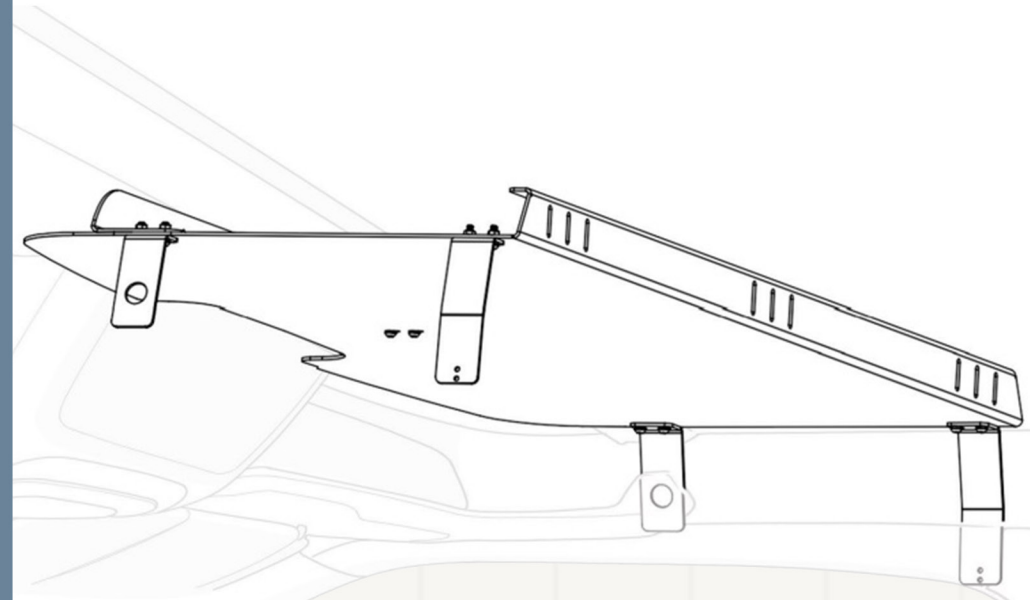

You've Reached the Finish Line

