



Instruction Guide:

Sprinter - Mule Carrier

Base (Driver)

Checklist



- + REVIEW PACKING SLIP TO ENSURE YOU'VE RECEIVED ALL COMPONENTS
- + PREPARE ALL TOOLS NECESSARY FOR PRODUCT INSTALLATION
- + PRE-MEASURE DISTANCES OF ALL PRODUCT MOUNTING LOCATIONS
- + CONFIRM CLEARANCES FOR OTHER INSTALLED BUILD COMPONENTS
- + FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THE VEHICLE

Packing Slip



Components List

VNSPD-031-(SUBASSEMBLY#)

Mule Carrier Base (Driver)

VNSPD-031-SA1

Quantity : x1

Center-Mount Backing Plate

VNSPD-031-SA2

Quantity : x1

Upper Door Hinge Backing Plate

VNSPD-031-SA3

Quantity : x1

Lower Door Hinge Backing Plate

VNSPD-031-SA4

Quantity : x1

Packing Slip



Hardware Kit

VNSPD-031-HK



Quantity : x4

 \pm

3/8" Steel Flat Washers

Quantity : x8

3/8" Nylon Lock Nuts

Quantity : x4

1/4" Button Head Bolts

Quantity : x2



Quantity : x4

1/4" Nylon Lock Nuts

Quantity : x2

Anti-Seize Pack

Quantity : x1




Secure the upper mount of the Mule Carrier Base through the top hinge

From the inside facing out, use (x2) 3/8" button head bolts w/ (x2) 3/8" flat washers & the Upper Door Hinge Backing Plate to thread the bolts through the 180° hinge & Mule Carrier Base upper mount into the (x2) 3/8" flat washers & (x2) 3/8" nylon lock nuts.

Note* Apply a portion of the anti-seize included within the hardware pack along the threads of both the bolts and lock nuts.

Leave enough anti-seize inside the pack to apply during the following step

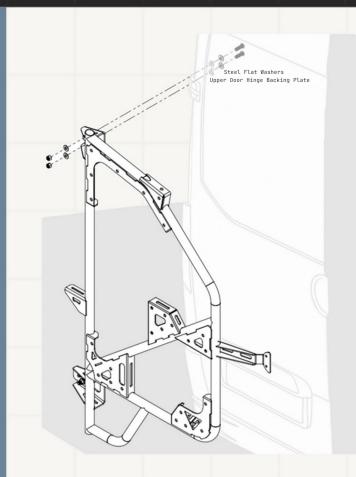








Secure the lower mount of the Mule Carrier Base through the bottom hinge

From the inside facing out, use (x2) 3/8" button head bolts w/ (x2) 3/8" flat washers & the Lower Door Hinge Backing Plate to thread the bolts through the 180° hinge & Mule Carrier Base lower mount into the (x2) 3/8" flat washers & (x2) 3/8" nylon lock nuts.

Note* Apply a portion of the anti-seize included within the hardware pack along the threads of both the bolts and lock nuts.

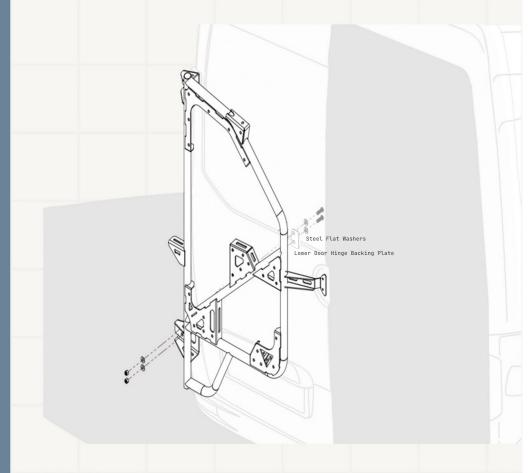






Mark and drill the center mounting holes on the driver-side rear door

Underneath the driver-side rear door center emblem, use the two holes on the Mule Carrier Base's center mount as a guide to mark & drill (x2) bolt holes through the driver-side rear door.

Note* Double check the alignment of the Mule Carrier Base before making any irreversible alterations to your vehicle.

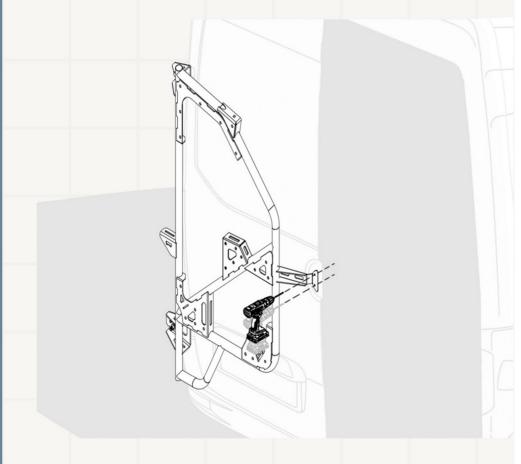








Secure the Mule Carrier Base to the center mount on the driver-side door

After both holes have been drilled, from the outside facing in, thread (x2) 1/4" button head bolts w/ (x2) 1/4" flat washers through the Mule Carrier Base center mount & driver-side rear door into the (x1) backing plate w/ (x2) additional 1/4" flat washers & (x2) 1/4" nylon lock nuts to complete the installation of the Mule Carrier Base.

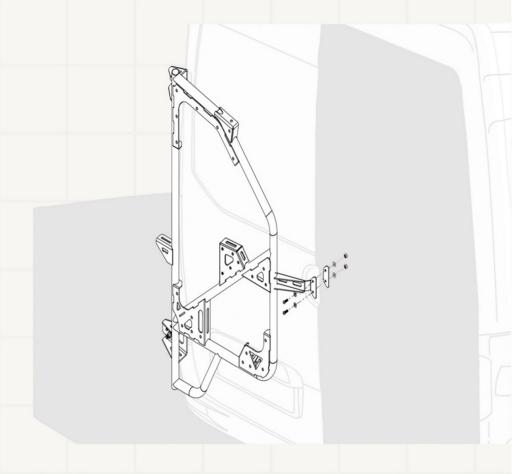



You've Reached the Finish Line



