

# ASSEMBLY

## STEP 1

Use pillar pipe clips to plan where your shower spout will go. Space evenly up the riser.



## STEP 2

Attach your elbow extensions onto t-head tap pieces.

(Connection to wall/mains outlet not supplied - 15mm thread required)

Ground Feed model - use male couplings both ends




## STEP 3

Screw Male coup into other end of tap



## STEP 4

Combine riser and reach pipe sections with F&F Elbows to create spout (square head model only). Firmly screw shower head onto last Male Coup and crimp to Drop.

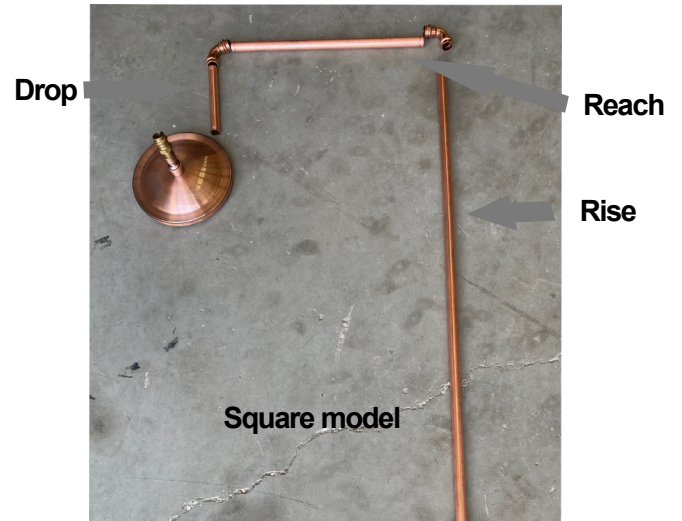

## STEP 5

Insert finished spout into Male coup above tap and crimp all pieces once angle is correct.



**NOTE:** All installation should be completed by a qualified plumber. Power tools and crimping tool required.

This document is a guide only. Eco Sustainable house does not take responsibility for product issues caused by improper installation.

## Round model

