


# CLIK'N'FIT® WINDOW PRIVACY SCREEN | SLAT

## ASSEMBLY & INSTALLATION GUIDE

The Klik'n'Fit® Window Privacy Screen is quick to assemble and fast to install. Please follow the instructions to ensure your screen will be installed securely and will look its best.

### COMPONENTS

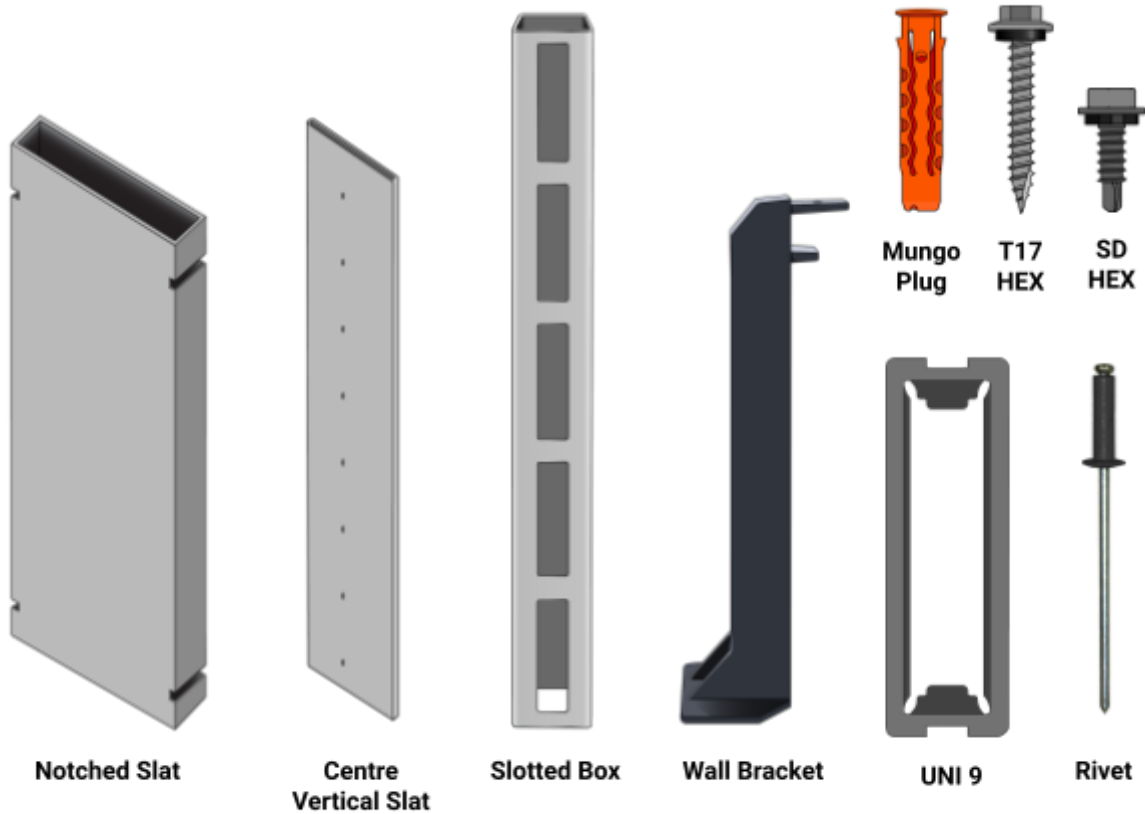


ITEM	DIMENSIONS (mm)	FINISH	MATERIAL	QTY
Slotted Box - Sides	Box 30x30x2	Powder Coated	Aluminium 6060 T5	2 / panel
Centre Vertical Slat Pre-Drilled	Slat 50x10x1.2	Powder Coated	Aluminium 6060 T5	Refer below to Window Sizes; Widths
UNI 9 Locking Plug	Fits 65x16 Slat	Black	Polypropylene	2 / slat
Wall Bracket 250mm	Standoff from wall to back of panel is 225mm	Powder Coated	Forged Aluminium	4 / panel
Double Notched Slats	65x16x1.4 Slat	Powder Coated	Aluminium 6060 T5	Length = Panel Width - 30mm QTY - Variable
FIXINGS	PURPOSE			QTY
SD Hex 10G-16x16, Seal, C4	Self Drilling Screw - screws Wall Brackets to Slotted Box			4 / panel
AS Rivets 4/12	Fixes Centre Vertical Slat (CVS) to horizontal slats			1 / slat
T17-Hex-14G-10x40, Seal, C4	Wood Screw fixes Wall Bracket to wall			4 / panel
Orange Mungo MQ 8x40	Use with Wood Screw if fixing to masonry / brick walls			4 / panel

PLEASE NOTE: PROFILES, SIZES AND FIXINGS MAY VARY DUE TO CUSTOM INSTALLATION APPLICATIONS

## CLIK'N'FIT® WINDOW PRIVACY SCREEN| SLAT

### TOOLS REQUIRED

1. Tape Measure
2. Hand Riveter with 3.2mm Nozzle
3. Electric Drill
4. 1/8" Drill Bit
5. Hex Driver

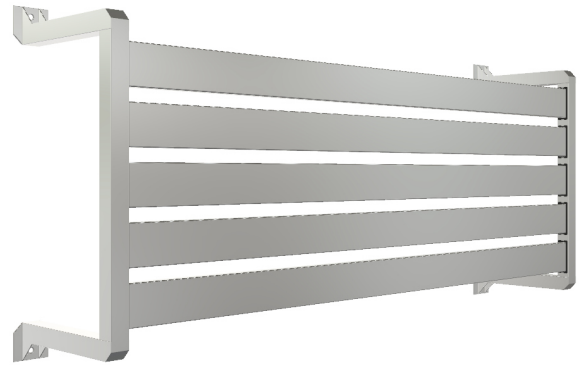

### ASSEMBLY

1. Insert UNI9 Locking Plugs into Slotted Box Sections if not already inserted.
2. Insert slats into one of the Slotted Box and push the slat through the Locking Plug until it touches the inside edge of the Slotted Box Section.
3. Insert slats into the other Slotted Box, start at the top and work your way down. Keep the rail at a slight angle so it is easier to engage the Locking Plug hole. The slat will slide out from the first Slotted Box Section until it engages the Locking Plug locking point.
4. For Screens over 2000mm wide a pre-drilled Centre Vertical Slat (CVS) will be provided. Ensure you fully **COMPRESS** the screen by pulling the sides in tight. Mark the middle of the screen top and bottom and centre the CVS in place. Drill through the top and bottom holes into the horizontal slat.

**IMPORTANT:** only drill through the rear of the horizontal slat & not all the way through to the face (approx 12-14mm)! Put your rivets in the 2 holes to hold in place but don't pop off yet. Drill the remaining holes.

5. Remove the CVS and **clean away any swarf**. Place the CVS back in place, insert all rivets and then pop the rivets off.
6. Attach the Wall Brackets to the Slotted Box (4) using Self Drilling Screws Hex 10-16x16 through the back of the Slotted Box approximately 5mm from the top of the Slotted Box for each bracket.

### INSTALLATION

1. Fully expand the panel so that locking plugs are engaged on both sides.
2. The distance between fixing holes is the width of the panel - 30mm.
3. Before fixing in place, hold the completed panel up against the window to decide where you would like it placed. Mark the hole position. Place the panel against the wall and screw in the first wall screw (T17-14-14x40). Square up the panel using a level and fix the remaining three bracket locations.
4. **NOTE:** The window screen can be compressed 10mm to 15mm if required when fitting but it cannot be expanded in width size.
5. Panel is now installed.
6. Wash down the panel to remove any swarf.
7. **IMPORTANT:** Do not use touch up paint for any minor scratches as it will fade at a different rate and be very obvious.