



# Pipe Set Installation Instructions

## Parts List: (pictures not shown to scale)

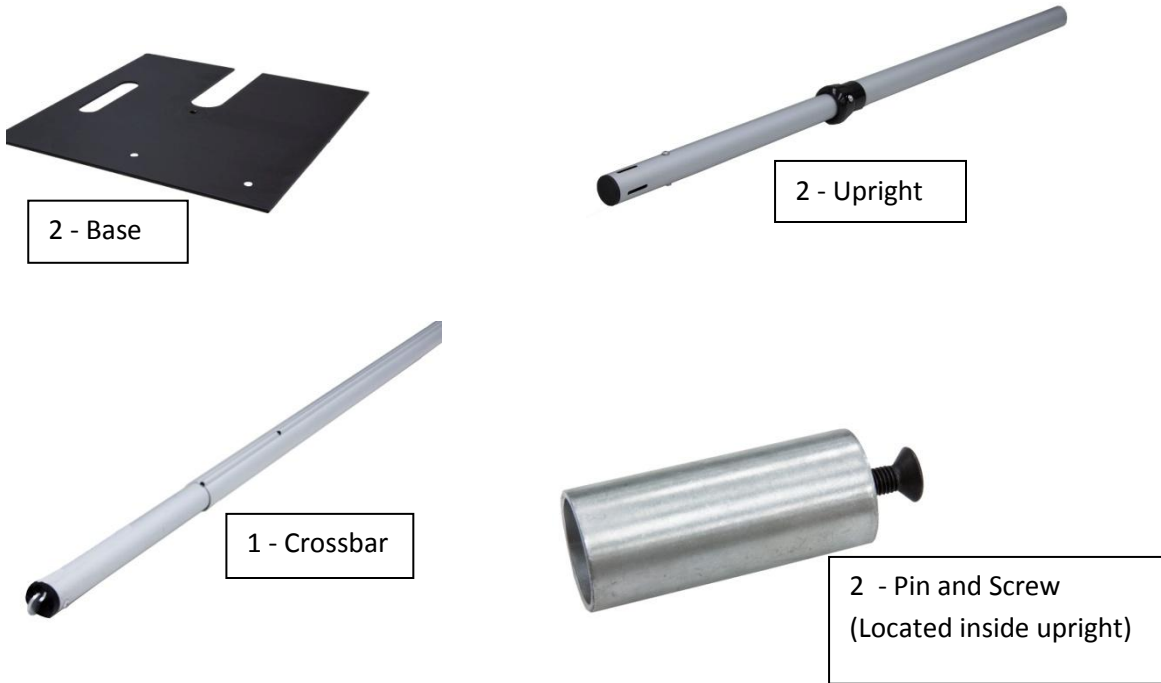

1. Remove the uprights from packaging. Remove the rubber cover at the bottom of the upright. Pin and Screw will be located inside of the upright once the rubber cover is removed.
2. Slide the pin and screw from inside the upright
3. Separate the screw from the bottom of the Pin by turning the screw counterclockwise using the proper tools. Tools not included.
4. Place the pin on top of the base and tighten the screw from the bottom by turning the screw clockwise. After tightening the screw, the pin should be firmly attached to the base.
5. Repeat same steps above for the 2nd upright and base.
6. Place upright onto the pin with the slotted side on top.
7. Repeat step #6 for 2nd upright

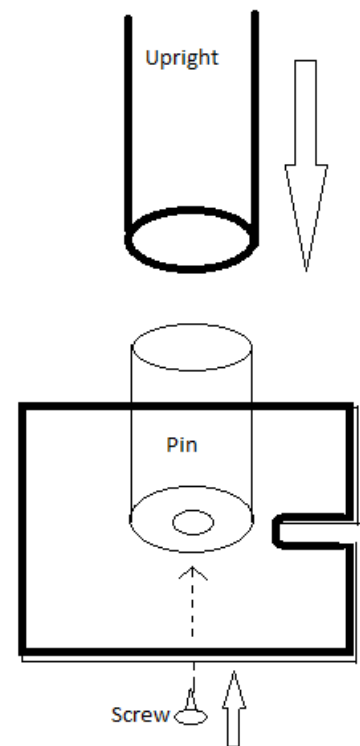

8. Now adjust the crossbar to the desirable width by pushing the button to increase or decrease the length. The crossbar will have a few preset lengths. Make sure the button snaps into place when setting the length of the crossbar.

9. Slip your drape or backdrop material into the crossbar



10. Once crossbar length is set, latch the hook of the crossbar into the slot of the first upright.



11. Again, latch the crossbar into the slot of the 2nd upright.

12. Adjust the height of the uprights by pushing the locking button up on the upright to increase or decrease the height. To lock, make sure the locking mechanism is down.