



CUTTING TILES

To make a cut, turn a tile upside down and place it on top of an installed tile. Push it so that the interlocking joint touches the wall or object.

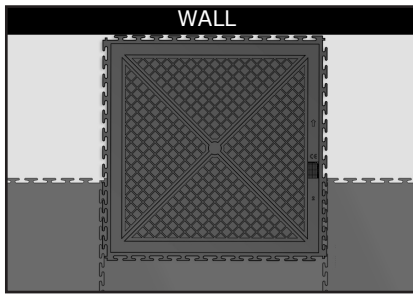

On every tile, there's a small square marker on each corner. Using the edge of this marker (tile underneath), mark a line on the tile you are cutting with pen. Do the same on both sides

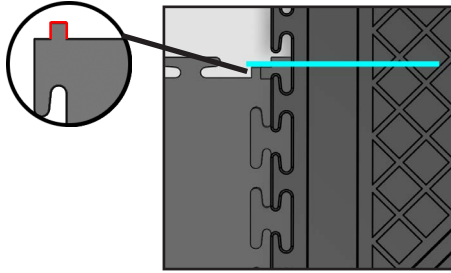

Join the two marks you made with a metal ruler to create a cutting line. Cut the tile using your preferred method. When you flip it over and connect the tile, it should fit with a 5mm gap between the edge of tile and the wall.

Continue until you have completed all of the cuts.

If you have any concerns about fitting your floor, you can contact us here:
+44 (0)1582 310 705 or info@gftcompany.com

FOR THE PERFECT FINISH

- + Leave a gap (minimum of a 5mm) between the tiles and any fixed point (walls and machinery)
- + Cover the 5mm expansion gap between the tiles and the walls with skirting
- + Undercut wood doorjamb and slip the tiles underneath
- + Use ramps where you enter or drive into the room
- + Glue the tiles if they are in direct sunlight (refer to Page 1 - Heat Expansion)

Dr. Schutz®

Cleaning

Give your floor a sweep on a regular basis and use a rotary scrubber dryer or flat head mop for routine maintenance. We recommend you use our cleaning kit which is available for purchase on our website.

In partnership with Dr Schutz, we have created a comprehensive and professional floor cleaning pack to help you get the best out of your new floor.

Each kit comprises of:

- 1 x 750ml bottle of Clean & Strip Heavy Duty Floor Cleaner
- 1 x 750ml bottle of Matt Floor Sealer
- 1 x 750ml bottle of R1000 Floor Cleaner for day to day cleaning
- 1 x Padmaster blue for use with Cleaning Pad and Microfibre Pad White
- 1 x Heavy Duty Green Cleaning Pad for use with the Clean & Strip
- 1 x Furniture Glider Pads.

