

Kit Includes:

2 Mandrel Bent Exhaust Pipe
4 U Bolt Clamps

**Tools Needed:**

Cutoff Tool/Sawsall/Pipe Cutter
14mm Socket/Wrench
Jack
Jack Stands
Wheel Chock


Khaos Motorsports Mid Muffler Delete Installation Instructions

Thank you for purchasing a mid muffler delete kit from Khaos Motorsports! These instructions will fit for most Models with variations in mufflers. Khaos Motorsports will not be at fault for any damages or injuries. Professional installation is recommended.

If you have any questions please send them to sales@khaosmotorsports.com.

Place wheel chocks around tires and engage parking brake. Raise vehicle and place jack stands at secure points. **DO NOT GET UNDER VEHICLE WITHOUT JACKSTANDS IN PLACE!**

1. On front of drivers side muffler measure and mark 4" from outermost point of muffler.
2. On rear of drivers side muffler measure and mark 1" from outermost part of muffler.
3. Hold driver side delete pipe up to muffler to ensure marks are in correct spot, if not adjust marks.
4. On front of passenger side muffler measure and mark 4" from outer most part of muffler.
5. On rear of passenger side muffler measure 1" from outer most part of muffler.
6. Hold passenger side delete pipe up to muffler to ensure marks are in correct spot, if not adjust marks.
7. After verifying cut marks are in correct spot, cut out stock muffler.
8. Slide one clamp onto each existing pipe on vehicle.
9. Place delete where stock muffler was, sliding the cut ends of the exhaust inside.
10. Ensure proper fitment and overlap of delete pipes and tighten clamps
11. Start vehicle, smile, and check for leaks.
12. Remove from jack stands, start car and do burn outs.

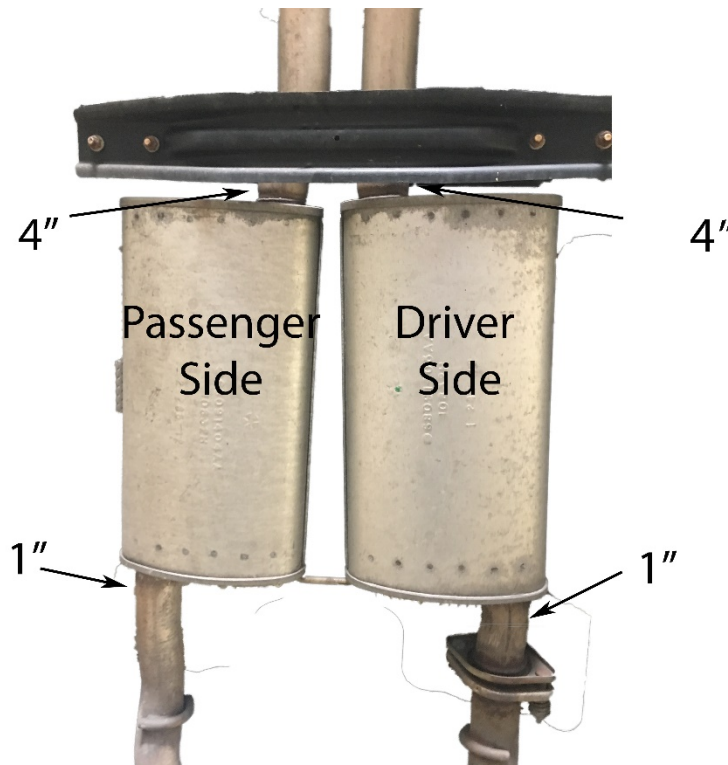

**YouTube
Video
Link**

